




INSTALLATION INSTRUCTIONS CATALOG NO. 1204

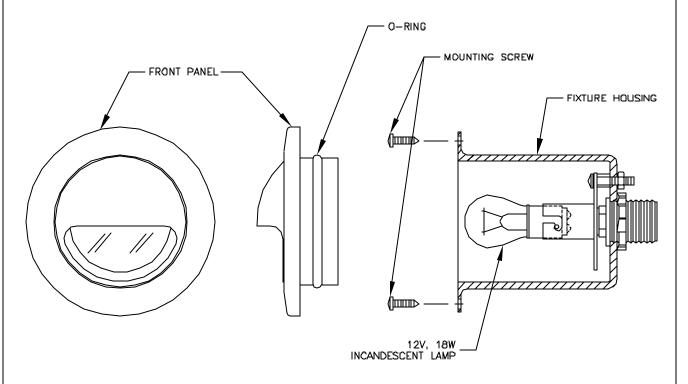

WIRING AND INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN ONLY, TURN POWER OFF BEFORE INITIAL INSTALLATION, SERVICING, MAINTENANCE, RELAMPING.

FIXTURES SHOULD ALWAYS BE INSTALLED IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRIC CODES.

THIS IS A 12V FIXTURE, A REMOTE TRANSFORMER IS REQUIRED. FOR USE WITH MAXIMUM 25A, 15V POWER UNITS ONLY,

USE UL LISTED WATERPROOF WIRE CONNECTORS: CAT NUMBER KING-T6, MANUFACTURED BY KING TECHNOLOGY, INC. OR EQUIVALENT.

NOTE:

DO NOT INSTALL THIS FIXTURE IN ANY COMBUSTIBLE MATERIALS.

INSTALLATION INSTRUCTIONS:

- 1. Cut out 3" diameter hole to install fixture.
- 2. Connect wires from the fixture to 12V power source with wire nuts provided.
- 3. Recess fixture housing into precut hole. Secure the fixture to the wall with screws provided. <u>Important</u>: Screws must be installed properly for fixture front panel to sit firmly.
- 4. Push fixture front panel in place.

RELAMPING:

WARNING:

Use only 12V 18W incandescent lamp, ANSI code: 1142.

Check package and fixture labeling carefully for proper lamp type and wattage.

To relamp:

Pull front panel out. Replace lamp by lightly twisting it counterclockwise and pulling it out. Inspect O-rings. Be sure that front panel seats on O-rings snugly for a watertight seal.

> Cooper Lighting - Lumiere reserves the right to make design changes without notice.

Γ	Α	03-05-02	PRODUCTION RELEA	SE	MCN
E	REV. DATE DESC		DES	CRIPTION	2142
-	INSTALLATION INSTRUCTIONS			Lumière 2009-1449-1450 Calle Suerte 1250 Calle Suerte 1250 Calle Suerte 1250 1250 1250 1250 1250 1250 1250 1250	
	NDO	^{EL} 120	4	0W9 No. 8797	REV. A
	DFTS	MN ELEN	A KUSHINSKAYA	SHEET 1 OF 2	