




STEP 1

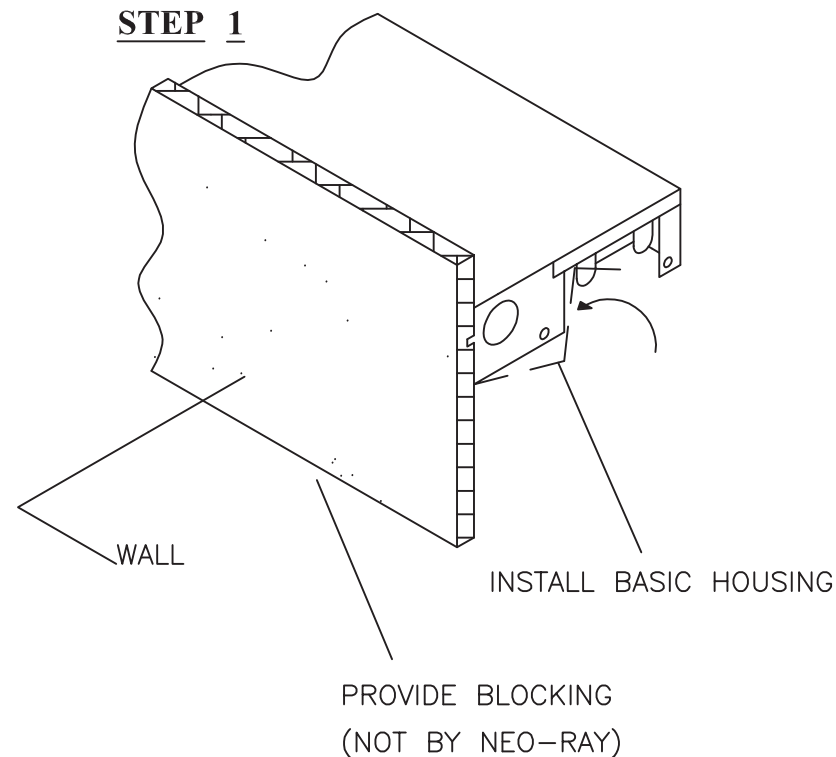


STEP 2

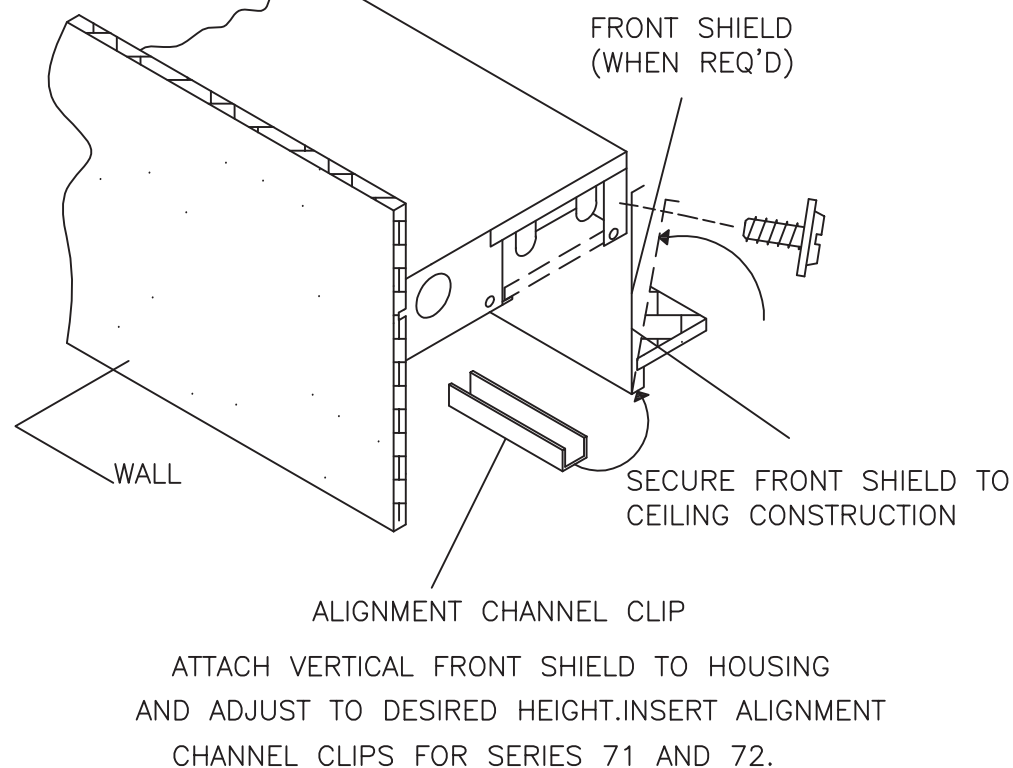

STEP 3

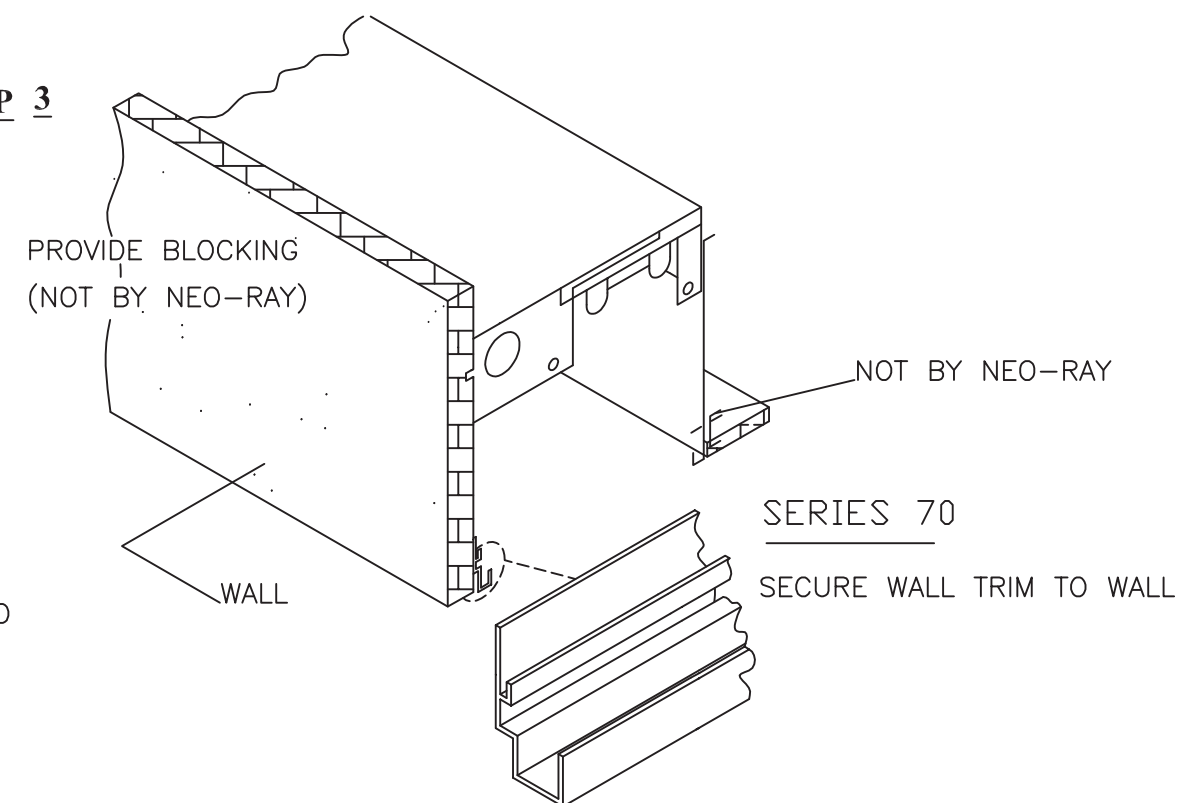


STEP 4

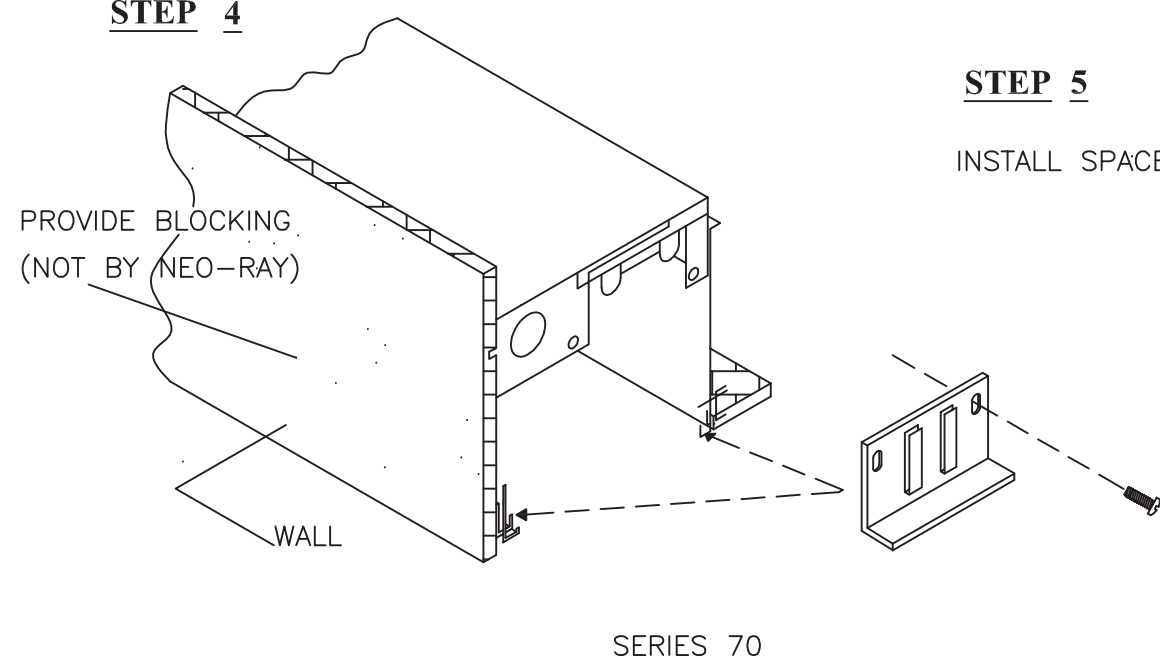


STEP 5

INSTALL SPACER BLADE AT EVERY ALIGNMENT CLIP.

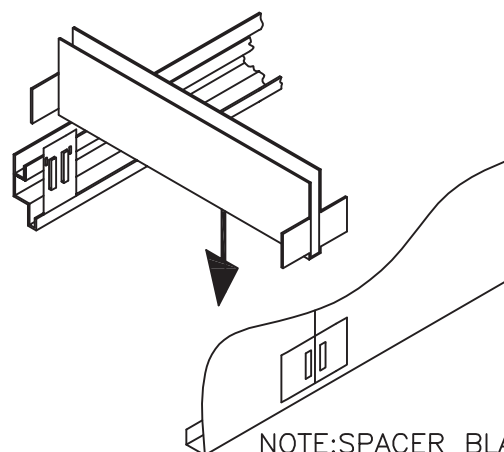

STEP 6

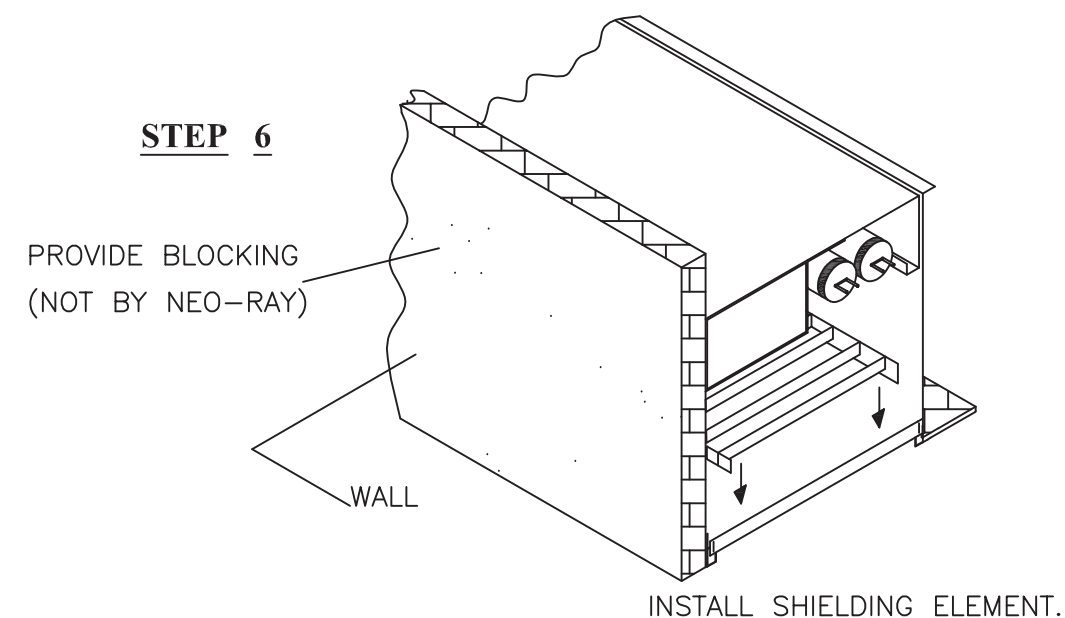

SECURE ALIGNMENT CLIP TO FRONT SHIELD
AND WALL TRIM.
CENTERED ON JOINT LINE AND AT CENTER OF
6FT. AND 8FT. FIXTURES AND AT LAMP ENDS OF
5FT. AND 7FT. FIXTURES.