



INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T5 WITH SINGLE STEM.

TO INSTALL FIXTURE, CONTRACTOR HAS TO HAVE THE FOLLOWING PARTS:

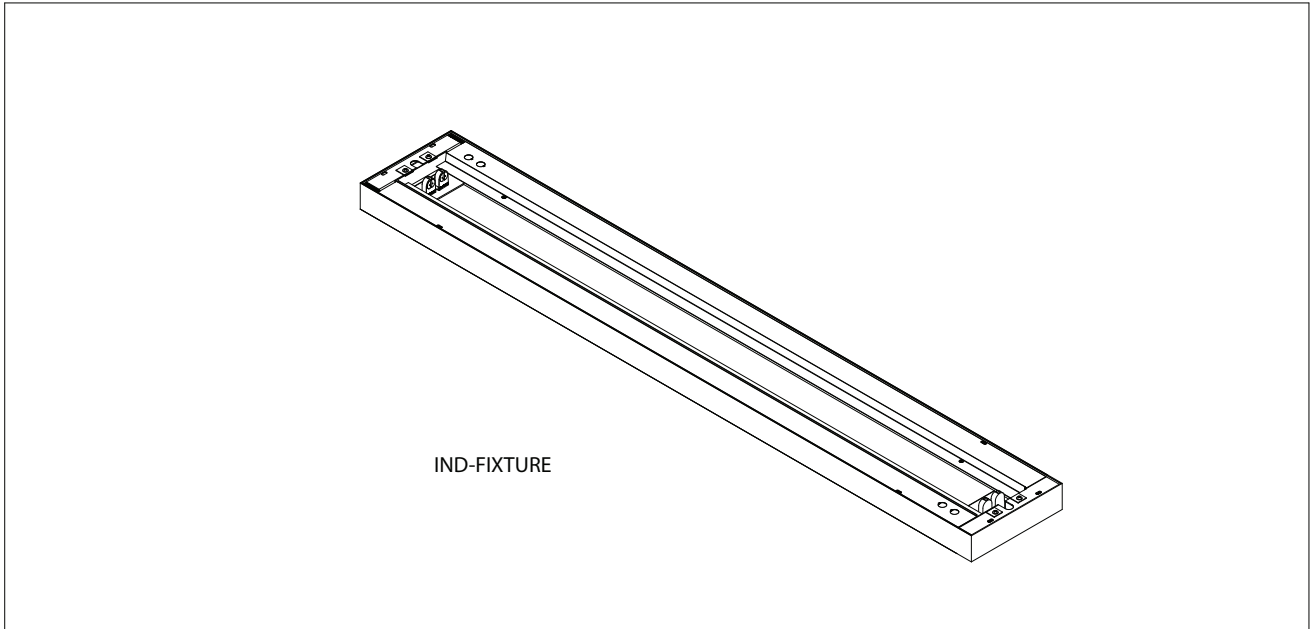


A) "IND" - INDIVIDUAL FIXTURE

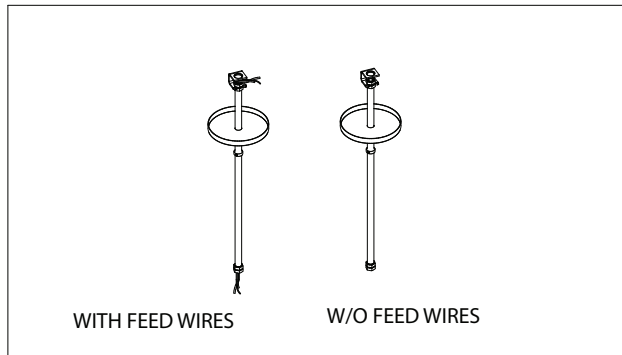

B) SINGLE STEM SUBASSEMBLYS

INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T5 WITH SINGLE STEM.


STEP 1: INSTALL MOUNTING HARDWARE
ACCORDING TO MOUNTING PLAN

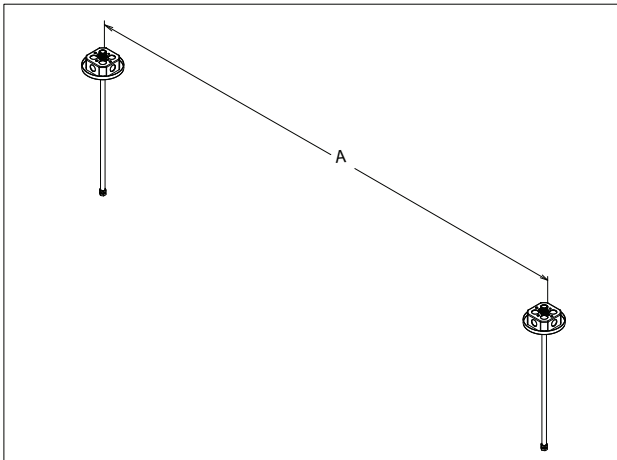


NOTE: J-BOX IS NOT PROVIDED BY NEO-RAY

POWER MUST BE OFF BEFORE THIS STEP!


STEP 3: BRING FIXTURE CLOSE TO STEM.

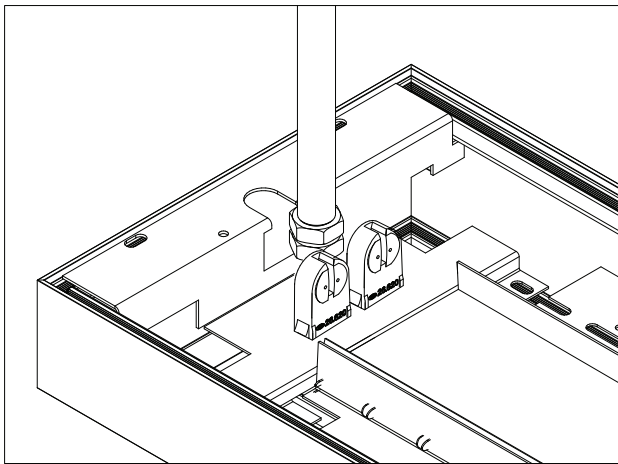

STEP 2: REMOVE BALLAST COVERS FROM FIXTURES
AND STEM COVERS AT ENDS OF FIXTURE.

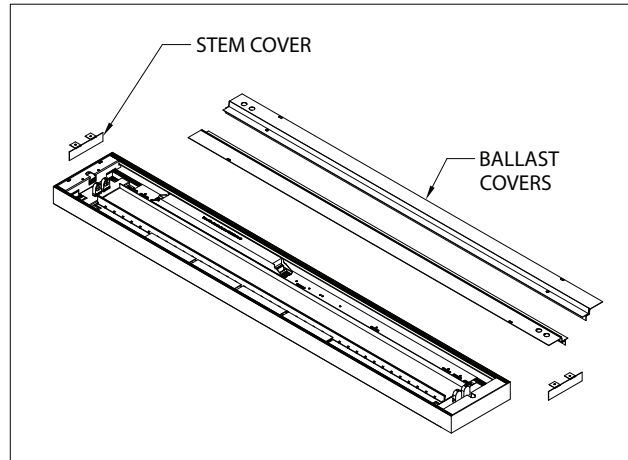

STEP 4: INSERT STEM ONTO SLOT ON MOUNTING
BRACKET AND SCREW NUTS ON STEM.

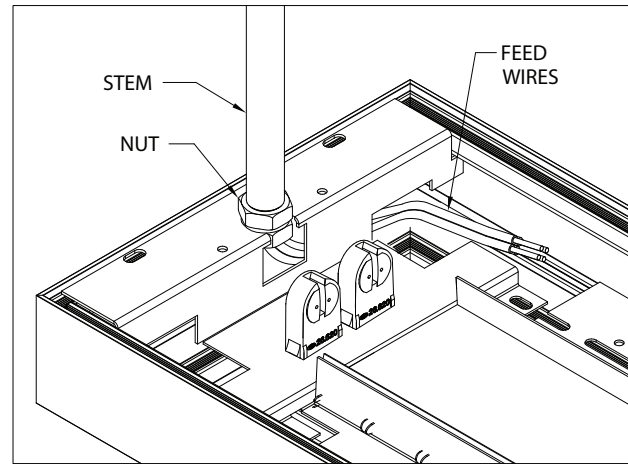

NOTE: IF THIS STEM HAS FEED WIRES AT TIME OF STEPS 5 AND 6 PULL FEED WIRES INTO BALLAST AREA.

STEP 5: MAKE ELECTRICAL WIRE CONNECTION AT FEED CORD.

STEP 6: INSTALL BALLAST COVERS

STEP 7: INSTALL LAMPS

