



INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T8 WITH "Y" HANGER AND SINGLE CABLE


TO INSTALL FIXTURE RUNS, CONTRACTOR HAS TO HAVE THE FOLLOWING PARTS:

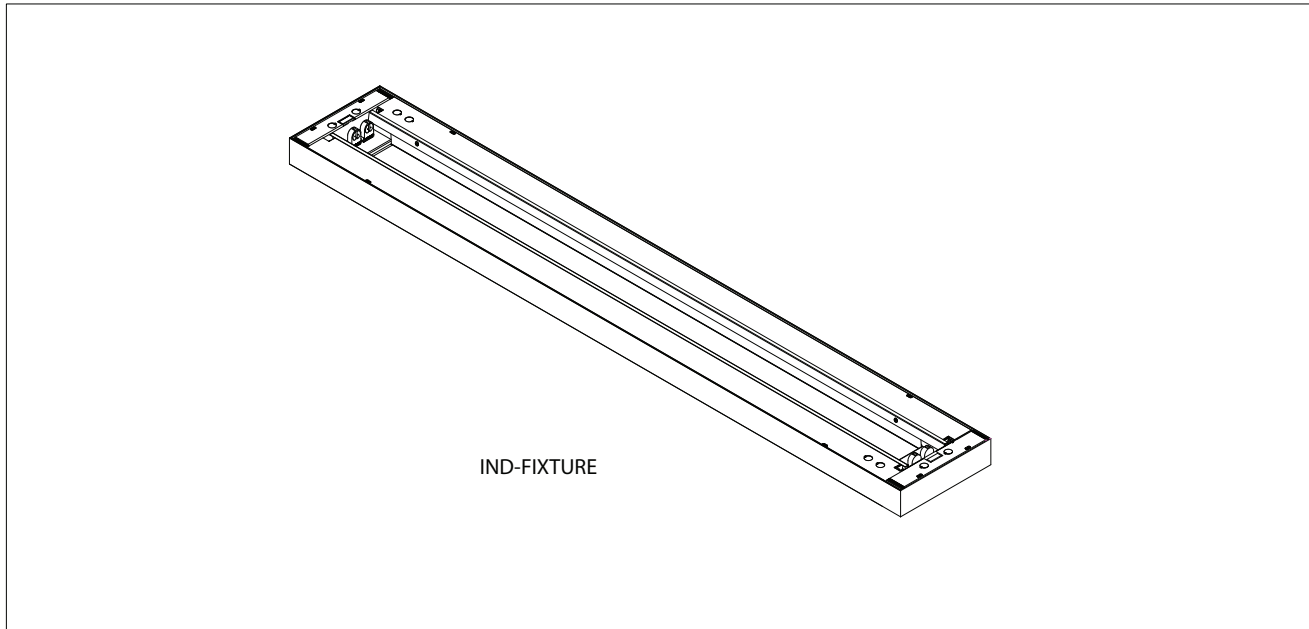

A) "IND" - INDIVIDUAL FIXTURE.

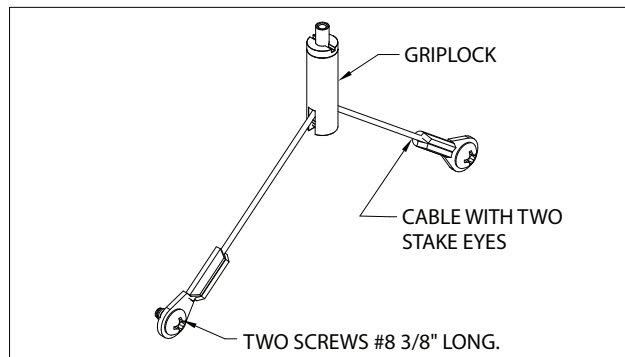


B) TWO "Y" CABLE SUBASSEMBLYS

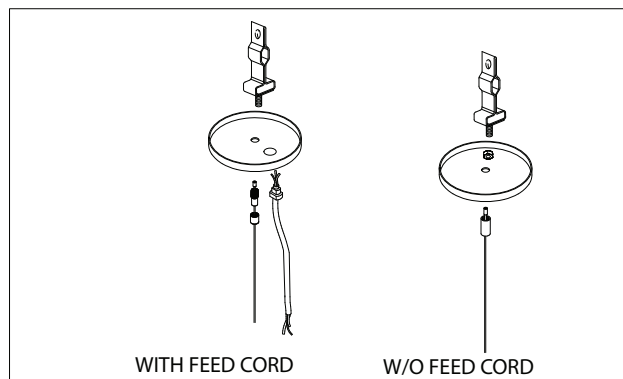


C) MOUNTING HARDWARE

INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T8 WITH "Y" HANGER AND SINGLE CABLE


STEP 1: INSTALL MOUNTING HARDWARE ACCORDING TO PLAN

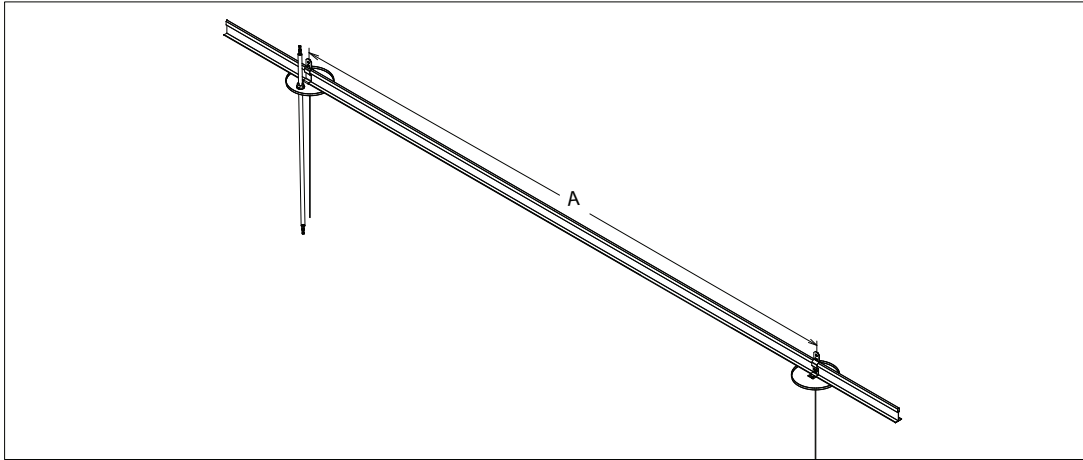


STEP 2: REMOVE BALLAST COVERS FROM FIXTURES

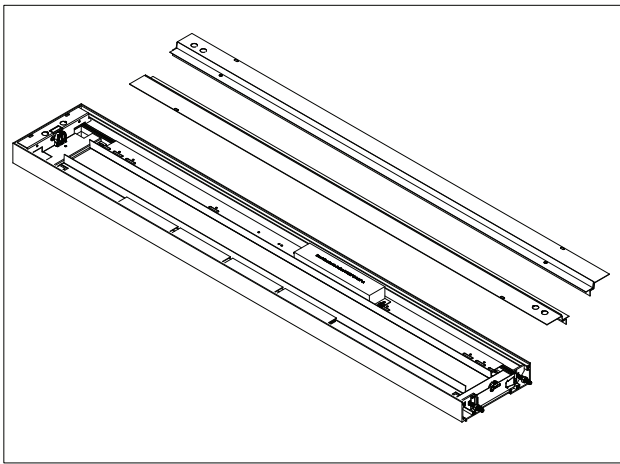

STEP 3: INSTALL "Y" CABLE SUBASSEMBLIES AT ENDS OF INDIVIDUAL FIXTURES.

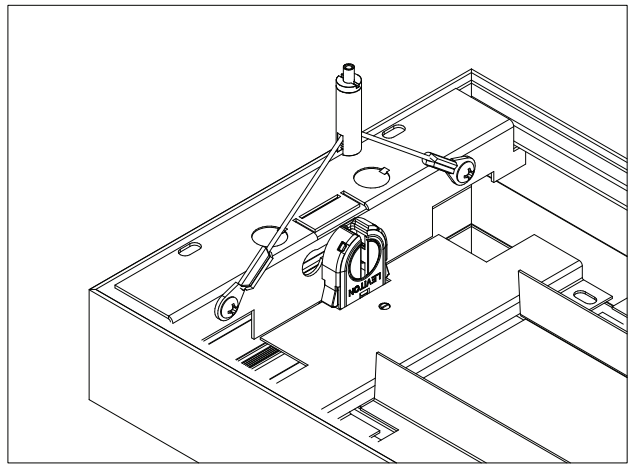


STEP 4: INSTALL "IND" FIXTURE WITH TWO AIRCRAFT CABLES.

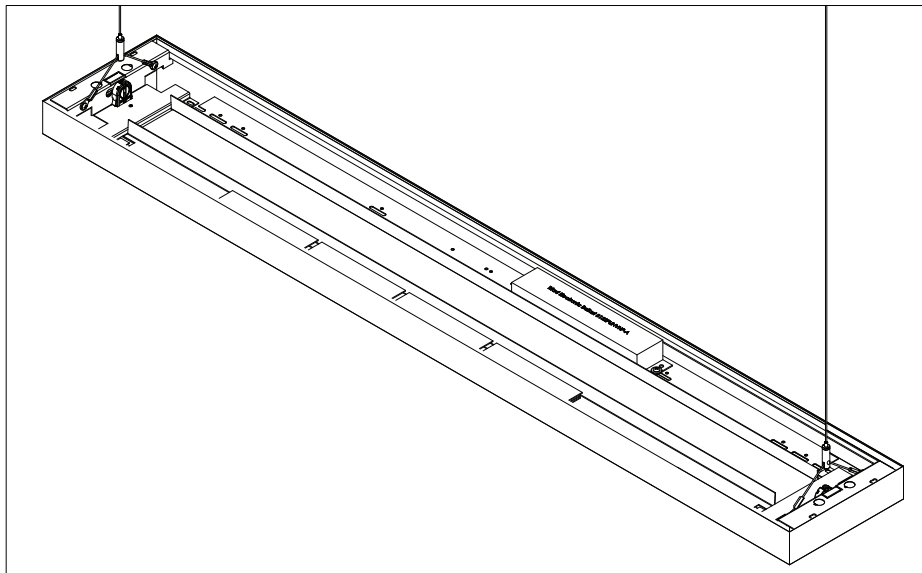

INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T8 WITH "Y" HANGER AND SINGLE CABLE

POWER MUST BE OFF BEFORE THIS STEP!


STEP 5: INSERT FEED CORD INTO FEED HOLE
 AND PULL FEED CORD INTO BALLAST AREA

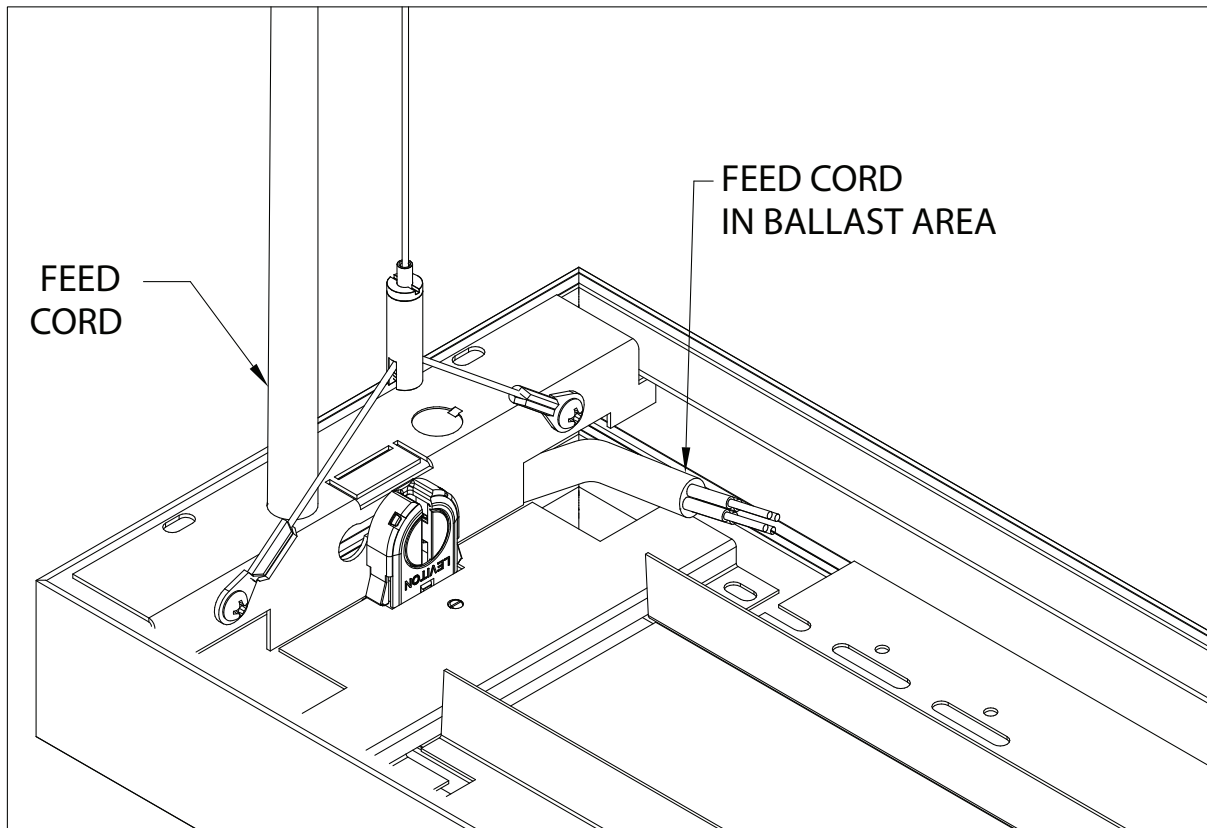

STEP 6: MAKE ELECTRICAL WIRE CONNECTION AT FEED CORD.

STEP 7: INSTALL BALLAST COVERS

STEP 8: INSTALL LAMPS

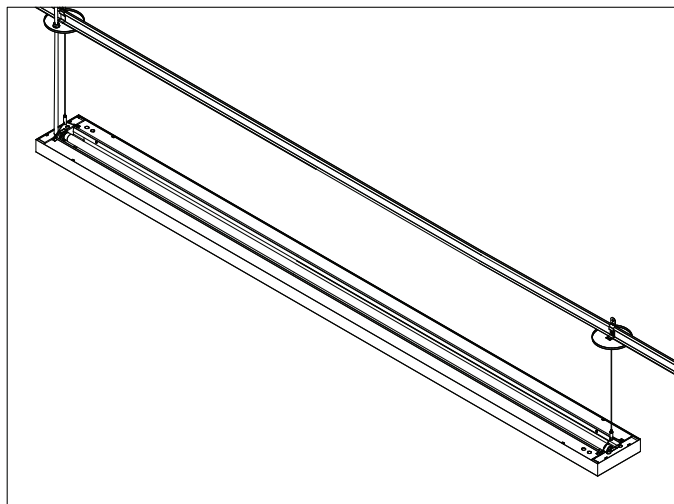

STEP 9: ALIGN FIXTURE TO HAVE IT STRAIGHT AND LEVEL BY ADJUSTING AIRCRAFT CABLE.