



RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SPACKLE FLANGE (DS)


WARNING: Before cutting into drywall, locate all power conduits and cables.

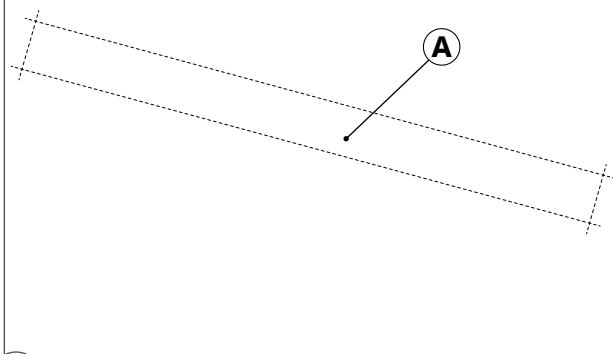


1 Ensure that the power to the fixture's circuit is turned off. Make an opening (A) in drywall according to the dimensions on the shop drawings.

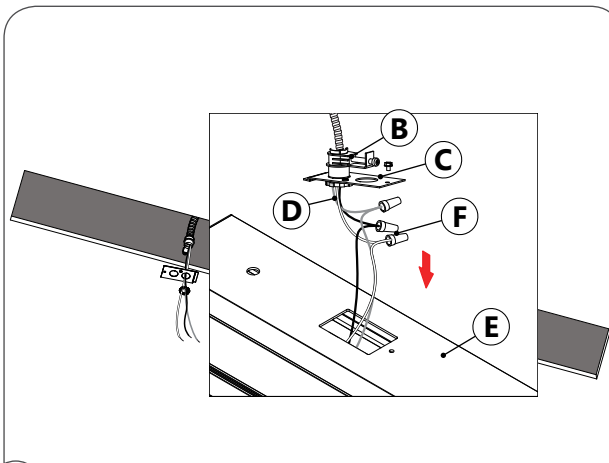


2 Install BX cable connector (B) through the power plate (C). Wire BX cable wires (D) to fixture (E) using the wire nuts (F). Push connected wires into fixture (E). Fasten power plate (C) to fixture (E).

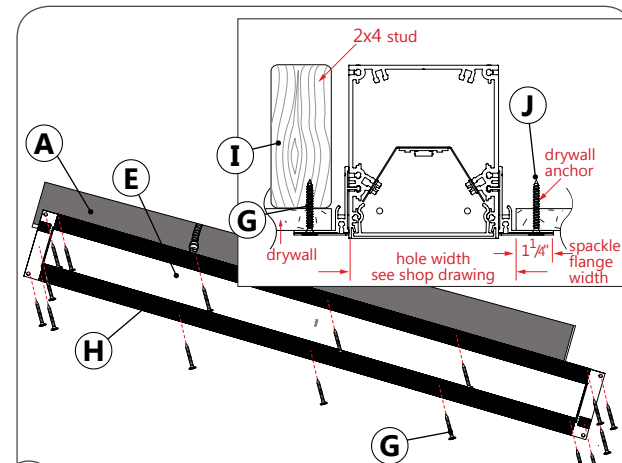


3 Align fixture to the pre-cut drywall opening (A) and insert fixture (E). Fasten fixture (E) to the drywall by drilling screws (G) through the spackle flange (H). Wood blocking (I) or drywall anchors (J) must be used to reinforce the screws (G) to the drywall.

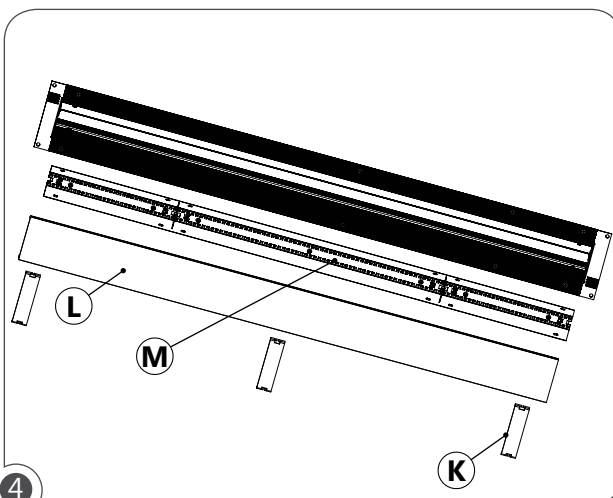

4 Remove the flange spacers (K) and optics (L) to gain access to LED cartridge. Remove LED cartridge (M) if installed.

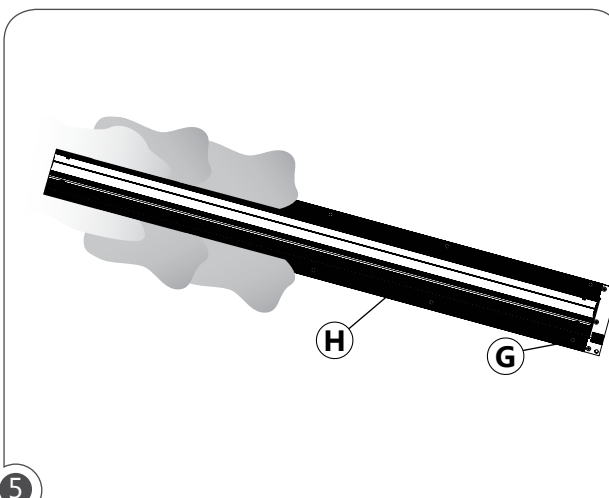


5 Plaster and sand over the spackle flange (H) and screws (G) to create a smooth finish.

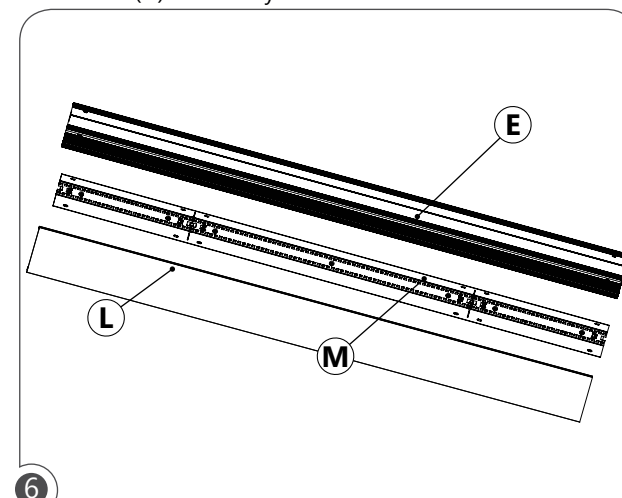


6 **CLEAN THE INSIDE OF THE FIXTURE WITH DRY CLOTH FORM ANY PLASTER OR DUST PARTICLES.**

Re-install the LED cartridge (M) and optics (L) in the fixtures (E). Power can now be turned on.


RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SPACKLE FLANGE (DS)

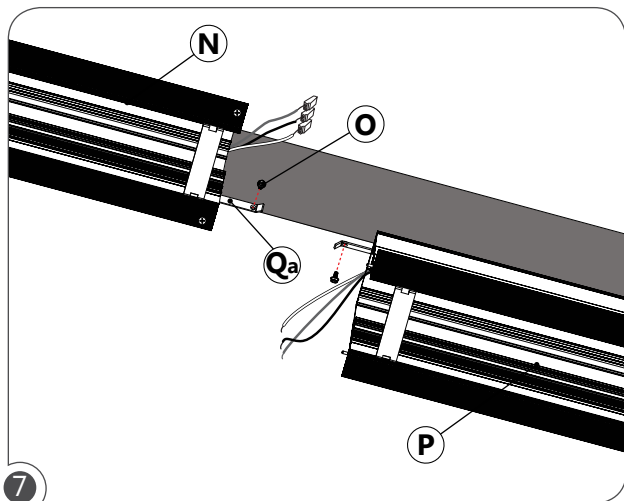


7 **CONTINUOUS ROW:** Follow steps 1 to 3 for the first section (N) of the fixture. Remove the screws (O) on both sections (N) and (P) joining brackets (Qa) and put away for later use.

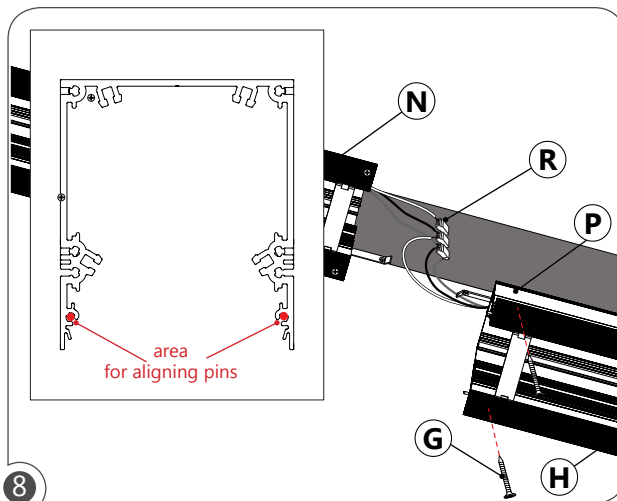


8 Make wire connections with quick-wire connectors (R) between the joining sections (N) and (P). Slide the second section (P) in place using the aligning pins on the section extrusion into their allocated area. Fasten the second section (P) to the drywall by drilling screws (G) through the spackle flange (H).

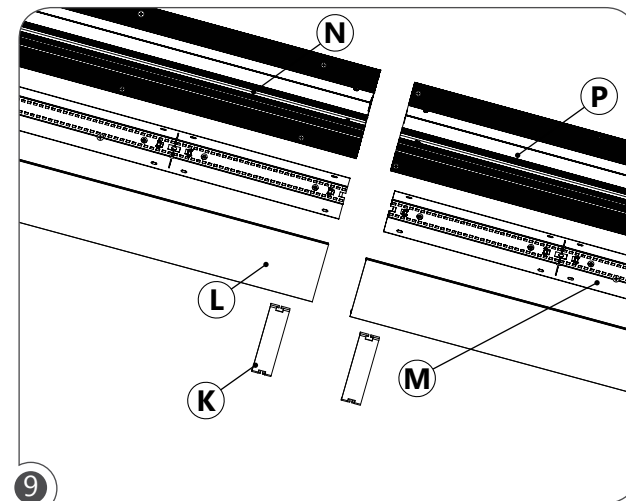

9 Remove the flange spacers (K) and optics (L) to gain access to LED cartridges (M) from both sections. Remove LED cartridges (M) if installed.

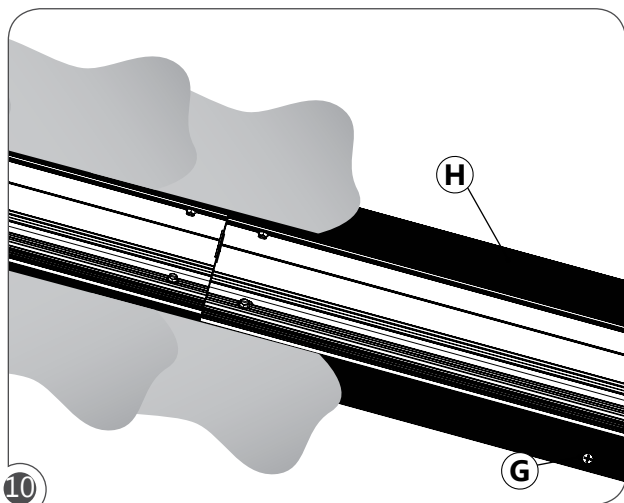

10 Plaster and sand over the spackle flange (H) and screws (G) of both sections to create a smooth finish.

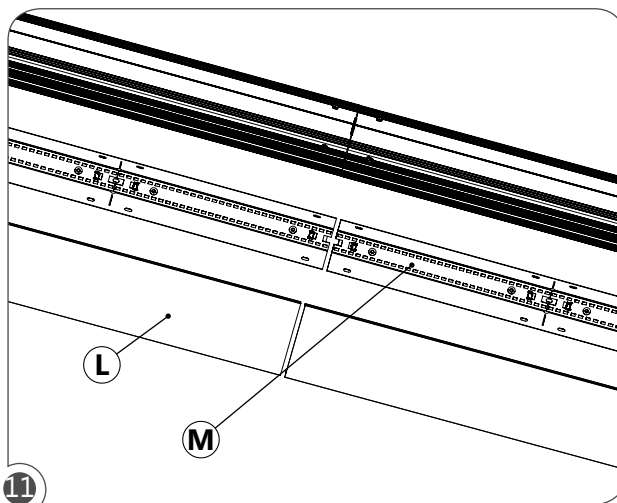

11 **Follow steps 7 to 10 for the next sections.** Re-install the LED cartridge (M) and optics (L) at the end of the installation process.

