








RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SLIP-THROUGH BRACKET (DB)

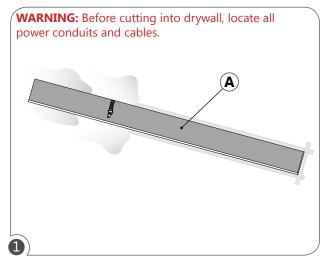


Ensure that the power to the fixture's circuit is turned off. Cut hole (A) in drywall according to the dimensions on the shop drawings. Tape and finish around the edges.

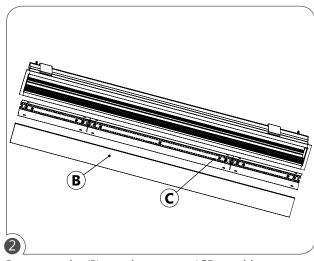


Remove optics (B) to gain access to LED cartridge. Remove LED cartridge (C) if installed.

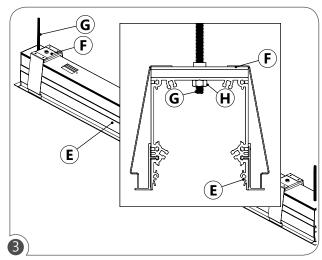

Place the slip through bracket (F) on both sides of the fixture (E). Insert the 1/4-20 screw (G) and nut (H) through and screw to the slip through bracket (F), do not tighten the screw (G) until the fixture (E) is installed into the cut hole.

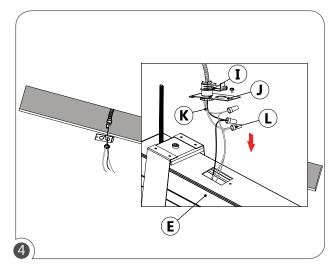


Install BX cable connector (I) through the power plate (J). Wire BX cable wires (K) to fixture (E) using the wire nuts (L). Push connected wires into fixture (E). Fasten the power plate (J) to fixture (E).

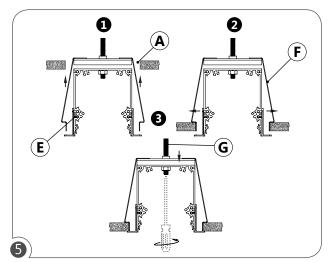

(1) Push fixture (E) through hole in drywall (A).

- (2) Bracket arms (F) will snap out.
- (3) Tighten the screw (G) until fixture is tight to ceiling.

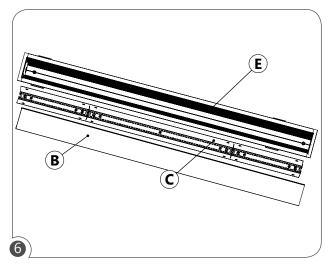

Re-install the LED cartridge (C) and optics (B) in the fixture(E). Power can now be turned on.

FILE NAME:BMR-BBR-B6R.DB.INST October 1, 2015



1.800.263.AXIS [T] 514.948.6272 514.948.6271 www.axislighting.com




WARNING: RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Page: 1 / 2




RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SLIP-THROUGH BRACKET (DB)

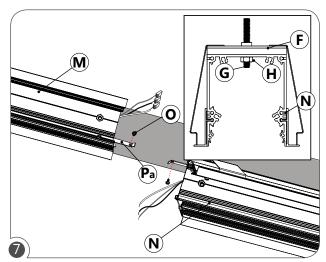

CONTINUOUS ROW: Follow steps **1** to **6** for the first section (M) of the fixture and follow steps 2 to 3 for the second section (N). Remove the screws (O) on both sections (M) and (N) joining brackets (Pa) and put away for later use.

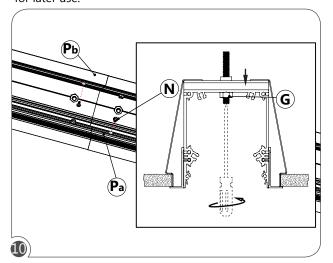


Secure joinning brackets (Pb) and (Pa) to each other using the screws from step . Tighten the screw (G) until fixture is tight to ceiling.

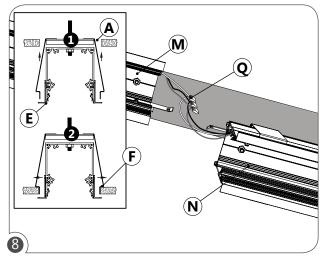


Make wire connections with quick-wire connectors (Q) between the joining sections (M) and (N).

- (1) Push fixture (E) through hole in drywall (A).
- (2) Bracket arms (F) will snap out.

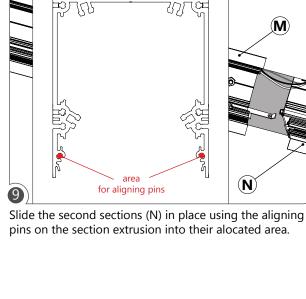

pins on the section extrusion into their alocated area.

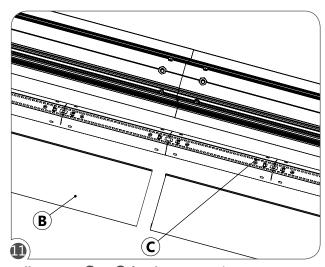

Follow steps **(1)** to **(1)** for the next sections. Re-install the LED cartridge (C) and optics (B) at the end of the installation process.

FILE NAME:BMR-BBR-B6R.DB.INST October 1, 2015



1.800.263.AXIS [T] 514.948.6272 514.948.6271 www.axislighting.com



