


Installation Instructions

Stainless Steel Corner Guard

Please read all instructions before installing corner guard.

Important

1. Acclimate materials 24 hrs before installation. Maintain temperature controlled environment after installation
2. Install in accordance with manufacturer's installation instructions. Failure to do so will void the warranty.

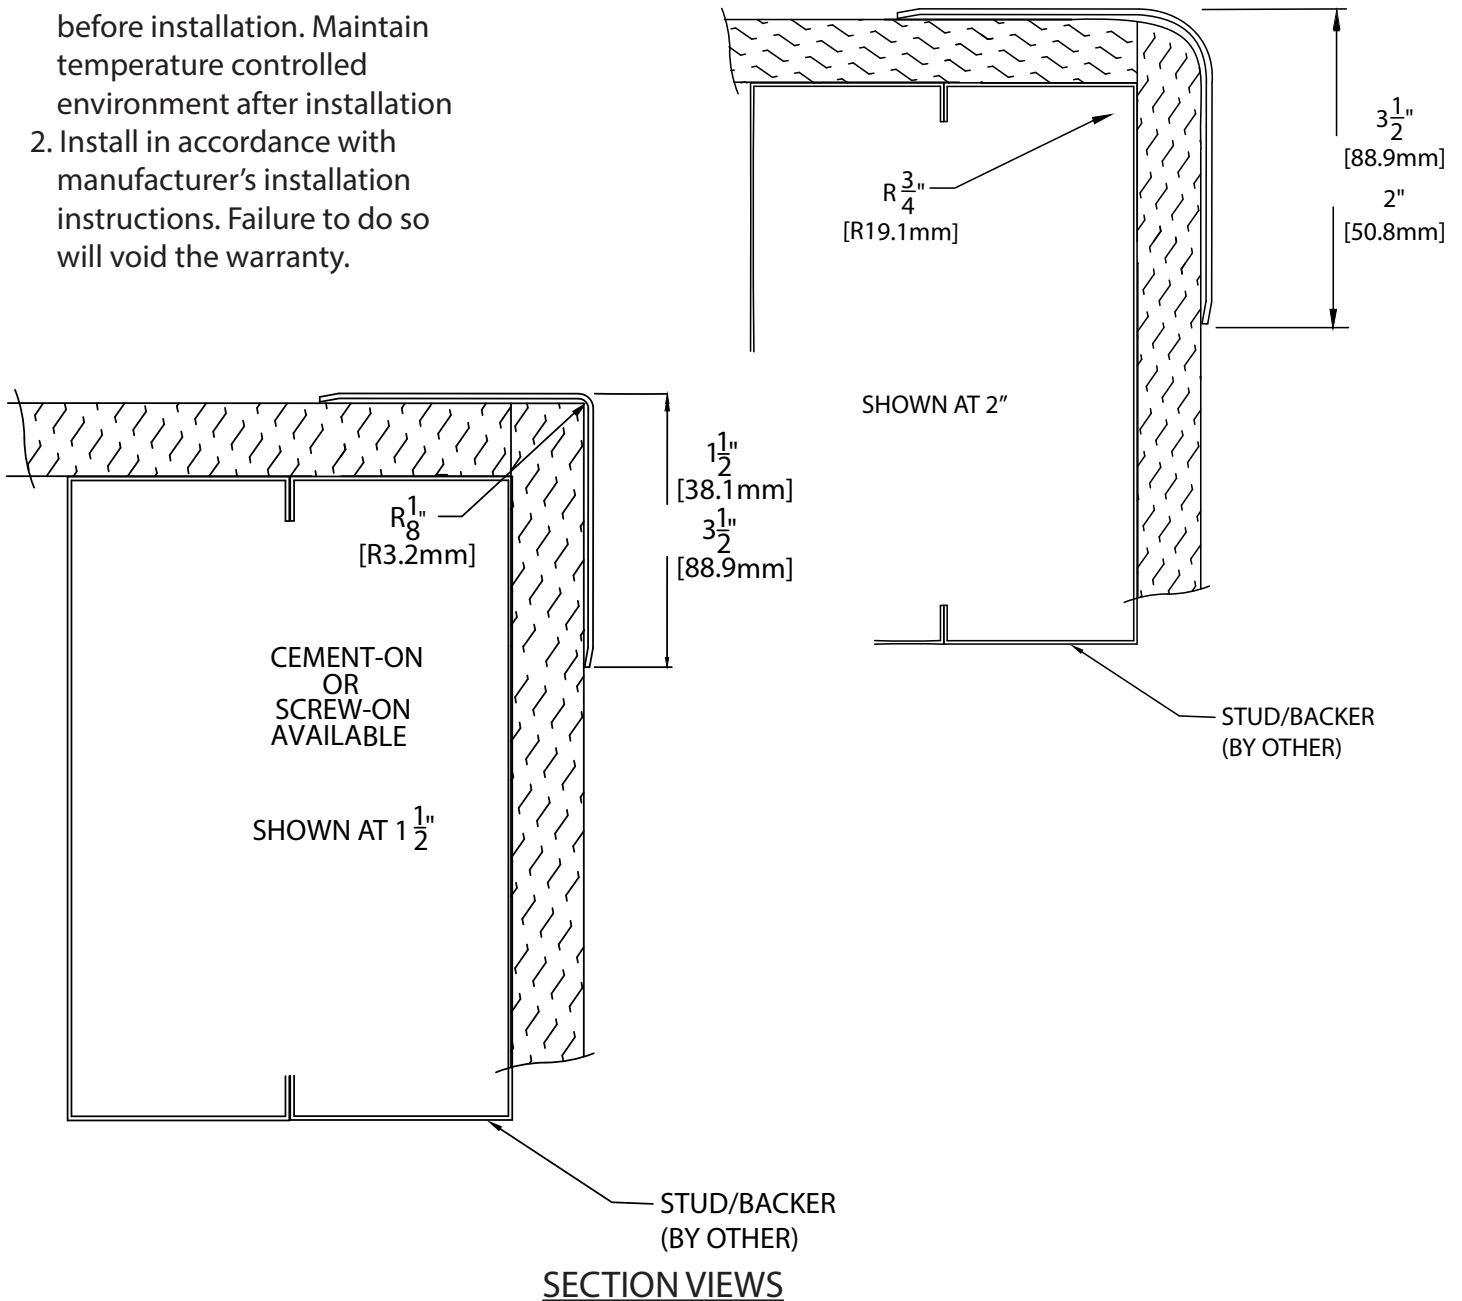

Recommended tools

Safety Glasses, Tape Measure, Level, Power Drill, 1/4" Socket, Drill Bits - 1/4" masonry (concrete/concrete block), Power Miter Saw, 10" Blade with 60-80 Carbide Tipped Teeth

IPC.439/REV.6

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®


DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®

Installation Instructions

Stainless Steel Corner Guard

Please read all instructions before installing corner guard.

Components and Fasteners

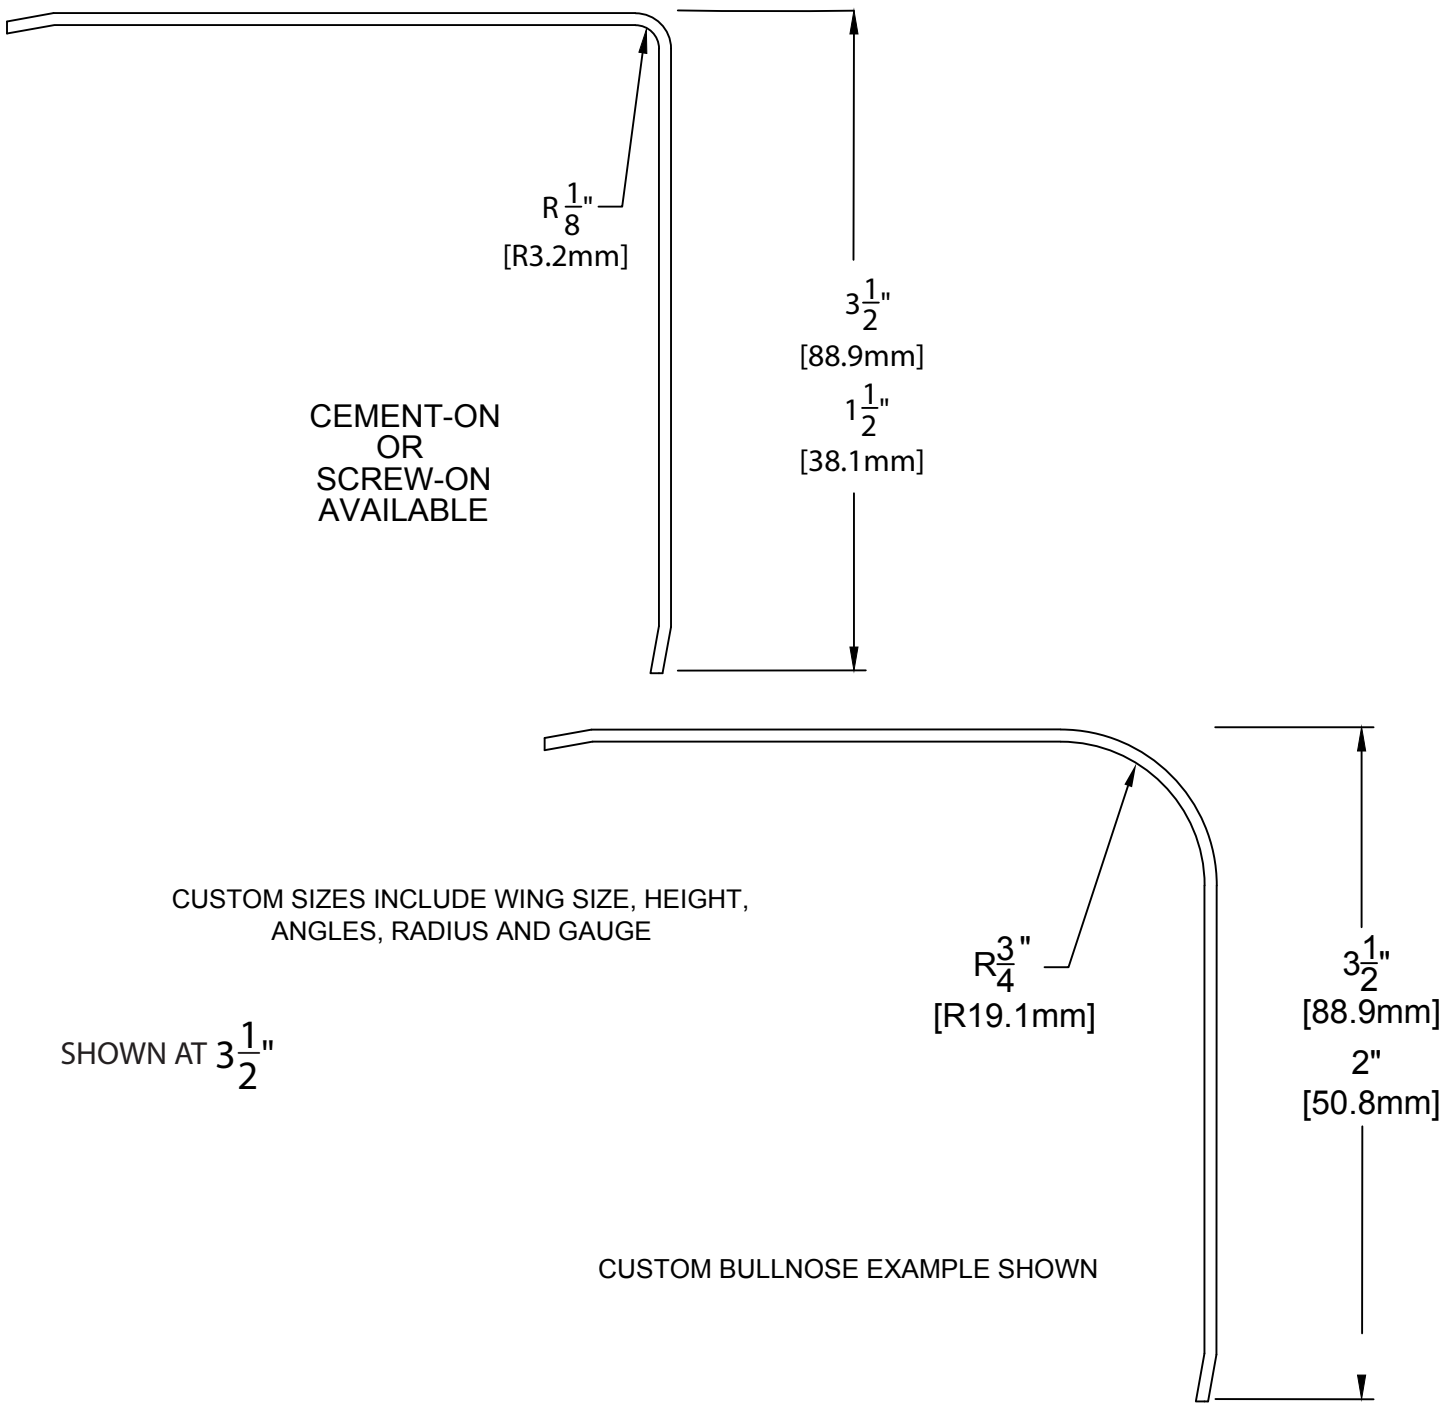

Material	Specified Fasteners	Inpro Part #
SS-CG	#6 x 1 1/4" Phillips Flat Head Self Tap SS Screw	HW72
	1/4" Plastic Alligator anchor	HW38
SS-CG GOLD TITANIUM	#6 x 1 1/4" Phillips Flat Head Gold Plated Self Tap SS Screw	HW71
	1/4" Plastic Alligator anchor	HW38

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®


DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®

Installation Instructions

Stainless Steel Corner Guard

Please read all instructions before installing corner guard.

Exploded View assembly

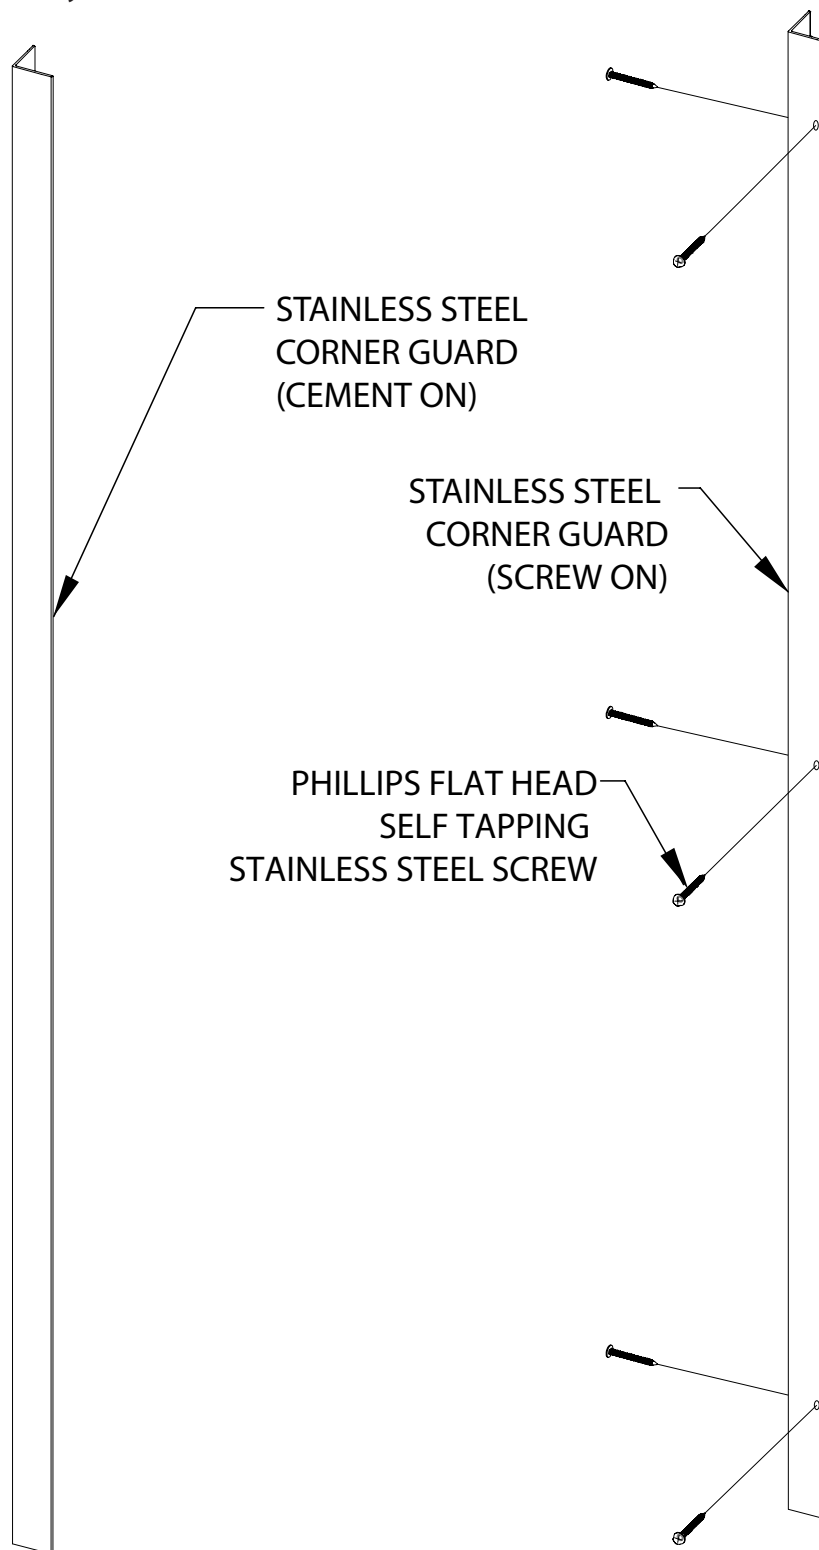

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC® •

DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®

Installation Instructions

Stainless Steel Corner Guard

Please read all instructions before installing corner guard.

FIG. 1a

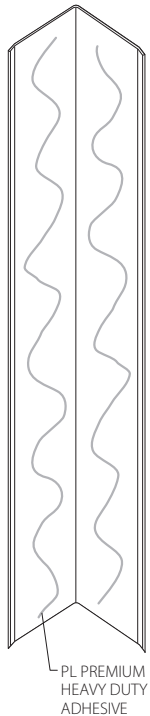


FIG. 1b


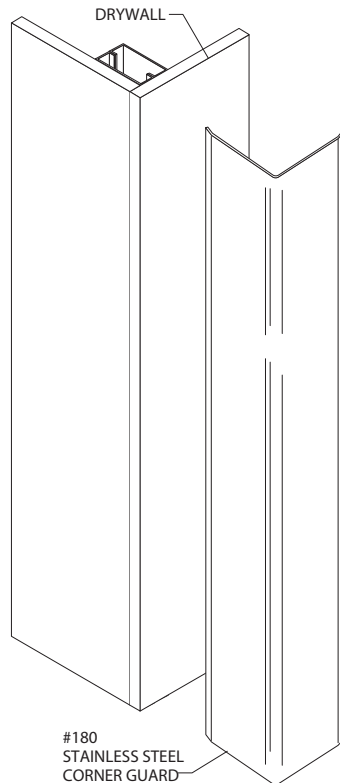


FIG. 2

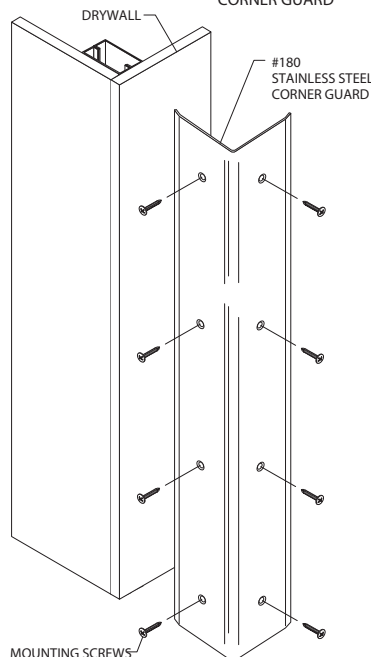

Please read all instructions before installing corner guards.

Material must be stored, installed and used in environmentally controlled conditions.

1. The wall surface that the corner guards are to be applied must be dry and free of dirt, dust, oil, loose pain, wax and grease.

2. CEMENT-ON INSTALLATION

Apply a bead of PL Premium Heavy Duty Adhesive in a zig-zag pattern over the back of each wing of the corner guard. See Figure 1a. Position corner guard on the wall and apply pressure until a tight fit is achieved. Remove the protective plastic coating from the exposed surface of the corner guard. See Figure 1b.

3. SCREW-ON INSTALLATION

Attach corner guard to wall with provided hardware. Remove the protective plastic coating from the exposed surface of the corner guard.

Note for concrete installation: Transfer the location of the mounting holes to the wall. Drill marked holes on wall using a 1/4" (6mm) drill bit and position Alligator anchors into holes. Mount corner guard on wall with provided hardware and tighten to secure.

See Figure 2.

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®

DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®