

Installation Instructions

Please read all instructions before installing door protector.

Door Knob/Lever Protectors:




Models 411, 412, 413L, 413R

Important

1. Acclimate materials 24 hrs before installation. Maintain temperature controlled environment after installation.
2. Install in accordance with manufacturer's installation instructions. Failure to do so will void the warranty.

Section View

Model 412 Shown

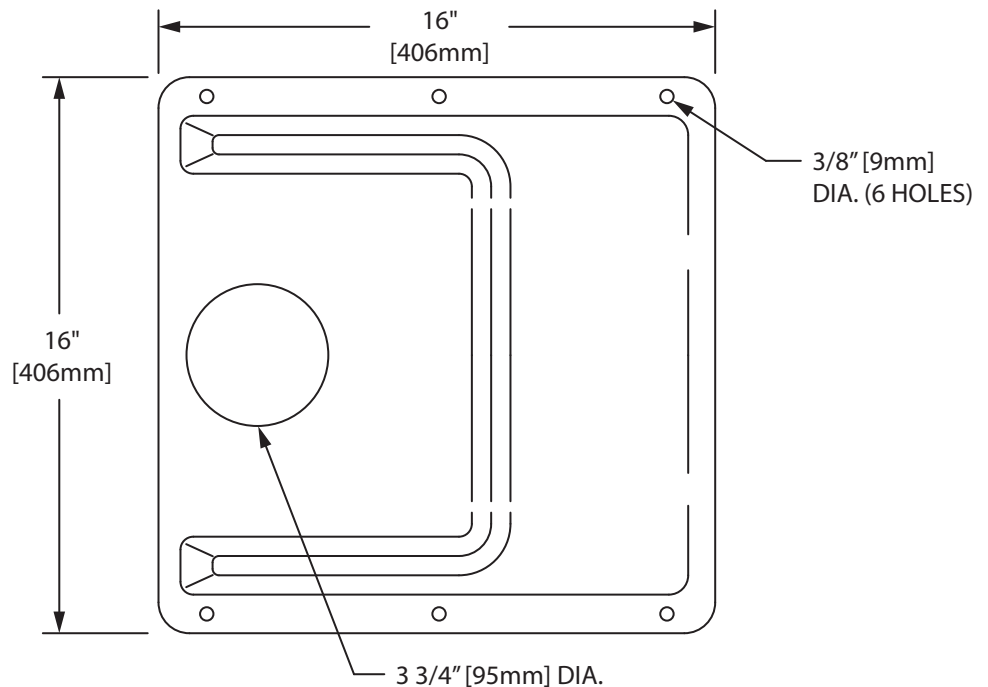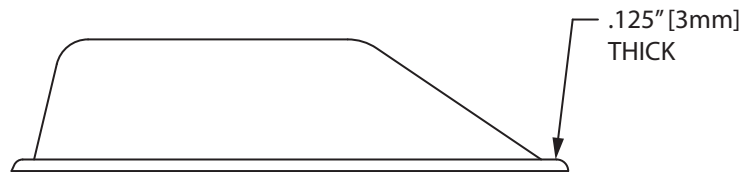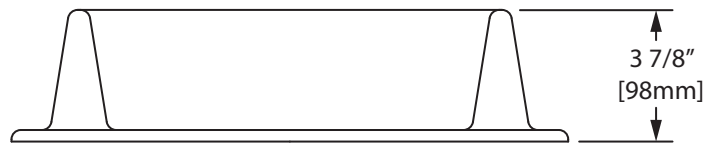

Recommended tools

Safety Glasses, Tape Measure, Level, Power Drill, 1/4" Socket, Drill Bits - 1/4" masonry (concrete/concrete block), Power Miter Saw, 10" Blade with 60-80 Carbide Tipped Teeth

IPC.455/REV.5

Installation Hotline • 866.EZINPRO
Inprocorp.com • 800.222.5556 • 262.679.9010
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®
DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®

Installation Instructions


Please read all instructions before installing door protector.

Door Knob/Lever Protectors:

Models 411, 412, 413L, 413R

Section View Contin.

Model 411 and 413 Shown

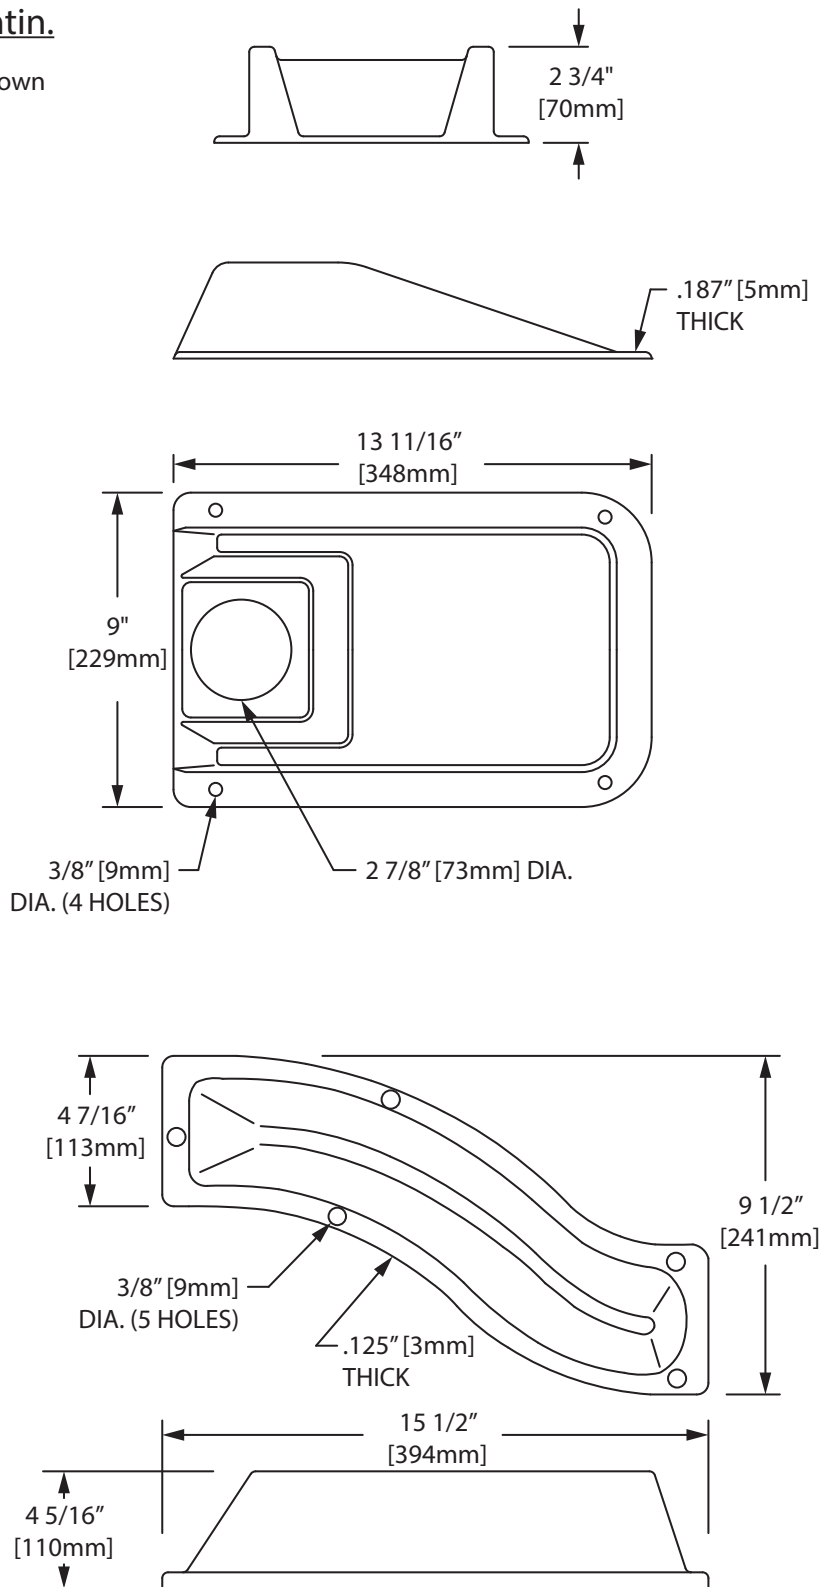

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®

DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®


Installation Instructions

Door Knob/Lever Protectors:


Models 411, 412, 413L, 413R

Please read all instructions before installing door protector.


Components and Fasteners

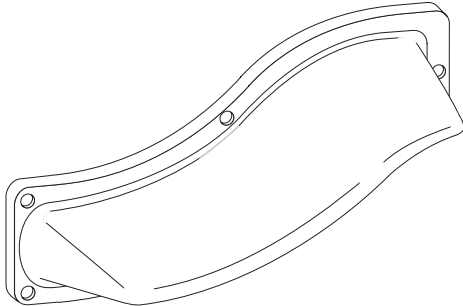

413L
UNIVERSAL
DOOR HANDLE
PROTECTOR

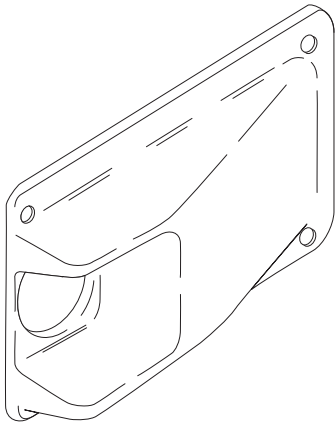

411
POLYCARBONATE
DOOR KNOB
PROTECTOR

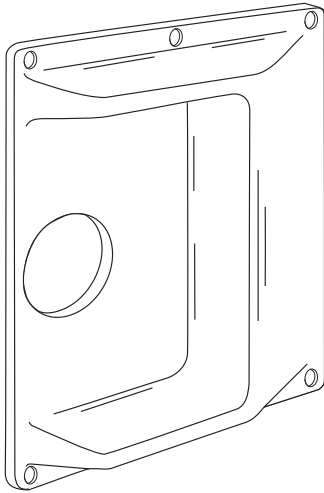

412
LEVER
DOOR HANDLE
PROTECTOR

Condition	Specified Fasteners	Inpro Part #
411 Door Knob Kit	1/4"x20 Serrated Flange Hex Bolt, Sex Bolt and 3/8" Spacer (x4)	HWK-411
412 Door Knob Kit	1/4"x20 Serrated Flange Hex Bolt and Sex Bolt (x6)	HWK-412
413 Door Knob Kit	1/4"x20 Serrated Flange Hex Bolt and Sex Bolt (x5)	HWK-413

Installation Hotline • 866.EZINPRO
Inprocorp.com • 800.222.5556 • 262.679.9010
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC® •
DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®


Installation Instructions

Door Knob/Lever Protectors:

Models 411, 412, 413L, 413R


Please read all instructions before installing door protector.

FIG. 1 (Model 411 shown)

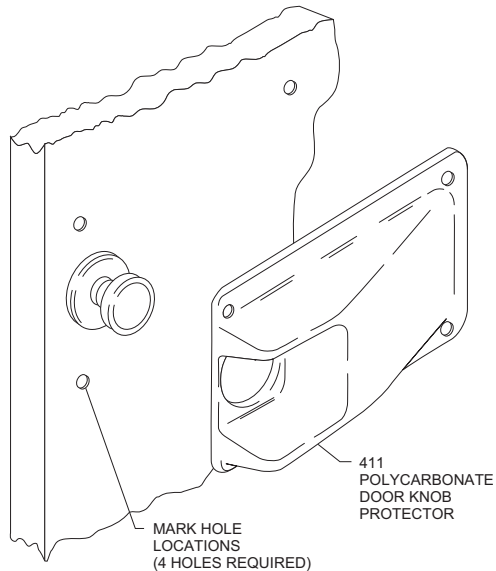


1. Position door knob/lever protector on the door. Using the protector as a template, mark the locations of the mounting holes on the door. SEE FIG. 1

(Model 412 shown)

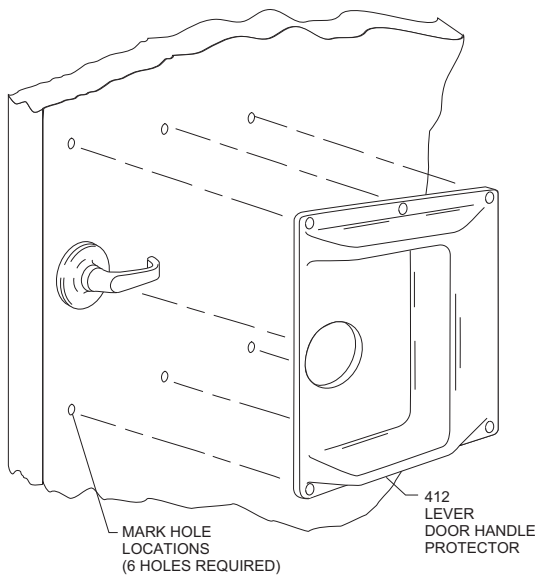

(Model 413 shown)

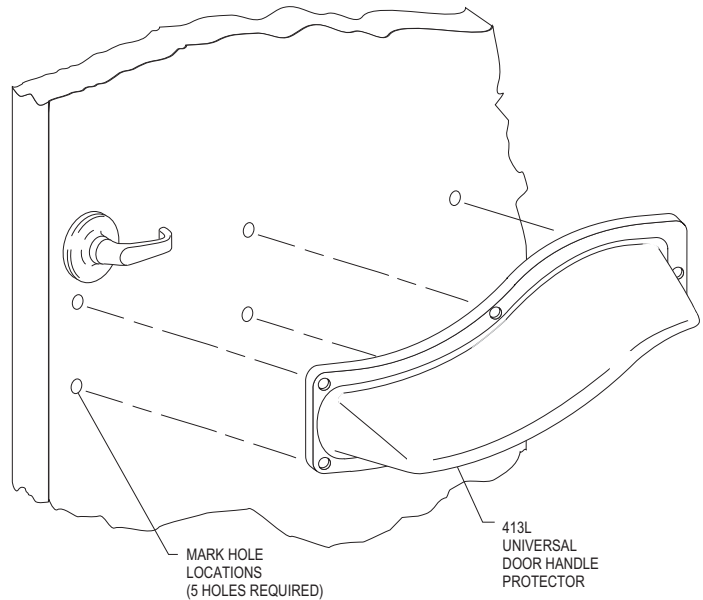

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®

DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®


Installation Instructions

Door Knob/Lever Protectors:

Models 411, 412, 413L, 413R


Please read all instructions before installing door protector.

FIG. 2(Model 411 shown)

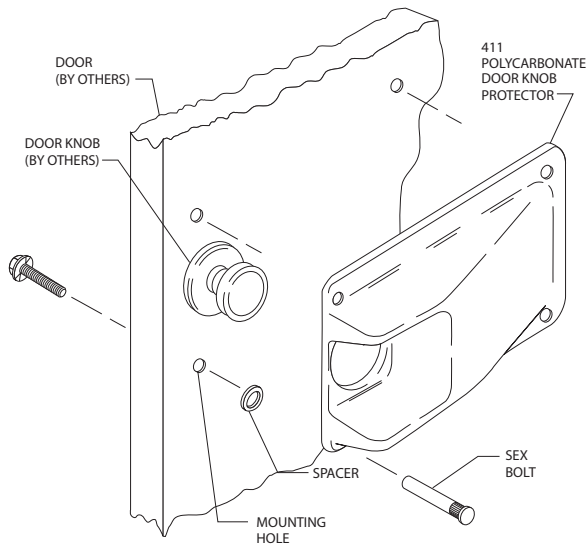


2. Using a 3/8" drill bit, drill marked holes through the door. Secure door knob/lever protector to the door. SEE FIG. 2

(Model 412 shown)

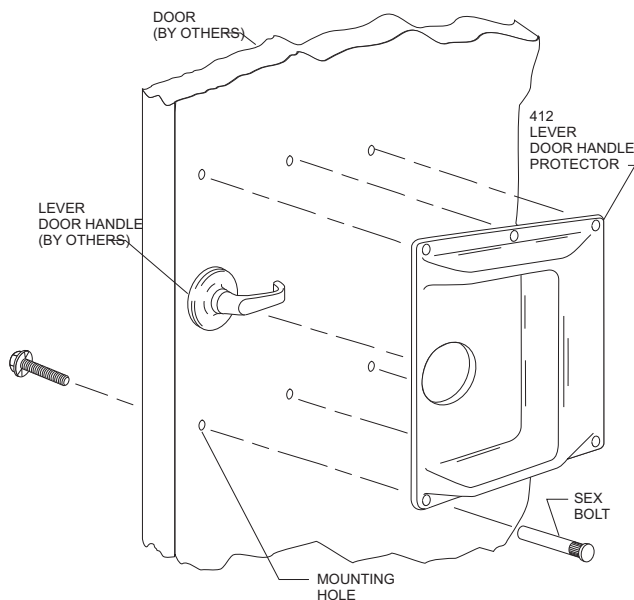

(Model 413 shown)

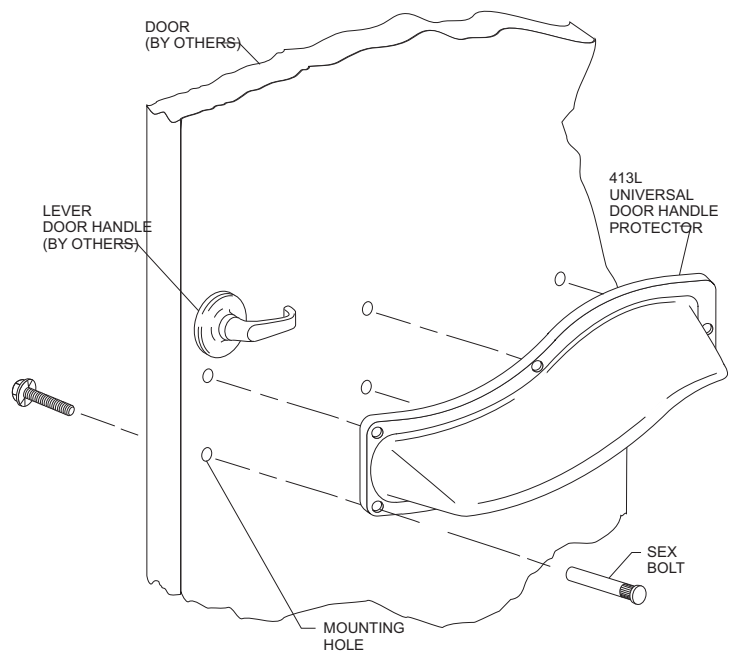

Installation Hotline • 866.EZINPRO

Inprocorp.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC®

DOOR + WALL PROTECTION SYSTEMS
A DIVISION OF INPRO®