

INSTRUCTIONS FOR ASSEMBLY OF DATA PATH 36 (3DR) AND 60 (5DR)

GENERAL NOTES

1. ALWAYS PROTECT THE WORKSURFACE DURING INSTALLATION.
2. ALWAYS LEVEL UNIT(S) AT FINAL LOCATION.
3. TWO PERSON ASSEMBLY REQUIRED

HARDWARE

A



19917-4774-36 SCR #4X3/4L FH PH


B



DATA PATH ASSEMBLY (3DR) OR (5DR)



1 TABLE NEEDS TO BE ASSEMBLED AND UPRIGHT

- A TABLE WITH ONLY ONE DATA PATH IS SHOWN
COULD BE A COMBINATION OF DATA PATHS.

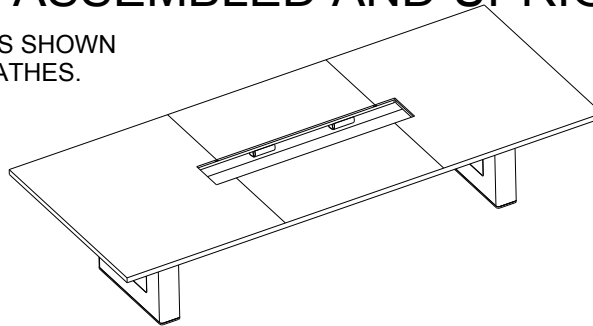

2 PLACE ASSEMBLED DATA PATH IN THE CUTOUT FROM BELOW TABLETOP. SECURE WITH SCREWS.

-THE TOP EDGE SHOULD BE FLUSH OR JUST
BELOW TABLETOP SURFACE.

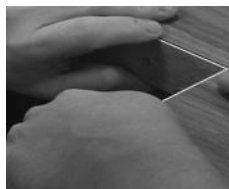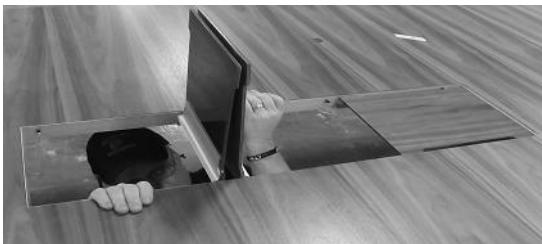

-SECURE WITH #4X3/4L WOOD SCREW THROUGH
ALL HOLES ON THE INTERIOR OF THE FRAME.



3 ADJUST AND ALIGN DOORS

- LOOSEN THE SCREWS SLIGHTLY ON THE PIVOT BLOCKS OF THE DOORS (SEE FIGURE 1)
- ADJUST THE DOORS SO THE GAPS ARE EQUIDISTANT AND TOPS ARE FLUSH WITH TABLETOP (SEE FIGURE 2)



FIGURE 1



FIGURE 2

REPEAT FOR ALL DATA PATH DOOR SYSTEMS