
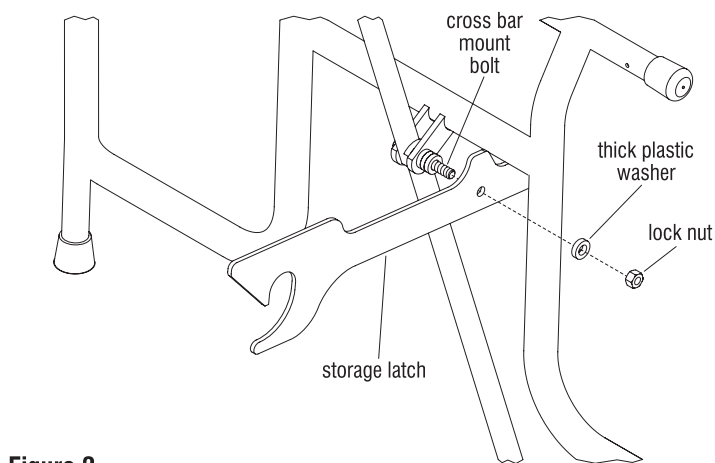


Assembly Instructions ■

CaféWay™ Tables

Model ECRCP

July 2018

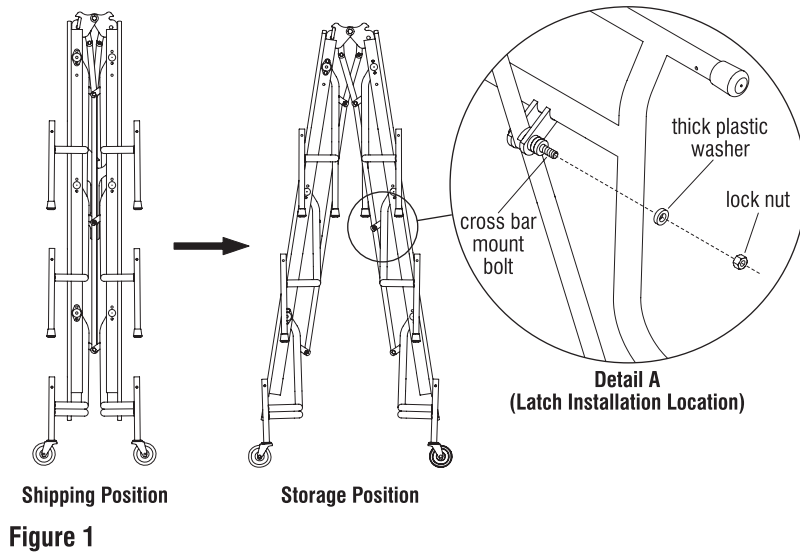

Storage Latch Installation

1. Remove table from shipping container and cut off any cable ties that are holding the table and storage latch in the shipping position.
2. Next, spread the table apart from the shipping position to the storage position (Figure 1).
3. Locate the center cross bar mount and unscrew the lock nut from the bolt (Detail A). Then, remove the thick plastic washer from the bolt (Detail A).
4. Install the latch onto the center cross bar mount bolt. Replace the washer on the bolt and cover the bolt with the lock nut (Figure 2).
5. Make sure the latch freely moves up and down. Then latch the table together to lock it into the storage position.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Stool Seat Installation

6. Stools that will be installed near the pivot point of the table are required to use all eight mounting locations. Stools located away from the pivot location are only required to use the four outer corner mounting locations (Figure 2).

Note: Enough screws are supplied to use all eight mounting locations on each stool if desired.

7. Remove stools and #14 x $\frac{5}{8}$ " attachment screws from the shipping box. Place stool seats upside down on a flat protective surface.
8. Align three screws, two in each adjoining corner, and one in between the corners as illustrated (Figure 3).
9. Install the three #14 x $\frac{5}{8}$ " screws, but do not drive the screws in all the way. Leave a $\frac{1}{4}$ " gap between the bottom of the screw head and stool. This will allow the stool plate adapter to slide in between the screw head and seat (Detail B).

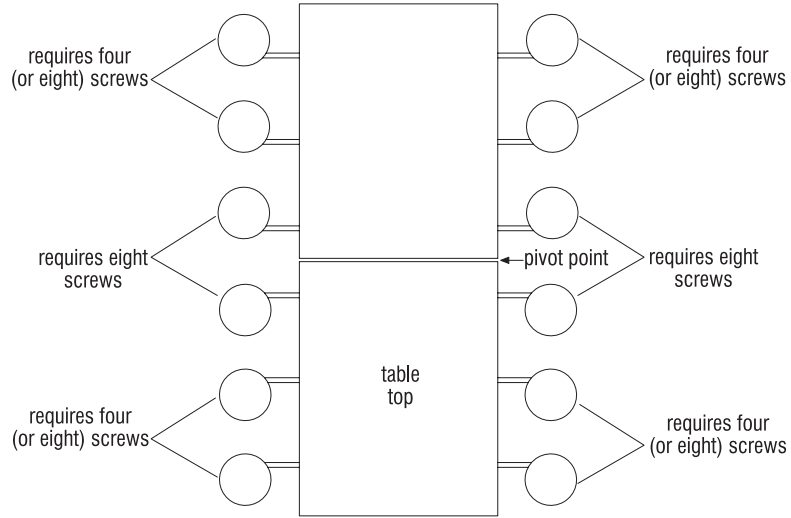


Figure 2


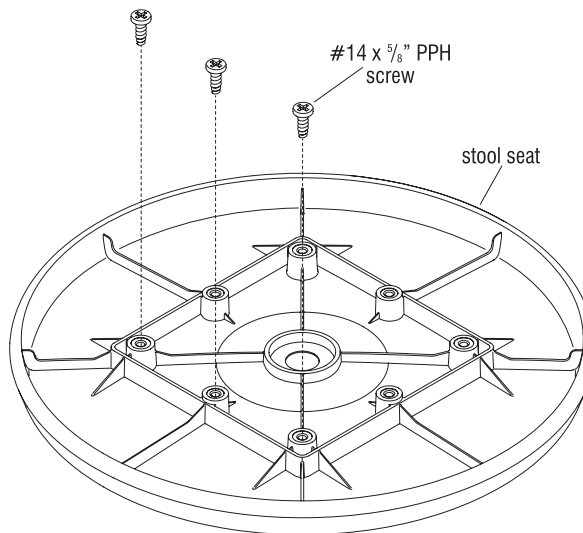


Figure 3



Detail B

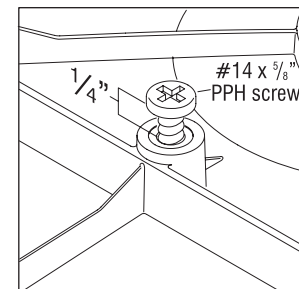

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

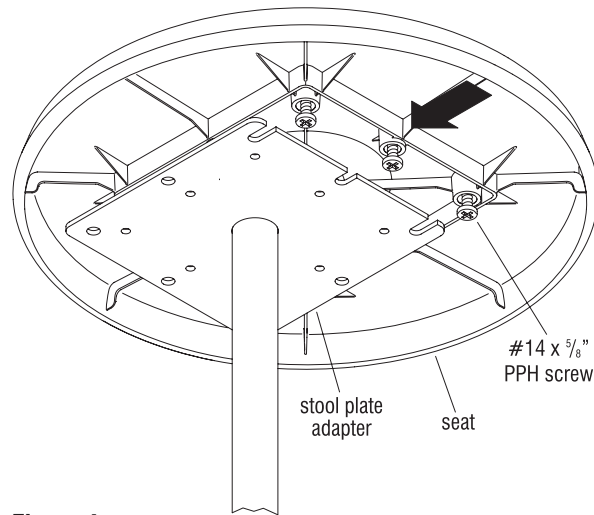


Figure 4

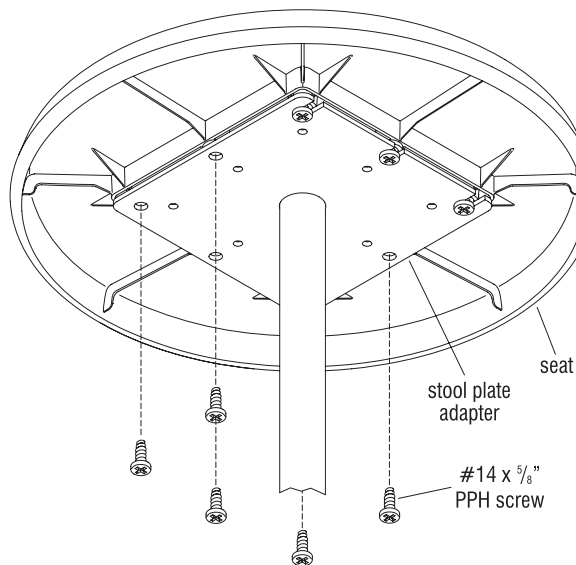


Figure 5

10. Align partially installed screws on seat with slotted holes on the stool plate adapter (Figure 4).
11. Slide plate adapter into place and align vacant seat mounting holes with stool plate holes (Figure 5).
12. Install five #14 x 5/8" screws into the vacant attachment holes and torque to 15-20 in/lbs. Next, twist down the three screws on the slotted hole side and torque them to 15-20 in/lbs (Figure 5).

■ **CaféWay™ Tables - Model ECRCP**
Assembly Instructions

1330 Bellevue Street • P.O. Box 8100 • Green Bay, WI 54308-8100 • Tel 1-800-424-2432 • www.ki.com

© 2018 Krueger International, Inc. All Rights Reserved • Code KI-62655R1/KI/PDF/0718

