


ATTACH BASE IN PRE-
DRILLED ALIGNMENT
HOLES WITH #12X1" PAN
HEAD SCREWS
(PROVIDED IN CARTON)

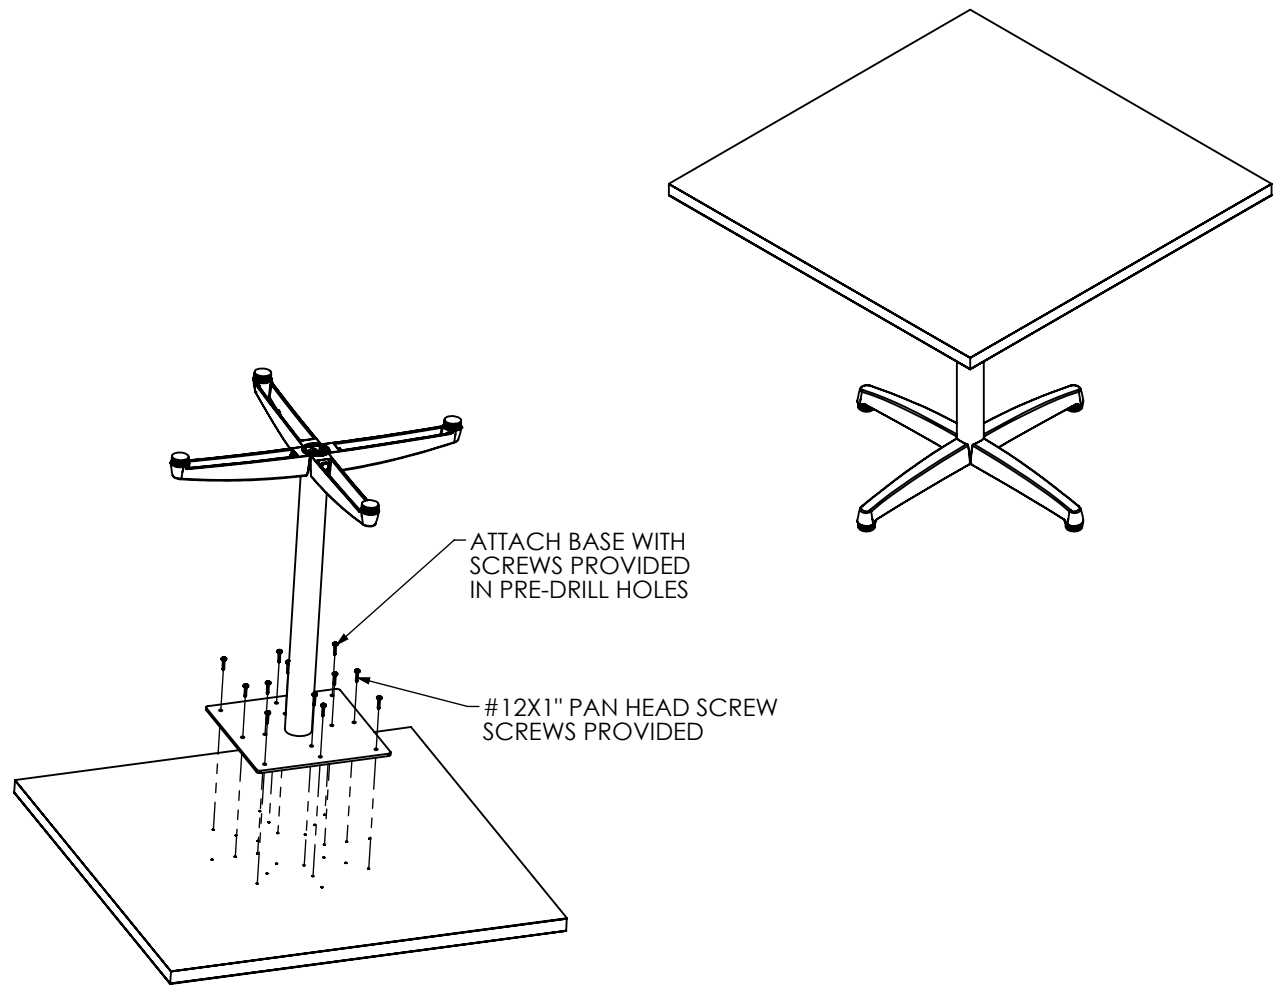

GENERAL NOTES - DEBUR ALL SHARP EDGES - PROTECT SURFACE FINISH	<div data-bbox="1010 1219 1192 1398" data-label="Image"> </div> <div data-bbox="1207 1219 1493 1398" data-label="Text"> <p>Hi 5 Furniture 8301 NW 101st TERRACE, SUITE 7 KANSAS CITY, MO 64153 PHONE: 816.774.4050 FAX: 816.817.4910 WWW.HI5FURNITURE.COM</p> </div>	Part Name:
UNLESS OTHERWISE NOTED DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL $\pm 1/32$ ANGULAR: ± 0.5 Deg DECIMAL ± 0.03125		Description: X-BASE ASSEMBLY INSTRUCTIONS
		Material: REFER TO BOM
		Finish:
		Drawn By: TW Date Created: 6/21/2010 Eng. Approval: Mfg Approval:
		Scale: 1:16 Last Updated: 6/21/2010 Sheet 1 of 1 Revision: A
		Part Number: SUPREME X ASSEMBLY

PROPRIETARY AND CONFIDENTIAL

This drawing is the property of Hi 5 Furniture, Inc. The drawing nor the items thereon are to be reproduced, redistributed or used in any manner not authorized in writing by an officer or agent thereof.