




bivi trunk & half round table

Assembly Instructions

tools needed

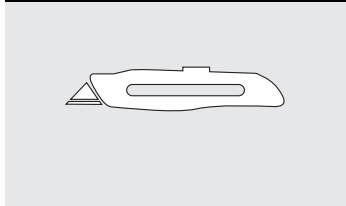

assembly video




myturnstone.com/bivi/instructions

time needed



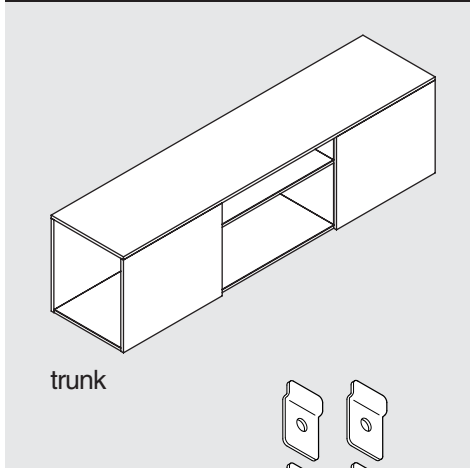


assembly time:
5 minutes



difficulty scale



bivi trunk



The diagram shows a rectangular domain with a vertical boundary at $x=0$. The left side is labeled 'Region 1' and the right side is labeled 'Region 2'. A point source q is located in Region 1, and a point source q' is located in Region 2. The domain is bounded by $x=-a$ and $x=b$ on the horizontal axis, and $y=0$ and $y=c$ on the vertical axis.

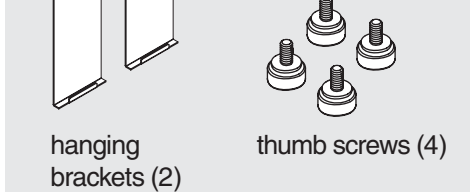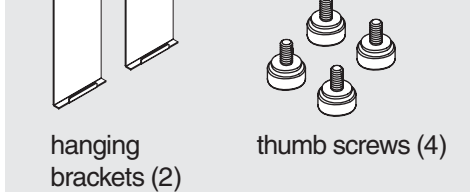


1

1

- # 1
- ## Hang brackets.

Hang
brackets.

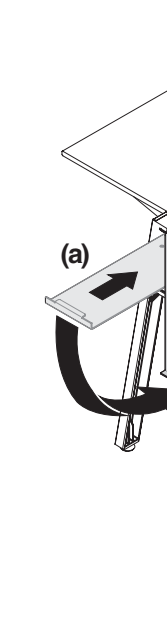


For assembly video go to myturnstone.com/bivi/instructions

STEP

2


**Hang
trunk.**

- Pick up the bivi trunk (one person at each end) and place the bottom of the storage unit on top of the edges of the hanging brackets.
- Next have one person hold the front of the storage unit in place while the other person goes under the workstation to secure the unit in place with two thumb screws and two brackets per hanging bracket.

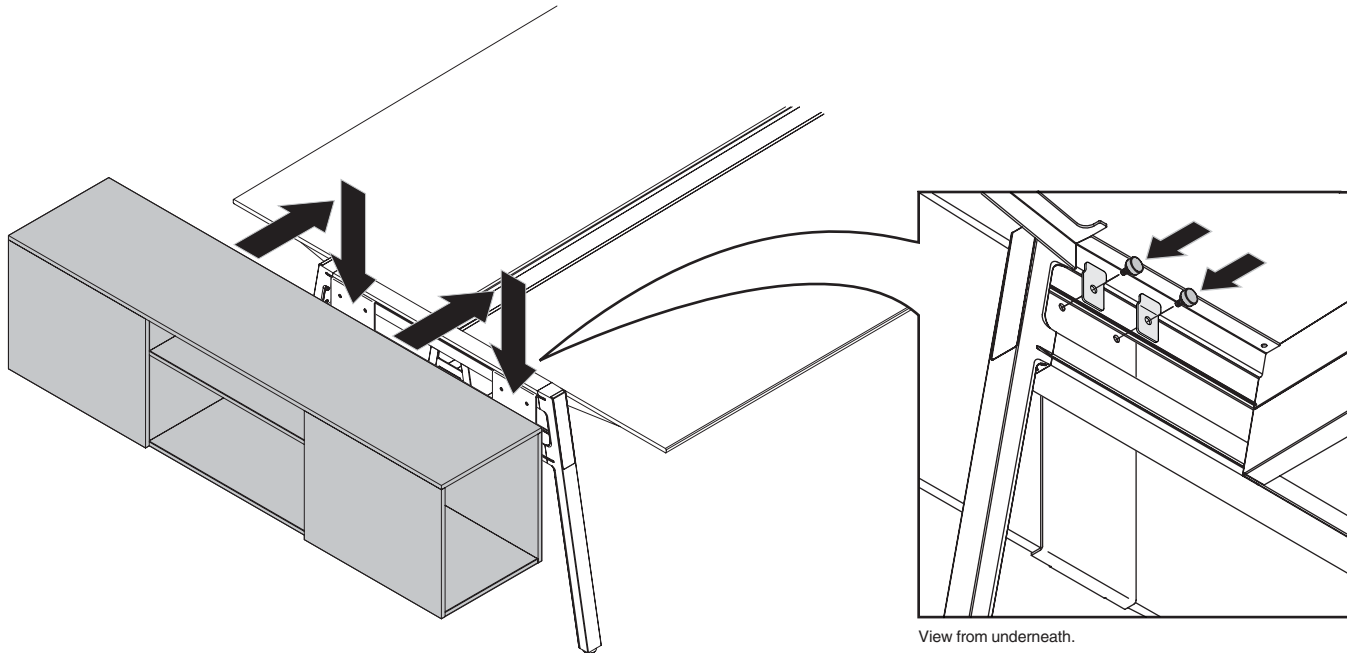

View from underneath.

tools needed

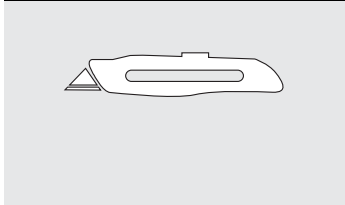

assembly video




myturnstone.com/bivi/instructions

time needed





difficulty scale

really easy a little more difficult

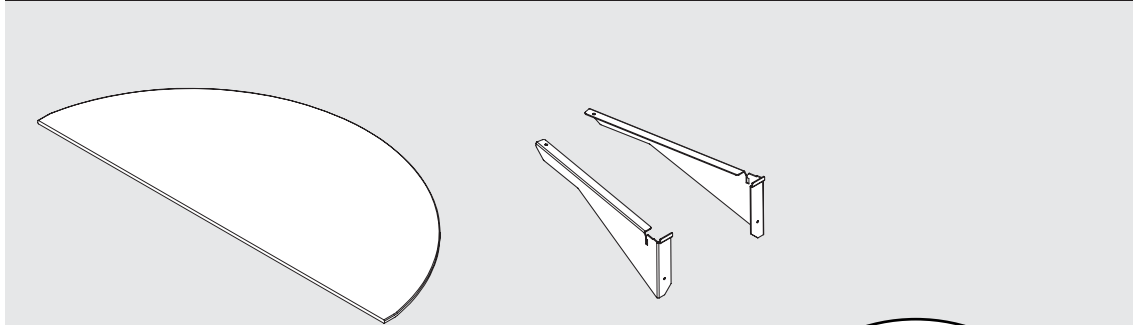bivi half round table

half round worksurface brackets (2)

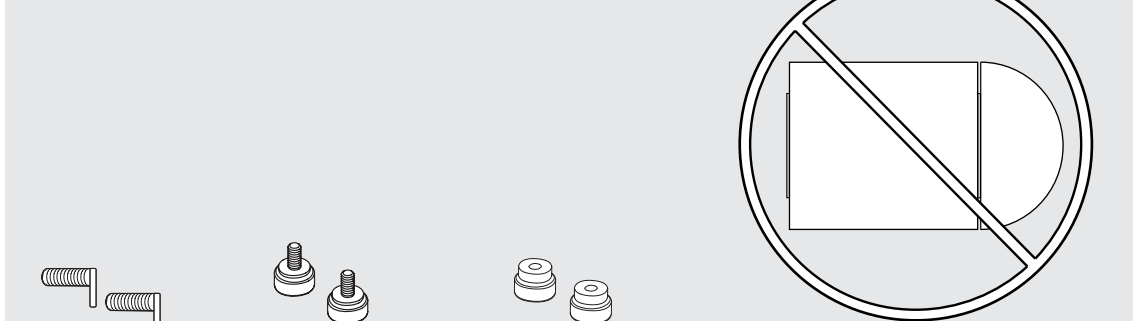




For assembly video go to myturnstone.com/bivi/instructions

STEP

1

Hang
brackets.

- Place two brackets into the upper leg slot and swing down **(a)**.
- Move brackets to outer ends of the slot **(b)**.

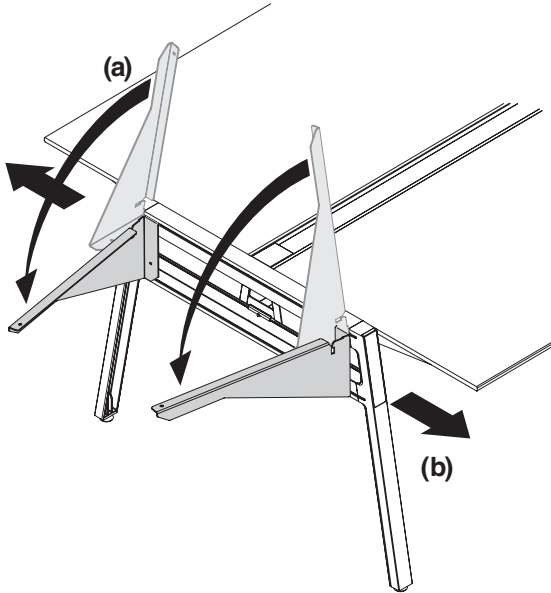


STEP

2

Tighten knob.

- Tighten knob **(a)**.
- Make sure that the hook goes over bottom horizontal leg.

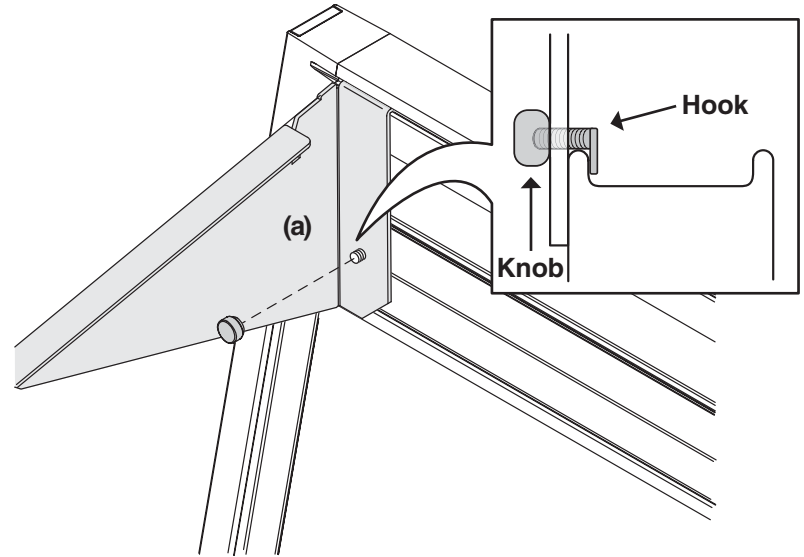


STEP

3

Place half round worksurface on brackets **(a)**.
Make sure the support brace on the underside of the worksurface hooks into the brackets as shown **(b)**.

- Place half round worksurface on brackets **(a)**.
- Make sure the support brace on the underside of the worksurface hooks into the brackets as shown **(b)**.

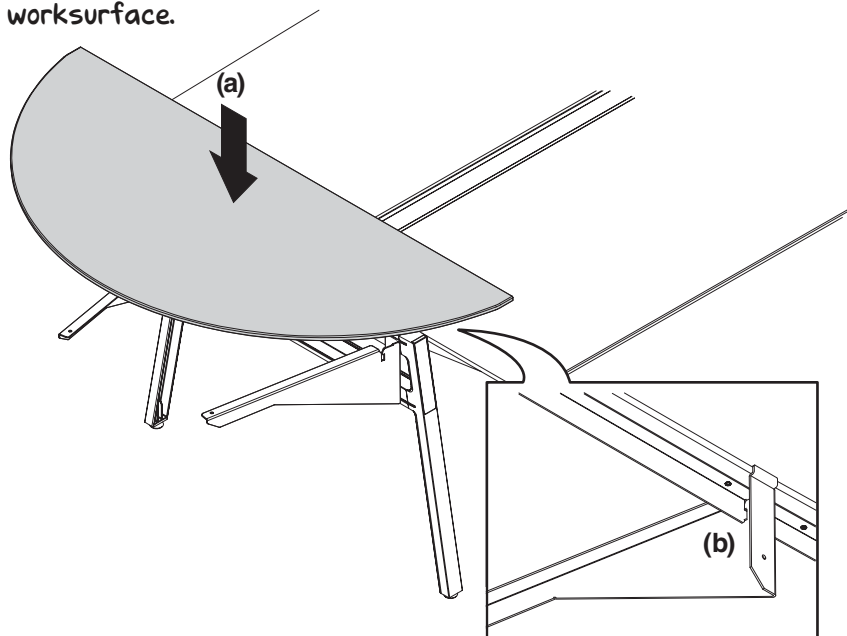


View from underneath.

STEP

4

Tighten thumb screws.

- Line up the hole in the brackets with threaded insert on the bottom of the worksurface.
- Secure the half round worksurface to the brackets using the thumb screws.

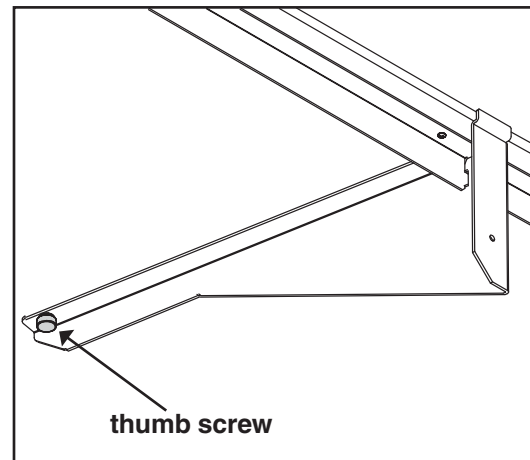

Visit myturnstone.com to see more spots.





turnstone®

For more information and assembly instruction videos visit **myturnstone.com/bivi/instructions**

All rights reserved. ©2010 Steelcase Inc. Printed in the U.S.A. on recycled paper. Data subject to change. Trademarks used herein are the property of Steelcase Inc. Some products and services may not be available in all countries. Your Turnstone representative can provide you with details.
For more information, call Turnstone Customer Service at 1-877-473-1108 or visit us online at myturnstone.com.
ad-stock ID 10-0003124. **bivi half round table top & bivi trunk: 11/10**
engineering document 939500451 Rev F.