








**SERIES:** 7000 WOOD COFFERS

**STYLE:** 7200 MODERN MOLDING

# Overview

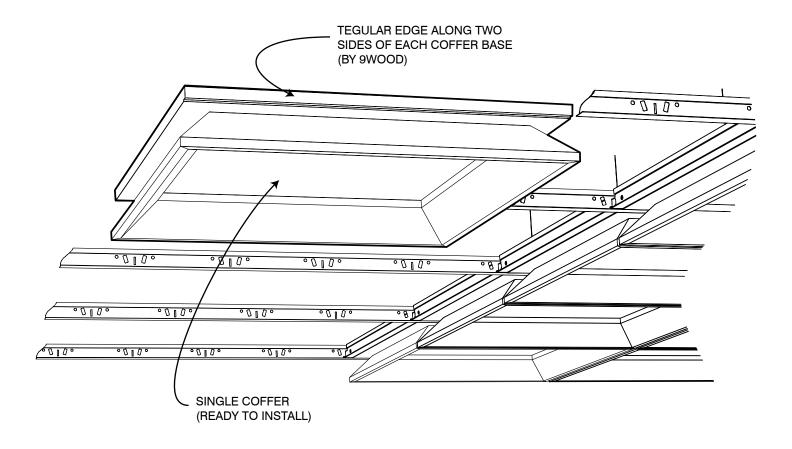

The 7200 Modern Molding Coffer style wood ceiling offers a coffer design typical of modern European woodwork. The coffer frame remains angular. The coffer lays into 15/16" standard T-Bar grid below the grid. Multiple veneer pattern options are available for the coffer interior panel.

Attachment for the 7200 Modern Molding Coffer is via tegular edges that lay into T-Bar grid.















**SERIES: 7000 WOOD COFFERS** 

**STYLE:** 7200 MODERN MOLDING

# Product Data

## **Application**

The Modern Molding Coffer is used in spaces where a modern version of the traditional coffer appearance is desired. Picture frame assembly is used to fabricate and miter veneered molding which is attached to a veneered panel. A 3/16" reveal is required between panels. Access is by lift, shift and removal. In seismic zones, a safety-wire tie-off may be required.

### Performance

#### **Acclimatization**

Modern Molding Coffers must be cared for in a controlled interior environment (RH 25%-55% max; temp. 60°-80°) and installed only after reaching equilibrium moisture content. Should the building fall outside these limits consult 9Wood for our 3 Tests/3 Tracks Acclimatization Advisory.

#### **Acoustics**

The Modern Molding Coffer is considered acoustically reflective.

#### **Fire Rating**

Individual members and components can be treated with Class I (A) Fire Retardant chemicals (veneered particleboard use FR formulas). Particular species or styles have not been tested.

#### **LEED**

Modern Molding Coffers may qualify toward MR-3, MR-4.1/4.2, MR-5.1/5.2, MR-6, MR-7, IEQ-4.2 or IEQ-4.4. As all products are custom-fabricated, LEED credit opportunities are project by project. Please contact 9Wood for specifics.

#### **MEP**

The Modern Molding Coffer permits MEP penetrations in the ceiling's surface. Cut coffers may require supplemental reinforcement. Fixtures and diffusers must be independently supported.

#### Seismic

Wood Coffers may require a safety wire tie-off. Please consult local code or a licensed engineer for any additional requirements.

#### **Species & Finishes**

9Wood can offer both domestic and imported species for the Modern Molding Coffer. Clear, matte sheen finish is standard; custom color matches and opaque finishes are available.

## Suspension

Modern Molding Coffers lay onto 15/16" heavy duty T-Bar main runners. Main runners are installed 2' on center.

### **System Weight**

Modern Molding Coffers typically weigh 4 pounds per square foot.

999 South A Street Springfield, OR 97477 tel 888.767.9990 fax 888.767.9998 sales@9wood.com www.9wood.com




**SERIES:** 7000 WOOD COFFERS



**STYLE:** 7200 MODERN MOLDING

# Typical Specifications

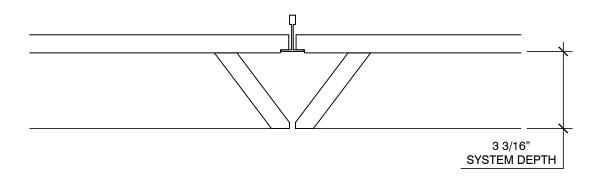

### SKU Table

Coffer Length	Coffer Width		
	24"		
24"	7224-24		

Additional width, depth, and M/LF options may be available. Please check with 9Wood if you don't see the combination that you have in mind.

999 South A Street Springfield, OR 97477 tel 888.767.9990 fax 888.767.9998 sales@9wood.com www.9wood.com






# 7200 Data Sheet




**SERIES:** 7000 WOOD COFFERS

**STYLE:** 7200 MODERN MOLDING

# Perimeter Conditions and Suspension

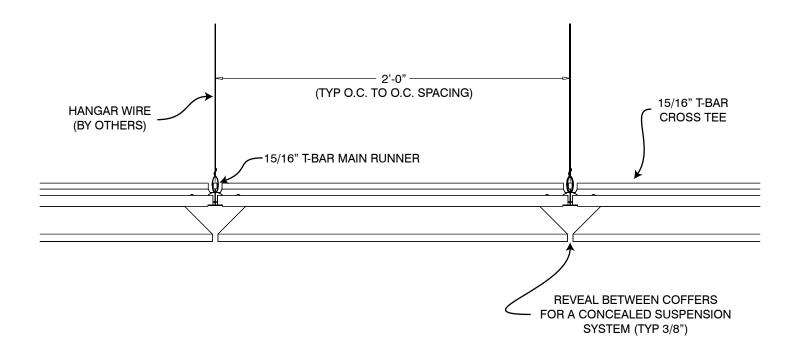

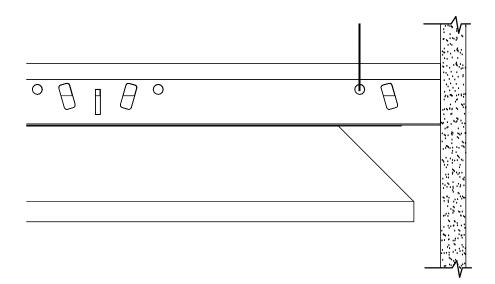

999 South A Street Springfield, OR 97477 tel 888.767.9990 fax 888.767.9998 sales@9wood.com www.9wood.com