
# TS 301A
# a la carte™ Task Chairs


turnstone®




TS30101 TS30102 TS30103 TS30105 TS30106

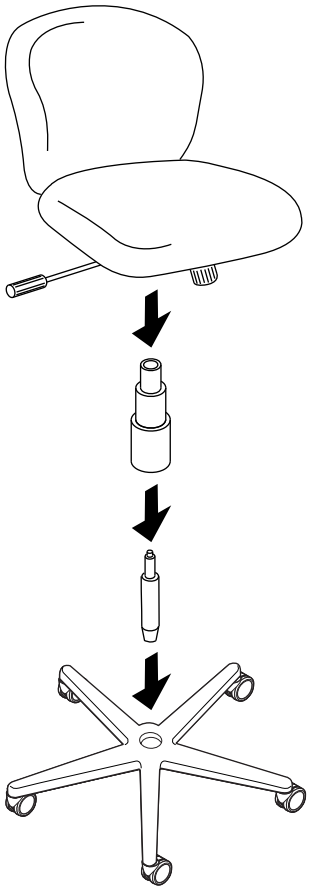

**1.** Insert the shafts of the casters into their corresponding sockets of the base. Push in firmly. Stand the base upright.

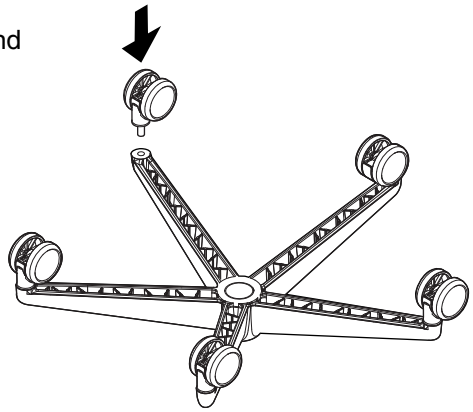

**2. Insert cylinder into base**
With base resting on floor, insert cylinder as shown.

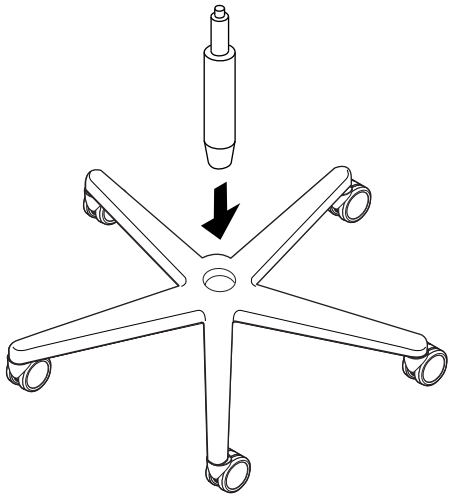

© 2001 Steelcase Inc.
Grand Rapids, MI 49501 U.S.A.
Printed in U.S.A.

turnstone

## 3. Assemble cylinder cover

Slide cylinder (A) up through cylinder (B) (see fig 1). With cylinder (A) engaged with cylinder (B), slide cylinder (C) down over cylinders (A and B) (see fig 2). Refer to fig. 3 for completed assembly.

fig. 1

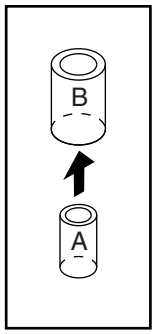



fig. 2



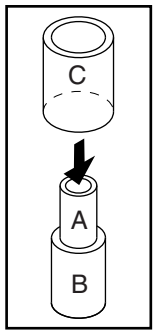



fig. 3

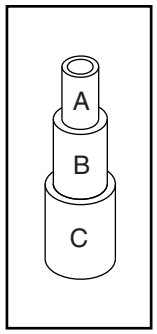


## 4. Place cover over the cylinder in base (fig. 2)

Fig. 2

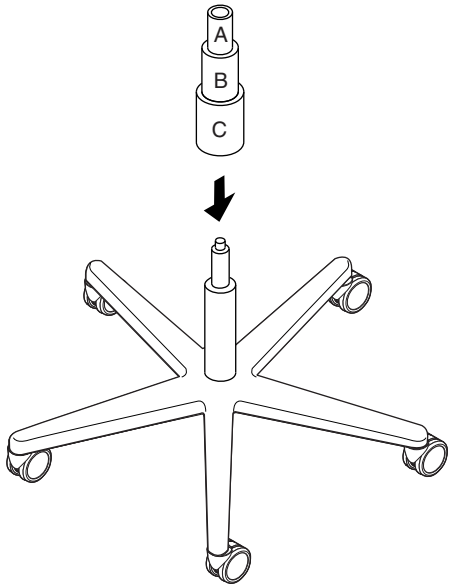


**For installation of optional stool kit** insert the gas cylinder into the foot ring and tighten (fig 1). Push the gas cylinder into the base (fig 2).

Fig. 1


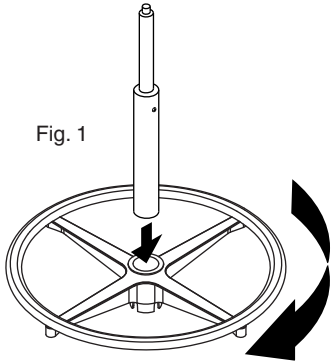


Fig. 2

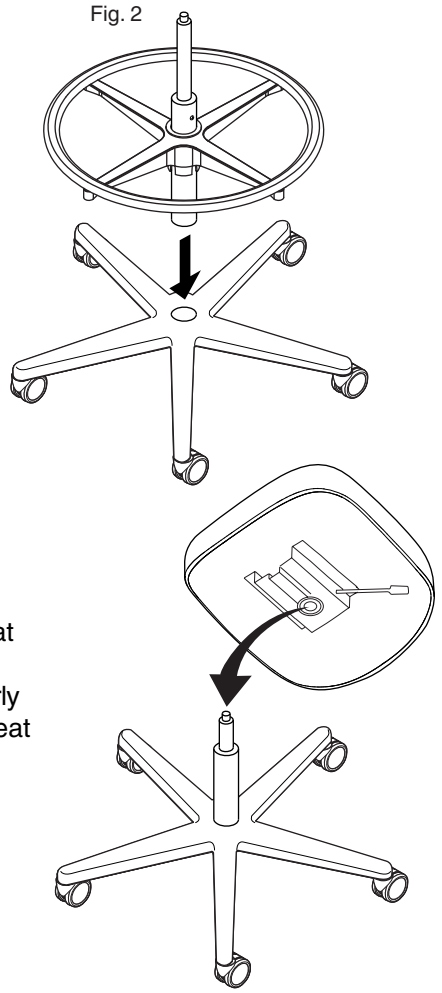

## 5. Attach seat to cylinder

Line up hole over cylinder, and place seat down. By grabbing the seat, firmly push the entire chair towards the floor to properly lock the tapers on the cylinder into the seat and the base.

## 6. Attach back to control

Remove the bolt from the control (Fig. 1). Tighten the seat bolt, as shown (Fig. 2).

Fig. 1


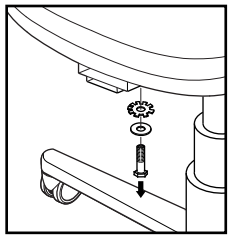


Fig. 2

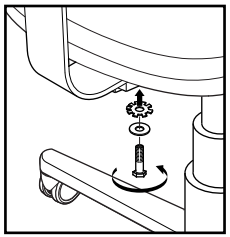

# Optional Arm Installation


turnstone

## Height and Width Adjustable Arms

**1.** Remove knob from arm.

**2.** Push arm into arm bracket.

**3.** Replace knob and tighten.

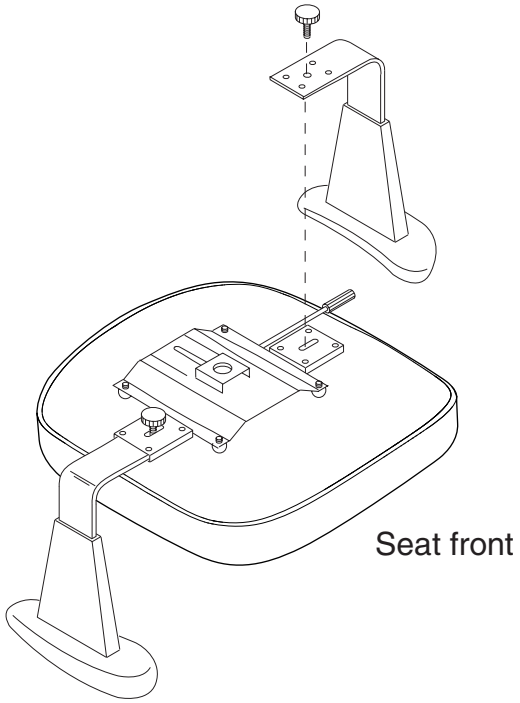


## Fixed Arms

**1.** Attach arms with four (4) phillips head screws.

