


S-1841 Quiet Comfort Luxury Floating Underlayment "Product Information"

For use with the following Installation Systems:

Engineered Hardwood Flooring

Armstrong® Quiet Comfort™ Luxury Floating Underlayment Installation Instructions

- Make sure the subfloor is clean, flat, dry and sound. It is important that the subfloor is free of all debris. Check the subfloor for unevenness or protruding objects such as nails or screws. The S-1841 underlayment can be installed over paint over spray or sealers. Make sure to scrape any loose debris.
- When installing over concrete, the concrete must be dry with no visible signs of moisture.
- When installing over wood subfloors seams should be taped.

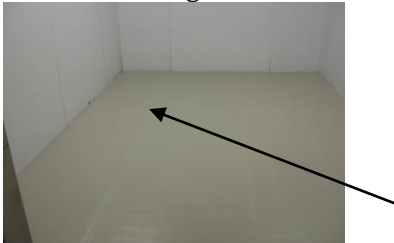

- Begin in a corner and install the underlayment parallel to the wall in the opposite direction you plan to install the hardwood flooring strips/planks. Leave at least 2" of excess underlayment up the wall and trim after completing the floor installation.
- Roll out the next roll of underlayment in the same manner, making sure that the seams are butted together. The use of clear 2" wide packing tape can be used to attach the seams. The tape should be rolled with a hand roller. The hardwood strips or planks should be installed perpendicular to the underlayment.
- When installing Armstrong Quiet Comfort™ Luxury Flooring Underlayment on concrete or below grade subfloors, be sure to tape the seams together with 2" tape that meets the moisture vapor transmission rate for this type of installation.
- Do not overlap the underlayment at any point in the installation.
- Make sure that the underlayment is sealed around all vertical objects such as pipes or Electrical wires.



- The recommended adhesives are Armstrong Summit or Armstrong Equalizer. (Do not use ProConnect wood adhesive with s-1841 underlayment). With a 1/4" x 1/2" x 3/16" (6 mm x 13 mm x 8 mm) V-Notch trowel
- The underlayment can be glued to the subfloor or can be installed with a 3" band of adhesive around the perimeter and at the seams. The S-1841 can be floated on top of the subfloor and the hardwood flooring attached to the underlayment with adhesive.
- Install the hardwood flooring according to Armstrong's installation instructions.
- **Do not use** Masking Tape, Blue Painters Tape or Duct Tape to tape the seams together. Clear Heavy Duty packing tape only.
- **Do not** leave any voids in the adhesive. Spread adhesive on the entire area.