

# Priority

## Bridge Modesty Panel

### Tools Required

- Screw Gun
- #2 Phillips Head Bit
- Tape Measure
- Pencil

### Package Contents

- Hinges
- #8 x  $\frac{5}{8}$ " Panhead Screw
- 1 Felt Strip

### Installation

#### Modesty panel:

1. Attach hinges to modesty panel using pre-drilled holes. Do not tighten. (Figure A).
2. Cut felt strip to appropriate size to fit the left and right edge of the modesty panel.
3. Remove protective backing from felt strip and attach felt to each edge of modesty panel.

#### Bridge:

1. Align modesty panel centered left to right, to dimension shown front to back with bridge, measure and mark hinge location. (Figure B).
2. Attach modesty panel with hinges to bridge as shown. (Figure C).
3. Tighten all fasteners.

Figure A

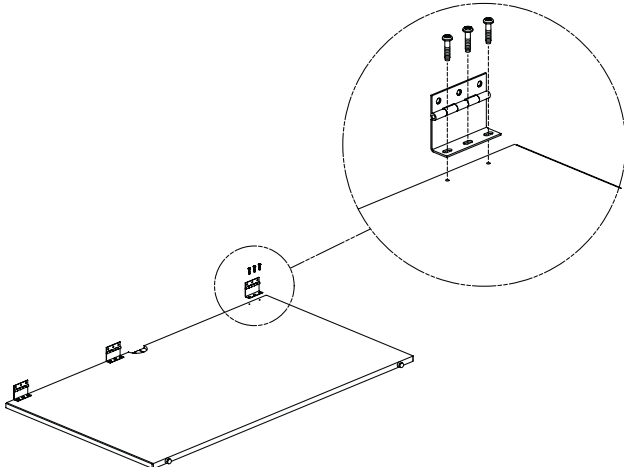


Figure B


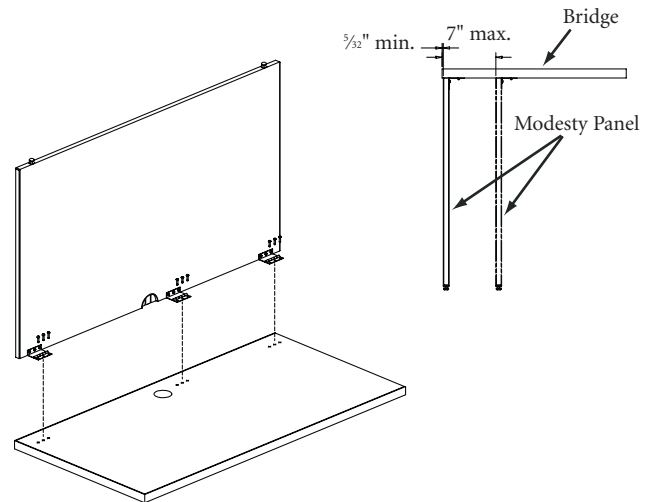


Figure C

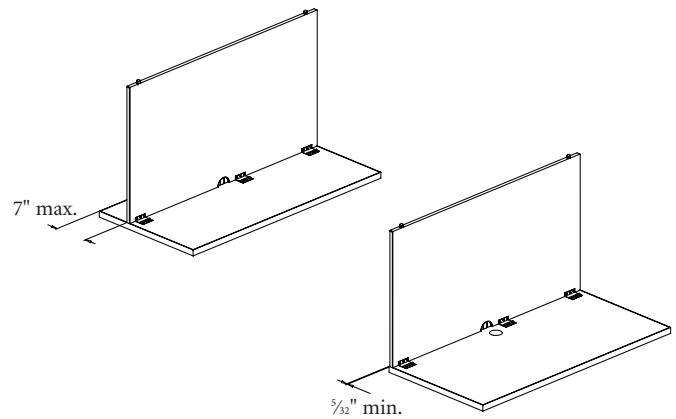

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball® Office