

Priority

Transaction Counter

Tools Required

- Phillips Head Screwdriver ■ Scissors or Utility Knife
- Tape Measure

Package Contents

- L-Brackets and Fasteners ■ Pencil
- Dual Lock Pads & Fasteners

Installation

Note: It is recommended that more than one person be used to assemble the transaction counter.

1. Insert screw into Dual Lock Pad and attach to tackboard as shown. (Figure A).
2. Position tackboard in transaction counter as shown and press down firmly to mark fastener location. Remove tackboard, drill holes and mount Dual Lock fasteners to inside of the transaction counter. (Figure B).
3. Position the L-bracket as shown. The short flange of the L-brackets attach to the underside of the base unit worksurface. Attach each L-bracket with four (4) mounting screws. (Figure C).

Figure A

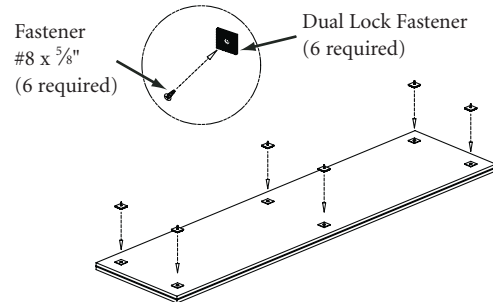


Figure B


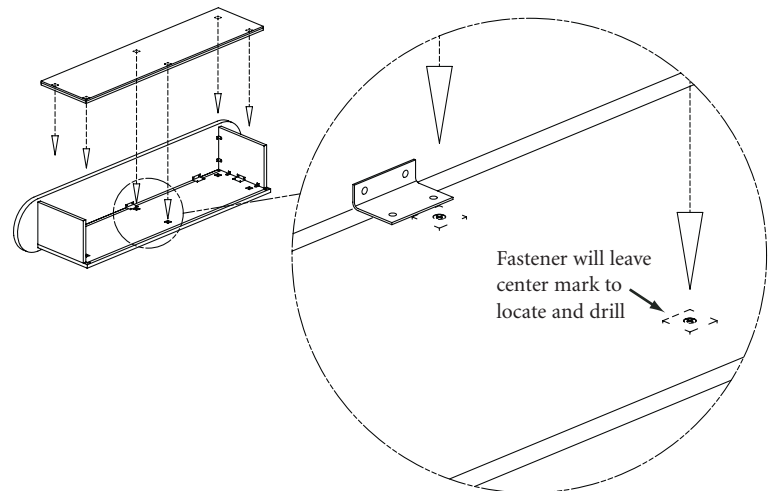


Figure C

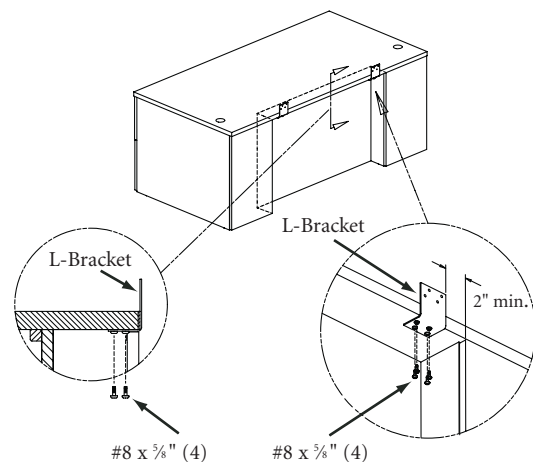

Priority

Installation (continued)

4. Place the transaction counter in the desired position on the base unit, with the inside back panel flush against the outside of the L-brackets. Attach L-brackets to the transaction counter with four (4) mounting screws. (Figure D).
5. Install the tackboard as shown. Make sure the tackboard is level and even on all sides and press firmly on all Dual Lock fasteners to secure. (Figure E).
6. Re-check that the tackboard is flat against all fasteners and is level and even on all sides. If the tackboard needs adjustment or removal, pull tackboard straight out from the transaction counter to separate the dual lock fasteners.

Figure D

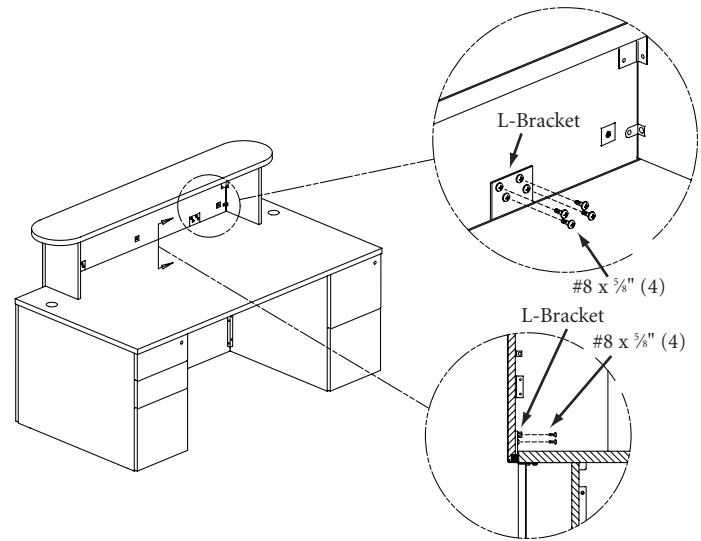


Figure E

