

Priority

Desk, Bridge and Credenza

Tools Required

- Screw Gun
- #2 Phillips Head Bit
- Level
- Tape Measure
- Pencil

Package Contents

- #10 x 1" Panhead Screw
- Flat Brackets

Installation

1. Install flat brackets to the main units approximately where shown. Center the brackets with the edges of the unit worksurface. Attach brackets using the #10 x 1" panhead screws provided. (Figures A and B).
2. Move units into desired position. Level main units. (Figure C).
3. Align the bridge worksurface to the main units. Position the worksurface on the main units and bridge so their edges are tight against each other and flush with no gaps. Fasten bridge worksurface to the flat brackets using the #10 x 1" panhead screws provided. (Figure D).

Figure A

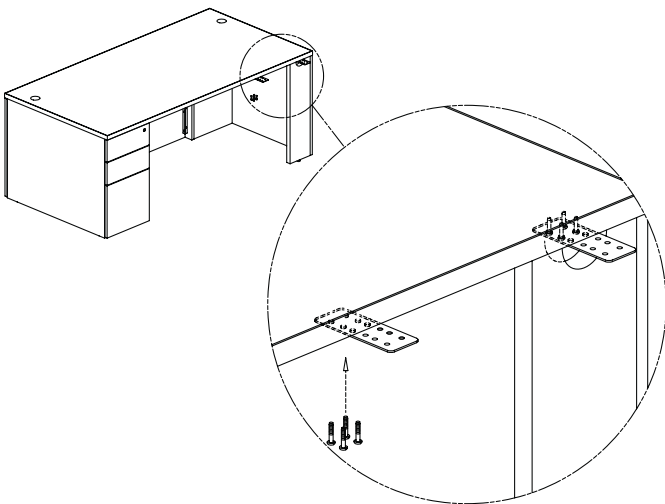


Figure B

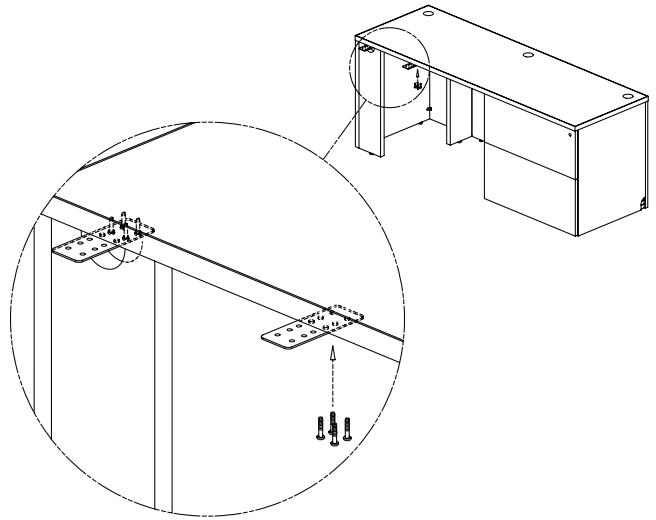


Figure C

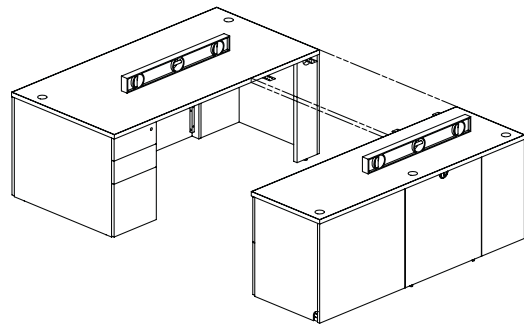


Figure D

