

Priority

Support Panel for Desks and Credenzas

Tools Required

- Screwgun
- #2 Phillips Head Bit
- Tape Measure
- Pencil

Package Contents

- #8 x $\frac{3}{4}$ " Panhead Screws
- L Brackets
- EURO Screws

Installation

1. The single pedestal end support is used to support a top when a return or bridge top will gang perpendicular to the primary worksurface. (Figure A).
2. The support panels have pilot holes to be used to locate the L brackets. Attach the L brackets to the panels using the EURO screws provided. (Figures B and C).
3. Locate, mark and attach the L brackets to the back panel using the #8 x $\frac{3}{4}$ " panhead screws provided flush to top edge and to dimension as shown. (Figure D).

Figure A

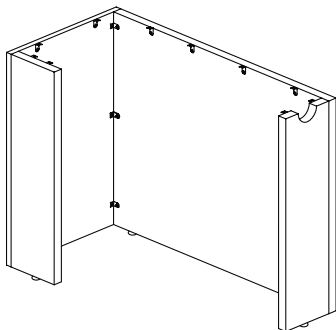


Figure B

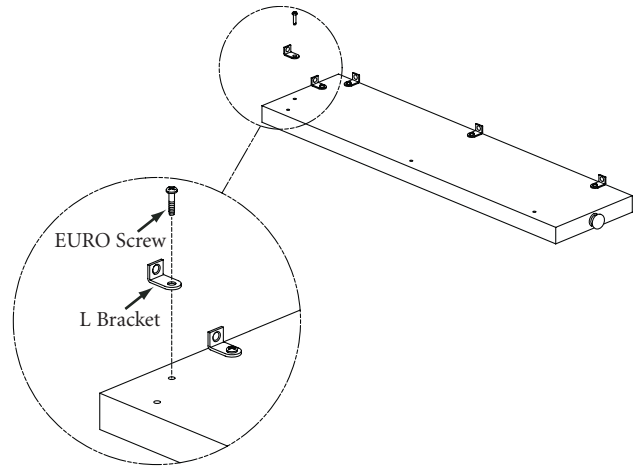


Figure C


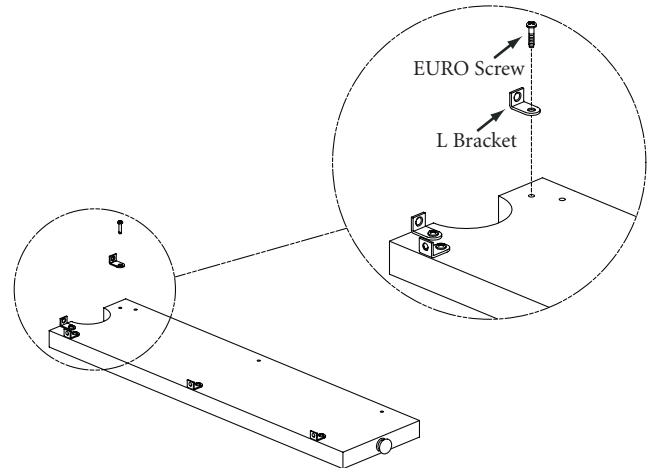


Figure D

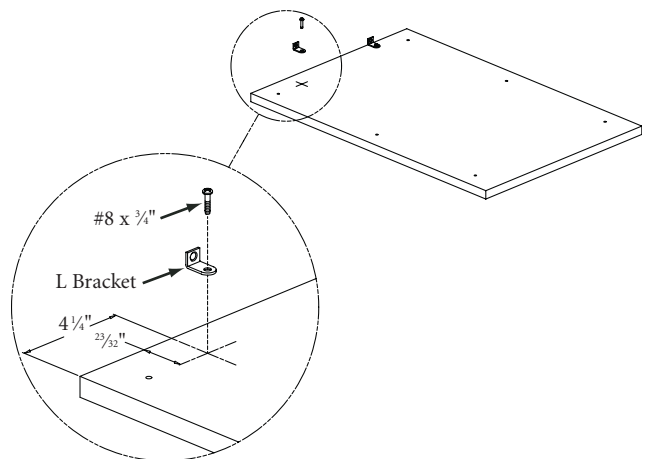

Priority

Installation (continued)

4. Locate, mark and attach the L brackets to the end panel using the #8 x $\frac{3}{4}$ " panhead screws provided flush to top edge and to dimension as shown. (Figure E).
5. Attach the support panel to the back panel using the EURO screws provided making sure top surfaces are flush as shown. (Figure F).
6. Attach the support panel with recess to the end panel using the EURO screws provided making sure top surfaces are flush as shown. (Figure G).
7. Assemble the back panel with the support panel to the end panel with support panel using EURO screws provided making sure the top surfaces are flush as shown. (Figure H).

Figure E

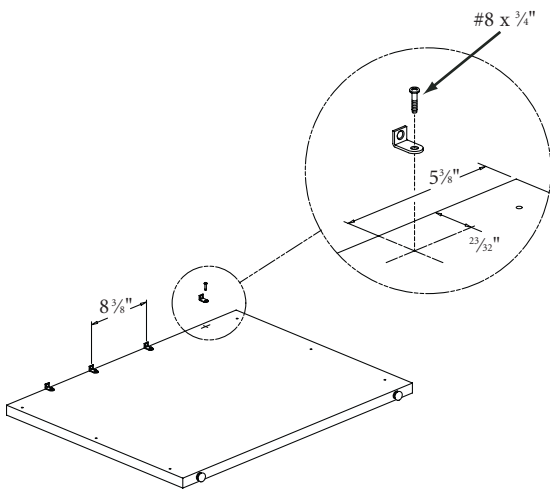


Figure F

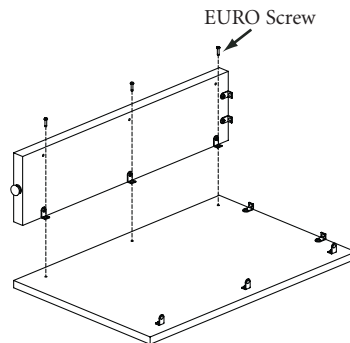


Figure G

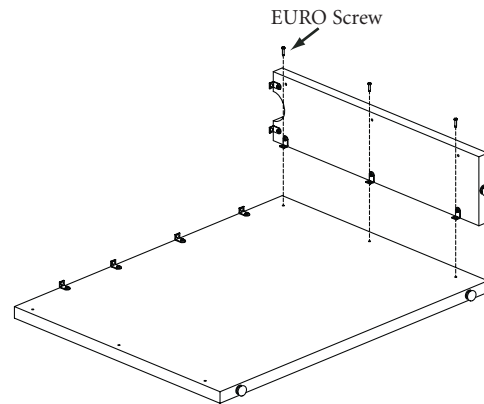


Figure H

