

Priority

U-Top, P-Top with T-Support/ Column Base/Modesty Panel

Tools Required

- Screw Gun
- #2 Phillips Head Bit
- Tape Measure
- Square
- Pencil

Package Contents

- #8 x $\frac{5}{8}$ " Panhead Screws
- #8 x $\frac{5}{8}$ " Flathead Screws
- Hinges

Installation

Note: Modesty panels can only be used with the $\frac{1}{2}$ round base or the square reeded base. If used with the square reeded base the modesty panel must be offset from the underside of the work surface $\frac{1}{4}$ " to allow clearance for the column base flange.

P or U Top Instructions:

1. P tops or U tops can be configured either as work returns or as desking elements. These tops should never be used as freestanding furniture. (Figure A).
2. P tops or U tops will have one of the column bases shown. (Figure B).
3. P tops or U tops will have a T-support or use an end panel/modesty panel combination. (Figures C and D).

Support Column Base Instructions:

1. P tops or U tops will have one of the column bases shown. (Figure B).
2. The $\frac{1}{2}$ round base will need L-brackets attached to its diameter at the top edge flush with the mating surface. (Figure B).
3. All column bases will be located on center of the worksurface radius. (Figure D).

Figure A

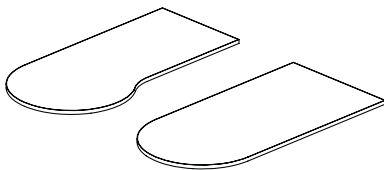


Figure B

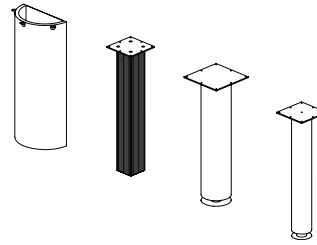


Figure C


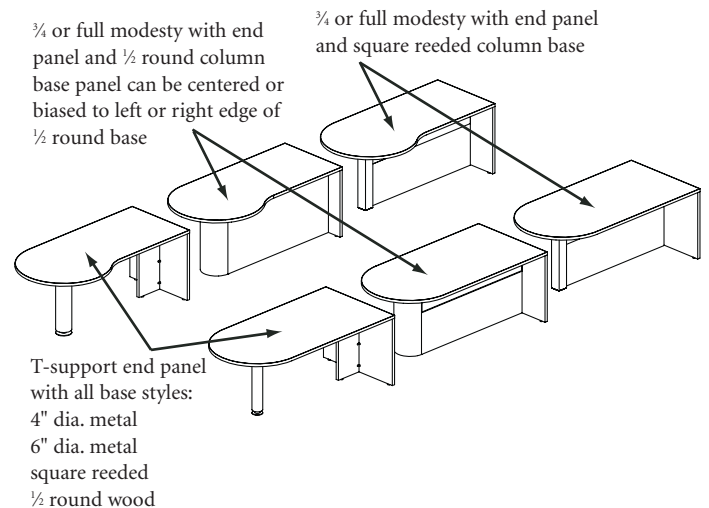


Figure D

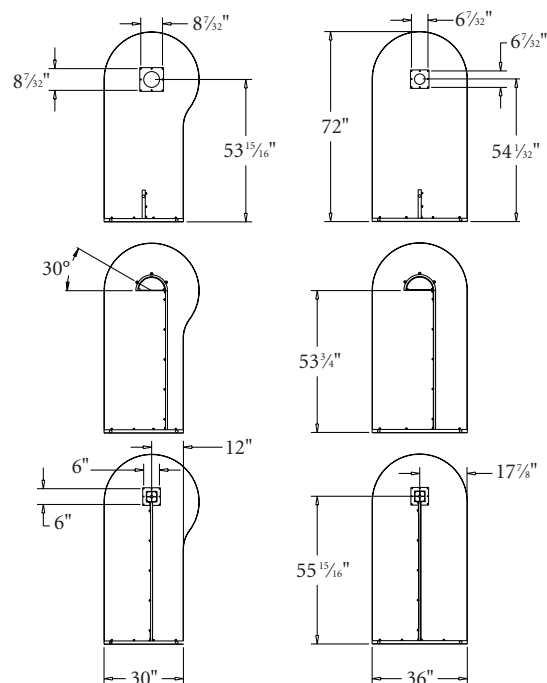

Priority

Installation (continued)

Modesty Panel Instructions:

1. Attach L-brackets to full modesty panel in the approximate locations shown. Flush with the outside edges. If the modesty panel is to be attached to a work surface with the square reeded base, the L-brackets need to be off-set $\frac{1}{4}$ " in to allow clearance for the base mounting flange. (Figure E).

End Panel Instructions:

1. Attach L-brackets to the end panel approximately where shown. (Figure F).

T-Leg Support Instructions:

1. Attach L-brackets to the support panel approximately where shown. (Figure G).
2. Attach the support panel to the end panel centered side to side as shown. (Figures H and I).

Figure E

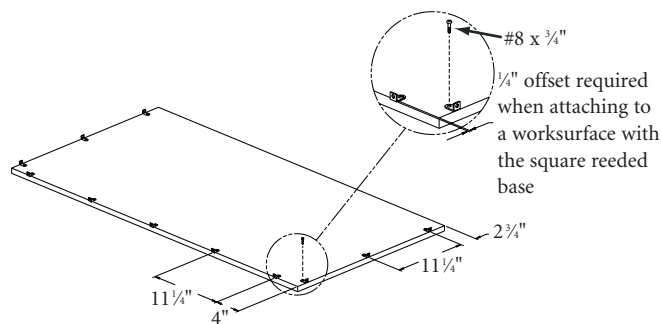


Figure F

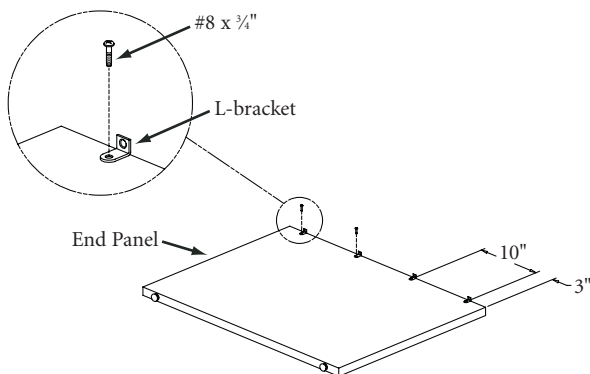


Figure G

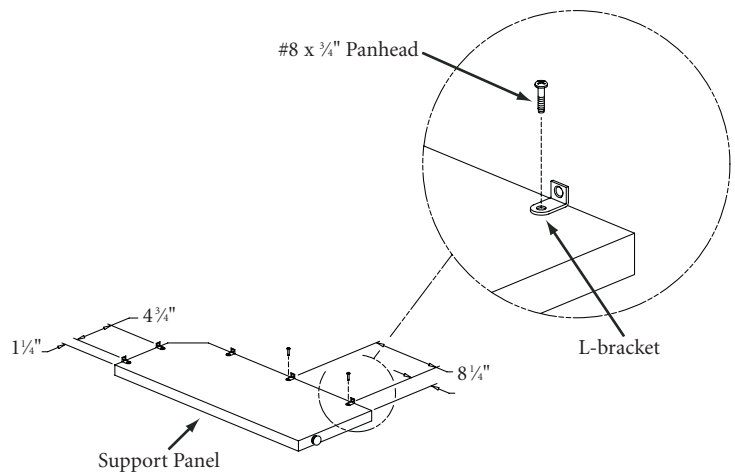


Figure H


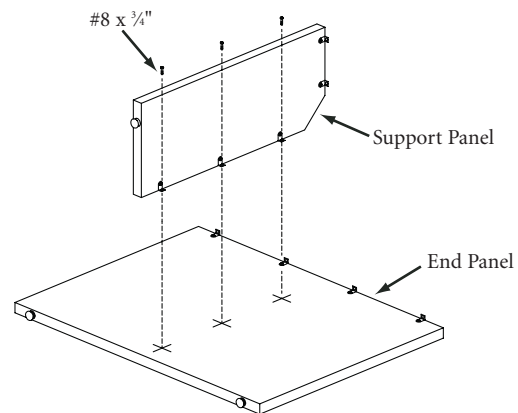


Figure I

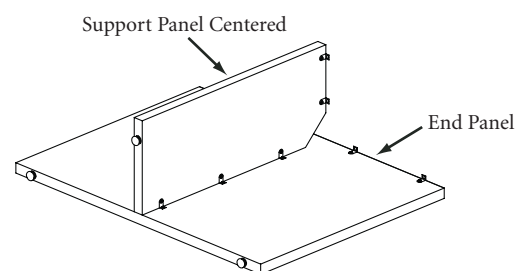

Priority

Installation (continued)

T-Leg Support and Column Base to Worksurface Instructions:

1. Attach T-leg support and column base to the worksurface as shown. (Figures J and K).

End Panel/Modesty Panel and Column Base to Worksurface Instructions:

1. Attach the end panel to the worksurface as shown. (Figures D, L, M, N, and O).
2. Measure, mark and attach the column base centered on the worksurface radius as shown. (Figures D, L, M, N, and O).
3. Attach either the full modesty panel or the $\frac{3}{4}$ modesty panel as shown. (Figures D, L, M, N, and O).

Figure J

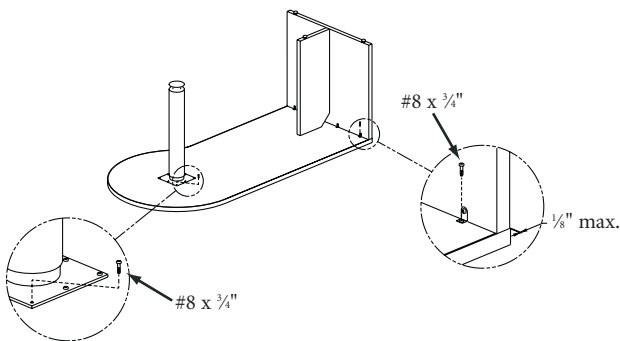


Figure K

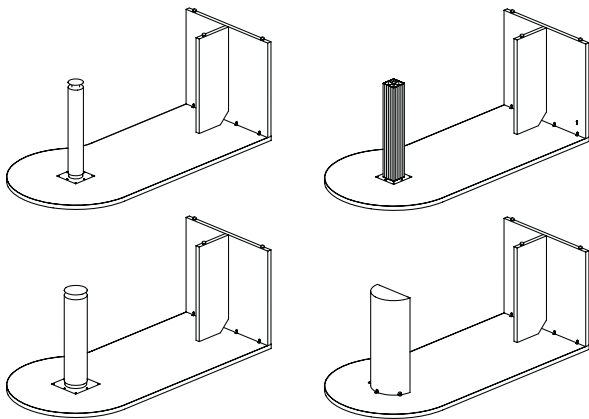


Figure L

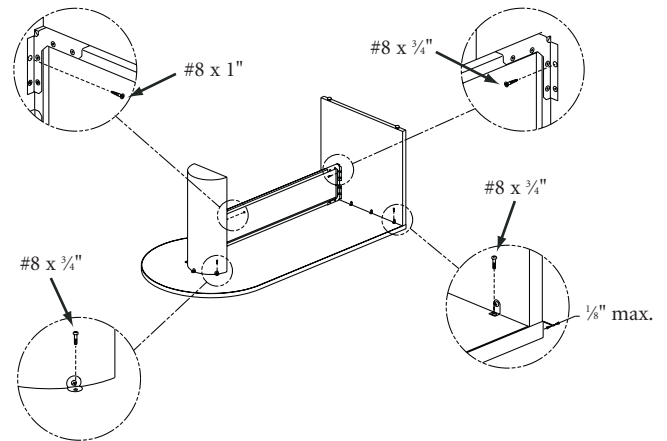


Figure M


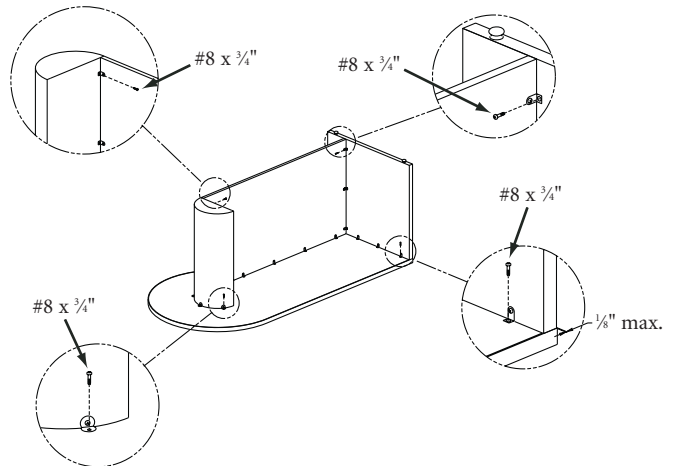


Figure N

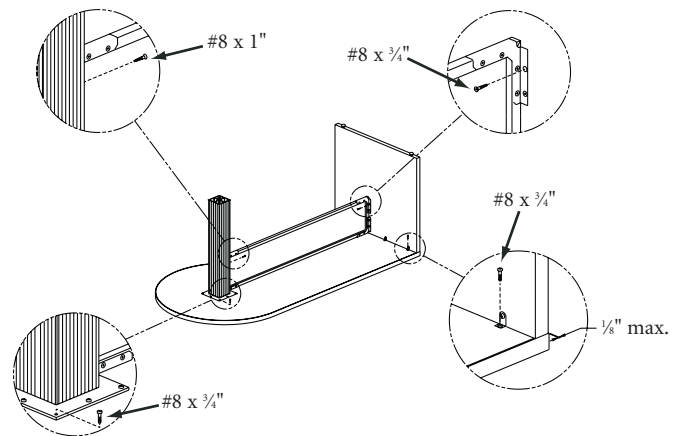

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent.
If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball® Office

Priority

Figure O


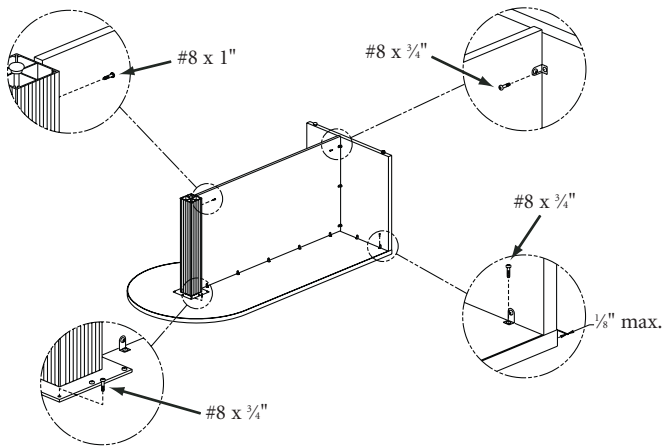


Figure P

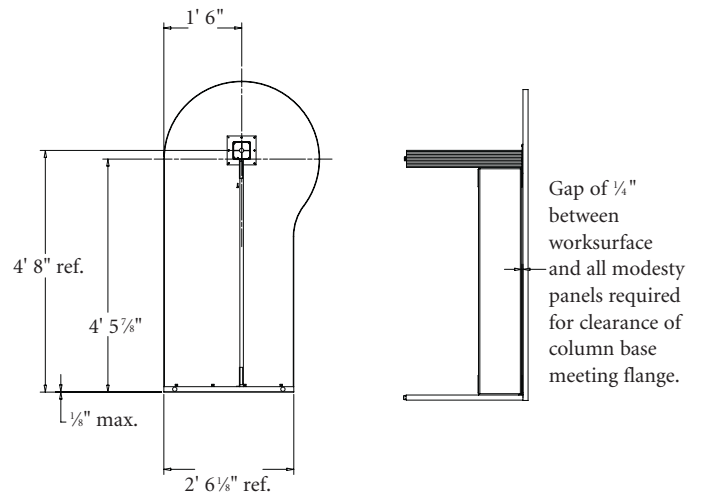

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent.
If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball®Office