

Priority

Support Panel

Tools Required

- Screwgun
- #2 Phillips Head Bit
- Tape Measure
- Level

Package Contents

- #8 x $\frac{3}{4}$ " Panhead Screws
- #8 x 1" Panhead Screws
- L Brackets

Installation

1. An undersurface support panel is used to provide added support in the center of long worksurfaces where conventional support methods are not possible. These are required when kneespace area is 48" or more. (Figure A).
2. The undersurface support panel comes with (5) L brackets. The brackets can be attached to either side of the panel using the #8 x $\frac{3}{4}$ " panhead screws provided. It is then attached to the underside of the worksurface using #8 x 1" panhead screws. (Figure B).
3. L brackets along back edge are only needed if support is used with modesty panel.

Figure A

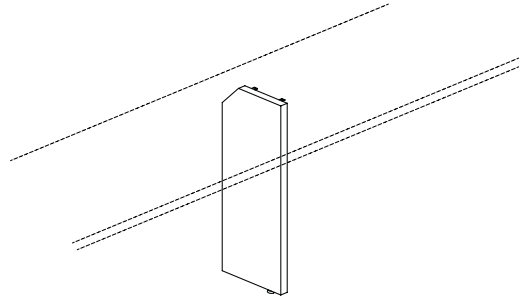


Figure B

