

# Priority

## Modesty Panel to Return

### Tools Required

- Screw Gun
- #2 Phillips Head Bit
- Tape Measure
- Pencil

### Package Contents

- Hinges
- #8 x  $\frac{5}{8}$ " Panhead Screw

### Installation

#### Modesty panel:

1. Attach hinges to modesty panel using pre-drilled holes. Do not tighten. (Figure A).
2. Cut felt strip to appropriate size to fit the left and right edge of the modesty panel.
3. Remove protective backing from felt strip and attach felt to each edge of modesty panel.

#### Modesty Panel to Credenza:

1. Align modesty panel to dimension shown front to back with credenza, measure and mark hinge location. (Figure B).
2. Attach modesty panel with hinges to credenza as shown. (Figure C).
3. Tighten all fasteners.

Figure A

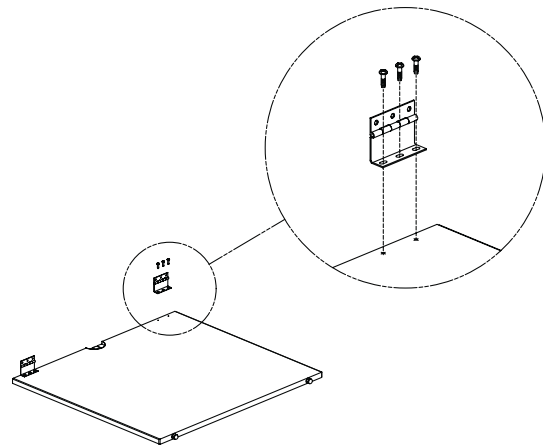


Figure B

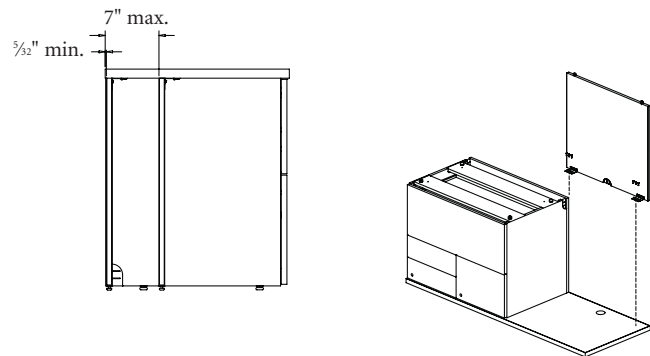


Figure C

