

Priority

Legs to Worksurface Shapes

P Top

Racetrack Top

Round Top

Extended Top

Rectangle Top

Arc Top

Elliptical Top

Kidney Shape Top

Tools Required









- Screw Gun
- #2 Phillips Head Bit
- Tape Measure
- Square
- Pencil

Package Contents

- #10 x 1 Panhead Screws

Installation

1. Component worksurface may be supported using many different types of table legs. As a general rule, the center of the leg is located 4" from the edge of a flat rim, and 5" from the edge of a knife edge.
2. Place the worksurface on a clean, soft surface, underside facing up. Mark the leg locations on the underside of the top. Attach table legs using #10 x 1" panhead screws provided.

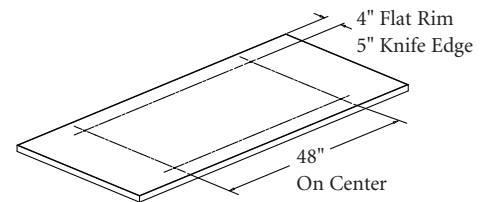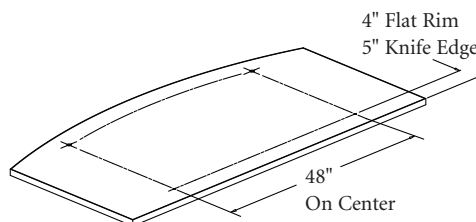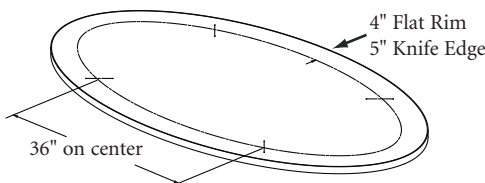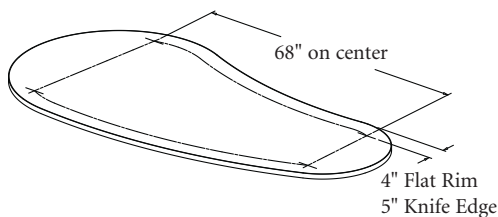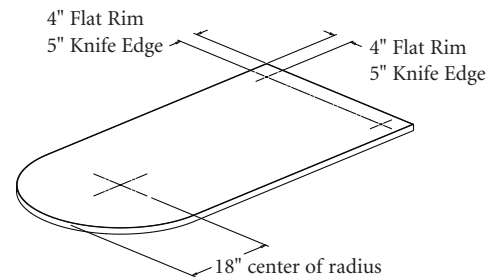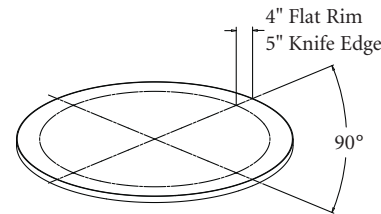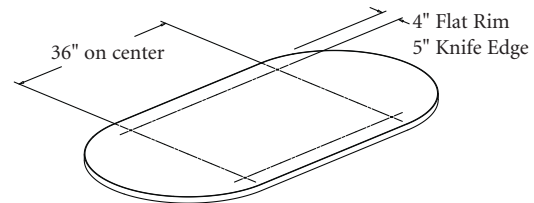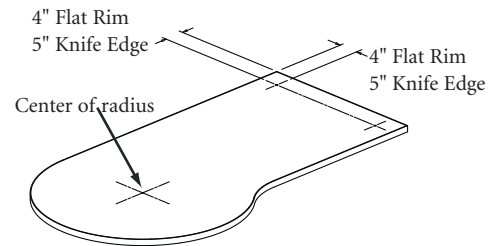

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball®Office