

Priority

Modesty Panel to Credenza

Tools Required

- Screw Gun
- #2 Phillips Head Bit
- Tape Measure
- Pencil

Package Contents

- Hinges
- #8 x $\frac{5}{8}$ " Panhead Screw

Installation

Modesty Panel:

1. Attach hinges to modesty panel using pre-drilled holes. Do not tighten. (Figure A).

Modesty Panel to Credenza:

1. Align modesty panel, measure and mark hinge location. (Figure B).
2. Attach modesty panel with hinges to credenza as shown. (Figure C).
3. Tighten all fasteners.

Figure A

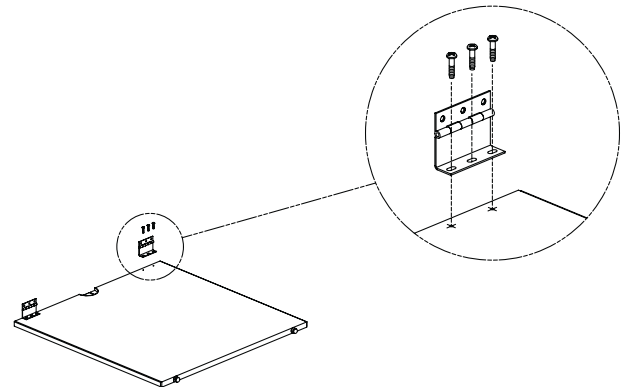


Figure B

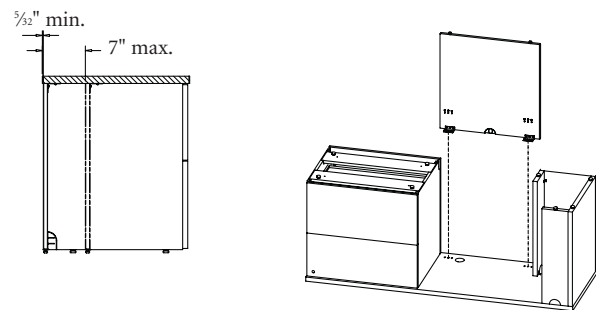


Figure C

