

Definition & Priority™

Slat Wall Tile

Tools Required

- Drill/Screw Gun
- Phillips Screwdriver #2 Bit, Hardened
- Level

Package Contents

- (14) #8 x $\frac{5}{8}$ " Panhead Screws
- (3) Mounting Brackets

Installation

1. Slat tile may be attached to inside face of back panel on Highback Organizer using supplied mounting brackets and screws. (Figure A).
2. Attach three mounting brackets (beveled edge up) at recommended height of 14" from bottom edge of back panel to bottom edge of mounting brackets and spaced horizontally to match mating brackets on back of slat tile. Brackets to be positioned level and attached using supplied #8 x $\frac{5}{8}$ " long screws (four screws per bracket). (Figure B).
3. Place slat tile against back panel and above secured mounting brackets. Lower slat tile onto mating mounting brackets until fully engaged.
4. Using #8 x $\frac{5}{8}$ " screws, secure bottom corners of slat tile by inserting one screw in each pre-bored hole located in lower corners. (Figure C).

Figure A

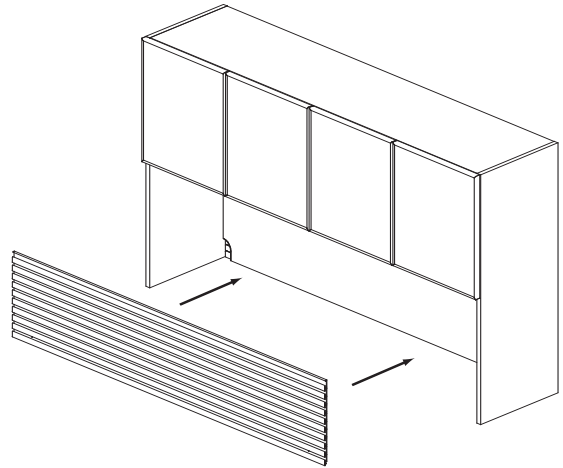


Figure B

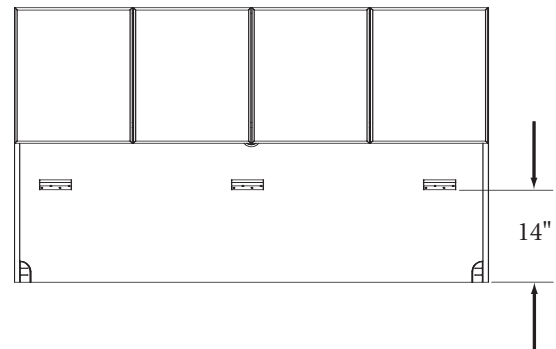


Figure C

