

Wire Basket

Tools Required

- Box Cutter/Utility Knife
- Cordless Drill w/#2 Phillips head bit drive

Hardware Required

- 2 - Wire Basket (**45F31CBS**, **45F14CBS**)
- 3-5 - Pan Head Phillips #10 X 5/8" wood screws

Installation

1. Using a knife open box removing all components carefully and place aside. See components in **Figure A**.
2. Position cable basket in desired location, see **Figure B** for **possible mount options**.
3. Fasten wire basket using drill/Phillips bit and Pan head Phillips #10 wood screws in between 2 cross wires, securing basket See **Figure C**.

Figure B

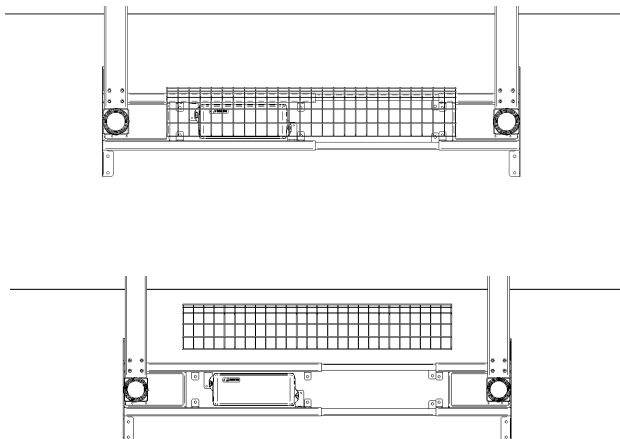


Figure A

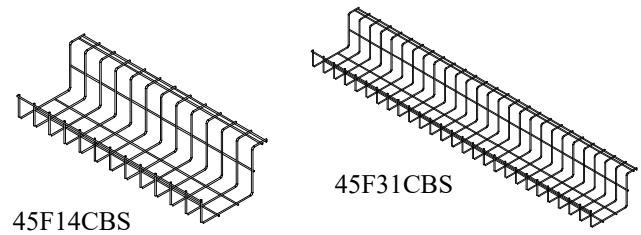


Figure C

