

ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

INTRODUCTION

These instructions are written as a guide to be used by professional installers when installing Tarkett products. These instructions, combined with our adhesives and flooring products, create a system. Utilizing this system will ease the installation process and provide the customer with a completed product that will perform to its intended purpose. Always visit www.tarkettna.com for the most current installation and maintenance instructions. Technical videos and tip sheets are also available. Contact Tarkett Technical Services at (800)-899-8916 with any questions.

HANDLING AND STORAGE

1. All Tarkett products must be stored in an indoor, climate controlled space and be protected from the elements. Temperature must be maintained between 65°F (18.3°C) and 85°F (29.4°C) with a relative humidity between 40% and 60%.
2. All cartons must be stored on a dry, flat, level surface. Cartons must be carefully stacked squarely on top of one another and never be stored on edge. Take caution not to over stack the cartons and never double stack pallets. Always protect carton corners from damage by tow-motors and other traffic.
3. Do not flex, bend, or stand stair treads on end.
4. Tarkett flooring and adhesives must be site conditioned at room temperature for 48 hours prior to, during, and after installation. Room temperature must be maintained between 65°F (18.3°C) and 85°F (29.4°C) and the ambient relative humidity must be between 40% and 60%. We strongly recommend the permanent HVAC system be fully operating. **NOTE:** If a system other than the permanent HVAC source is utilized, it must provide proper control of both temperature and humidity to recommended or specific levels for the appropriate time duration as stated above.
5. Once the installation is completed, the service temperature of the space must never fall below 55°F (12.8°C).
6. In areas that are exposed to intense or direct sunlight, the product must be protected during the conditioning, installation, and adhesive curing periods, by covering the light source.
7. Tarkett products are not recommended for exterior use. Exposure to excessive UV rays can result in fading, degradation, and/or color variation.
8. The highest quality of materials and workmanship is employed in the manufacture of Tarkett Flooring and careful inspection is made before shipment. A quality installation is the responsibility of the installer. It is the installer's responsibility to verify the accuracy of the order and to ensure the materials are checked for damage, defects, and satisfactory color match. An authorized Tarkett distributor or Tarkett representative must be notified of any defects before installation proceeds. **Tarkett will not pay for labor or material costs claimed on installed materials with visual defects.**
9. Tarkett cannot accept responsibility for any loss or damage that may result due to processing or working conditions and/or workmanship outside our control.
10. Users are advised to confirm the suitability of this product by their own tests.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

GENERAL SUBFLOOR PREPARATION

1. **All staircases** must be permanently dry, clean, smooth, and structurally sound. The surface must be free of all dust, loose particles, solvents, paint, grease, oil, wax, alkali, sealing/curing compounds, old adhesive, and any other foreign material, which could affect the installation and adhesive bond to the substrate. Permanent and non-permanent markers, pens, crayons, paint, or similar marking tools used to mark the substrate or the back of the resilient flooring material will cause migratory staining. Subfloor contamination or markings that bleed through the flooring material causing discoloration or staining are excluded from the Tarkett Limited Warranty. All substrate contaminants must be mechanically removed prior to the installation of the flooring material. **NOTE: Do not use liquid solvents or adhesive removers.**

Caution: Do not use oil based sweeping compounds.

Fill all depressions, cracks, and other surface irregularities with a good quality Portland cement based underlayment patching compound appropriate for this purpose.

Tarkett does not recommend installing over existing resilient floors. All existing flooring and adhesives must be mechanically removed prior to installing the new flooring material – **Do not use chemical adhesive removers or solvents.** Refer to the Resilient Floor Covering Institute (RFCI), Recommended Work Practices for Removal of Existing Resilient Flooring for best work practices.

Caution: Do not install stair treads in areas that are exposed to grease, oil or animal fats.

Caution: Some resilient flooring products and adhesives contain "asbestos fibers" and special handling of this material is required.

2. **Concrete staircases** must be constructed as recommended by the American Concrete Institute's ACI 302.2 Guide for Concrete Slabs that Receive Moisture-Sensitive Flooring Materials and prepared in accordance with ASTM F 710 Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring.

GENERAL INSTALLATION

1. Tarkett recommends that the installation of new stairwell materials not be performed until all the other trades have completed their work. Proper precautions must be taken during and after the installation process to avoid damage to the newly installed stairwell materials.
2. Tarkett StairTreads, Nosings, Risers, and Stringers are available in convenient lengths and sizes, but normally, trimming will be required to obtain proper fit on each stair.
3. If the shape of the step does not conform to the shape of the stair tread or nosing, and cannot be altered to conform, then we do not recommend the installation of our products.

Do not install Tarkett flooring over expansion joints, or other moving joints in the substrate. These joints must be respected and should not be filled with products that are not intended for that purpose. Contact an expansion joint cover manufacturer to meet specific flooring conditions.

A pH test for alkalinity must be conducted on all concrete subfloors. Acceptable pH range of the adhesive can be found in the adhesive section below, on the adhesive label, and in the adhesive specifications online. Results must not exceed the limits of the adhesive. If the test results are not within the acceptable range, the installation must not proceed until the problem has been corrected.

3. **Wood staircases** must be firmly nailed and sanded flat. Countersink nail heads and fill depressions, joints, cracks, gouges, and chipped edges with a good quality Portland cement based patching compound designed for this purpose.

Do not install over OSB (Oriented Strand Board), particle board, chipboard, lauan or composite type underlayments.

4. **Terrazzo and Ceramic staircases** surface must be free of all glaze and waxes. Remove or replace all loose tiles and clean the grout lines. Use a good quality Portland cement based leveling compound to fill all grout lines and other depressions.

5. **Steel staircase surface** must be mechanically abraded to assist with the adhesive bond. The staircase must be cleaned to remove all dirt, rust and other contaminants that could affect the adhesive or the bond of the flooring material to the substrate. Surface must be primed with a rust inhibitor. It is important to follow the non-porous installation instructions when installing over metal.

6. **An adhesive bond test** must be performed using the actual flooring materials and adhesive to be installed. The test areas must be a minimum of 12" wide and cover the entire depth of the step surface and height of the riser (if applicable) and remain in place for at least 72 hours and then evaluated for bond strength to the substrate.

4. Trimming on both sides of the tread may be required to obtain proper fit and pattern match to adjacent steps.

5. **Wide staircases**, which require butting multiple lengths of product, will require additional planning and dry fitting prior to adhesive installation to ensure proper pattern alignment.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

STRINGER INSTALLATION

1. **Adhesive Application:** See adhesive chart below and follow adhesive label instructions for proper use.

2. **Stringer Installation:**

- a. Stringers are applied to the vertical surface adjacent to the staircase and installed prior to stair treads, nosings, and risers.
- b. Use scribing felt or other appropriate material to make a template of the step stringer. Rough cut the template and use releasable masking tape to affix the template to the step stringer.
- c. Using a carpenter's square, dividers or other appropriate tool, transfer the step profile onto the template.
- d. Lay the template over the stringer material and transfer the pattern onto the material. Cut the stringer material and check the fit to the staircase prior to applying the adhesive.
- e. **If the wall surface is porous**, install stringer utilizing Tarkett 960 Wall Base Adhesive. Follow the directions on the container for proper trowel size and application.

f. **If the wall surface is non-porous**, apply Tarkett 946 Premium Contact Adhesive to both the wall surface and the back of the stringer material. Allow the adhesive to thoroughly "dry-to-touch". Carefully position the stringer material on the wall surface. **Caution: Allow the 946 adhesive to dry to the touch with no transfer to the finger. Once the adhesive reaches the "dry-to-touch" state, the stringer must be installed within 45 minutes and immediately rolled.**

Note: Once contact is made to the wall surface, the stringer material cannot be repositioned.

- g. The stringer must be rolled with a small hand roller to ensure adhesive transfer.
- h. Inspect the stringer surface, remove any excess adhesive.

ANGLE FIT STAIR TREAD AND RISER INSTALLATION

1. **Fitting the Stair Tread:**

- a. Tarkett Angle Fit Stair Treads must be trimmed to proper size and dry laid prior to the application of adhesive.
- b. Since each step on a staircase can vary slightly in width, depth, and squareness, Tarkett recommends scribing each tread and riser to ensure proper fit on the step.
- c. Measure the width of the step and place a pencil mark on the step's riser indicating the center of the step. Next, measure the length of the stair tread and mark the center point at the back of the tread where the tread meets the riser. **NOTE:** When installing patterned treads the same point of the pattern should always fall at the center point of each tread for visual alignment.
- d. To fit the stair tread to the depth of the step, place a 2 x 4 under the nose of the tread and position on step. If the tread is still deeper than the step, use the 4" side of the 2 x 4 or increase the size of the spacer, until the back of the stair tread is away from the riser.
- e. Set the dividers the width of the spacer (i.e.: 2 x 4), scribe, and cut the back of the stair tread. To cut the width, position the stair tread on the step with the right hand side next to the stringer.
- f. Utilizing a set of dividers, span the needles across the two centerline marks. Move to the right hand side of the step. Place one needle on the stringer and the other on the tread. Start at the back of the tread and pull the dividers forward. Keep the needle firmly in contact with the stringer while exerting adequate downward force to scribe the tread and nose of the material.
- g. Following the scribe line, cut the material with a utility knife.

h. Reposition the tread on the left hand side of the step and repeat the same procedure to fit the left side of the tread.

i. After fitting the stair tread as described above, if the tread has Grit Tape strips, cut strips back 1/16" on each side of tread to allow for expansion. After installation of the tread, roll the Grit Tape strips to ensure adhesion.

j. Position the stair tread on the step. Tread must be cut to have a slight gap, maximum 1/32" (.793mm). **Tread must not be compression fit.**

2. **Fitting the Riser:**

- a. **Using only Tarkett .080" Vinyl Riser material**, Tarkett Risers must be trimmed to proper size and dry laid prior to the application of adhesive.
- b. Following the previous directions for scribing the width of the stair tread, utilize the same centerline mark on the step, position the riser, scribe both sides, and cut.
- c. Set the trimmed stair tread and riser into position. Place the riser material onto the fitted tread material. The toe or bottom portion of the riser should set uniformly on the tread surface. While holding the riser material into position cut the height of the riser material to the top of the step riser surface using a sharp utility knife.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

3. Fitting One Piece Tread Riser Combination:

- a. Tarkett recommends installing a CFS-00-A Cove Filler Strip where the tread and riser intersect on the step (see figure 4 on page 10). The filler strip must be installed prior to trimming the one piece tread riser combination. The cove filler strip must be trimmed to fit the width of the stair and installed with Tarkett 946 Premium Contact Adhesive. Apply the adhesive to the back of the cove filler strip and where the tread and riser intersect. Allow the adhesive to dry to the touch. Place cove filler strip in position and roll with a small hand roller
- b. Following the procedures described in “Fitting the Stair Tread” above, scribe the tread and riser portions at the same time.
- c. After fitting the stair tread as described above, if the tread has Grit Tape strips, cut strips back 1/16” on each side of tread to allow for expansion. After installation of the tread, roll the Grit Tape strips to ensure adhesion.
- d. Set the trimmed stair tread and riser in place. Tread must be cut to have a slight gap, maximum 1/32” (.793mm). **Tread must not be compression fit.**
- e. While holding the trimmed stair tread and riser into position cut the height of the riser to the top of the step riser surface using a sharp utility knife (see figure 3 on page 9).

4. Adhesive Application:

Standard Stair Tread using 965 Flooring and Tread Adhesive

- a. Prior to applying adhesive, wipe the back of the tread and riser material with denatured alcohol to remove any contaminants which may interfere with the adhesive bond. (Follow manufacturer's precautions when using denatured alcohol.)
- b. If the angle of the step riser does not allow the stair tread nose to conform (see figure 1 on page 9), adhesive must be used to achieve a tight fit. To adhere the nose of the stair tread directly to the step riser surface, apply a uniform coat of Tarkett 946 Premium Contact Adhesive to the nosing area of the stair tread and step riser and allow the adhesive to dry to the touch. **When 946 Premium Contact Adhesive is required, the tread nose must be adhered to the step riser surface.**
- c. For a step nosing surface in need of repair or with a radius greater than 1/2” (12.70mm) utilize Tarkett 930 Two-Part Epoxy Caulking Compound (see figure 2 on page 9). Refer to the provided Stair Tread Template located in the tread carton.
- d. **Important:** Step surface porosity must be checked to determine if the substrate is porous or non-porous prior to applying 965 adhesive.
- e. **For Porous Step Surfaces:** Trowel the 965 Flooring and Tread Adhesive with a 1/16” Square-notch trowel onto the tread portion of the step surface. Keep adhesive back 1/2” from the step edge to provide a bonding area for applications requiring the use of 930 Two-Part Epoxy Caulking Compound. Allow the 965 Flooring and Tread Adhesive proper open time. Follow adhesive pail label instructions. **Open and working times are dependent on the ambient temperature, humidity, substrate porosity and temperature, and air movement. It is the installer's responsibility to modify the open and working time for jobsite conditions.**

f. **For Non-Porous Step Surfaces:** Trowel the 965 Flooring and Tread Adhesive with a 1/16” V-notch trowel onto the tread portion of the step surface. Keep adhesive back 1/2” from the step edge to provide a bonding area for applications requiring the use of 930 Two-Part Epoxy Caulking Compound. Allow the 965 Flooring and Tread Adhesive proper open time. Follow adhesive pail label instructions. The stair tread **MUST** be placed into **semi-wet** adhesive to obtain **transfer** of adhesive to the back of the tread which is vital for a successful installation.

g. In situations when Tarkett 930 Two-Part Epoxy Caulking Compound is required (see 4.c.), gun an adequate amount of Tarkett 930 Two-Part Epoxy Caulking Compound into the nose of the stair tread to completely fill the void between the internal angle of the stair tread and external edge of the stair step. **Caution: Improper application of the caulking compound can interfere with the adhesion of the 965 and 946 (if required) adhesives.**

h. Set the stair tread nose into its proper position on the step while lifting the back of the tread slightly to avoid adhesive contact. With the nose in position lay the tread into place until the nose is tight to the riser.

i. Make certain that the nosing portion of the stair tread is fit tight against the riser. After installation is complete, firmly roll with a small hand roller.

j. **Important:** If adhesive is allowed to remain uncovered, after the initial drying period, for periods longer than 45 minutes, a loss of adhesion strength will occur. Care should be taken by the installer not to spread more adhesive than can be worked within the 45 minute time frame. Adhesive transfer to the back of the stair tread is critical for a successful installation.

5. Power Tape Application:

Standard Stair Tread using Power Tape

- a. Prior to applying Power Tape, wipe the back of the tread and nosing with denatured alcohol to remove any contaminants which may interfere with the adhesive bond. (Follow manufacturer's precautions when using denatured alcohol.)
- b. If the angle of the step riser does not allow the stair tread nose to conform (see figure 1 on page 9), adhesive must be used to achieve a tight fit. To adhere the nose of the stair tread directly to the step riser surface, apply a uniform coat of Tarkett 946 Premium Contact Adhesive to the nosing area of the stair tread and riser edge and allow the adhesive to dry to the touch. **When 946 Premium Contact Adhesive is required, the tread nose must be adhered to the step riser.**
- c. Apply the 9-1/2” wide strip of Power Tape approximately 1/2” back from the internal angle of the stair tread nose.
- d. Thoroughly roll the tape to ensure proper bonding to the back of the stair tread. Trim off excess Power Tape along the edges of the stair tread.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

e. For a step surface nosing in need of repair or with a radius greater than 1/2" (12.70mm) utilize Tarkett 930 Two-Part Epoxy Caulking Compound (see figure 2 on page 9). Refer to the provided Stair Tread Template located on the tread carton. Gun an adequate amount of Tarkett 930 Two-Part Epoxy Caulking Compound into the nose of the stair tread to completely fill the void between the internal angle of the stair tread and external edge of the stair step. **Caution: Improper**

application of the caulking compound can interfere with the adhesion of the Power Tape and 946 (if required) adhesives.

f. Remove release liner from the Power Tape. **WARNING: Once removed, release paper may be slippery. Please keep work area clean and free of release paper.**

g. Set the stair tread nose into its proper position. With the nose in position lay the tread into place until the nose is tight to the step edge. If 946 Premium Contact Adhesive is required firmly roll the nosing with a small hand roller.

h. **Important:** If 946 Premium Contact Adhesive is allowed to remain uncovered, after the initial drying period, for periods longer than 2 hours, a loss of adhesion strength will occur. Care should be taken by the installer not to spread more adhesive than can be worked within the 2 hour time frame.

i. Make certain that the nosing portion of the stair tread is tight against the step nosing.

j. Start at the front edge of the stair tread and press the tread down firmly and uniformly onto the step surface from front to back.

k. When the tread is in its final position, roll the entire tread surfaces with a hand roller to ensure proper adhesion to the step surfaces.

i. Riser Material

a. For riser installations on **porous surfaces**, apply Tarkett 960 Wall Base Adhesive to the ribbed surface (back) of the riser material with a 1/8" square-notched trowel. The adhesive must cover 80% of the back of the riser material. Leave a 1/4" (6.35mm) uncovered space at the top of the riser to prevent the adhesive from oozing to the surface of the riser.

b. For riser installations on non-porous surfaces (i.e.: metal, epoxy paint, ceramics, etc.) apply Tarkett 946 Premium Contact Adhesive to both the step riser surface and the back of the riser material. Follow the adhesive label instructions for proper use.

c. Position riser and roll with a small hand roller. **Note:** Once contact is made to the riser surface, the riser material cannot be repositioned.

6. One-Piece Tread and Riser Combination using 965 Flooring and Tread Adhesive

a. Prior to applying adhesive, wipe the back tread and nosing with denatured alcohol to remove any contaminants which may interfere with the adhesive bond. (Follow manufacturer's precautions when using denatured alcohol.)

b. If the angle of the step riser does not allow the stair tread nose to conform (see figure 1 on page 9), adhesive must be used to achieve a tight fit. To adhere the nose of the stair tread directly to the step riser surface, apply a uniform coat of Tarkett 946 Premium Contact Adhesive to the nosing area of the stair tread and step riser and allow the adhesive to dry to the touch. **When 946 Premium Contact Adhesive is required, the tread nose must be adhered to the step riser surface.**

c. For a step nosing surface in need of repair or with a radius greater than 1/2" (12.70mm) utilize Tarkett 930 Two-Part Epoxy Caulking Compound (see figure 2 on page 9). Refer to the provided Stair Tread Template located in the tread carton.

d. **Important:** Step surface porosity must be checked to determine if the substrate is porous or non-porous prior to applying 965 Flooring and Tread Adhesive.

e. **For Porous Step Surfaces:** Trowel the 965 Flooring and Tread Adhesive onto the tread portion of the step surface using a 1/16" square-notched trowel. Keep adhesive back 1/2" from the step edge to provide a bonding area for applications requiring the use of 930 Two-Part Epoxy Caulking Compound. Allow the 965 Flooring and Tread Adhesive proper open time. Follow adhesive pail label instructions. **Open and working times are dependent on the ambient temperature, humidity, substrate porosity and temperature, and air movement. It is the installer's responsibility to modify the open and working time for jobsite conditions.**

f. **NOTE:** If step riser is non-porous Tarkett 946 Premium Contact Adhesive must be used. Follow the adhesive label instructions for proper use.

g. **For Non-Porous Step and Riser Surfaces:** Trowel the 965 Flooring and Tread Adhesive onto the tread portion of the step using a 1/16" V-notch trowel. Keep adhesive back 1/2" from the step edge to provide a bonding area for the 930 Epoxy Caulking Compound. Allow the 965 Flooring and Tread Adhesive proper open time. Follow adhesive pail label instructions. The stair tread or nosing **MUST** be placed into semi-wet adhesive to obtain a transfer of adhesive to the back of the tread which is critical for a successful installation.

h. Apply Tarkett 946 Premium Contact Adhesive to both the step riser surface and the back of the riser material. Follow the adhesive label instructions for proper use.

i. In situations when Tarkett 930 Two-Part Epoxy Caulking Compound is required (see 4.c.), gun an adequate amount of Tarkett 930 Two-Part Epoxy Caulking Compound into the nose of the stair tread to completely fill the void between the internal angle of the stair tread and external edge of the stair step. **Caution: Improper application of the caulking compound can interfere with the adhesion of the 965 and 946 (if required) adhesives.**

j. Fold the riser portion of the one-piece unit so that the show surface of the riser is laying on the show surface of the stair tread. Next, position the stair tread into its proper position on the stair, beginning at the nose and pushing back firmly and down as tightly as possible. When installing, lift the back of the tread slightly at the riser until the nose is in position then firmly press the tread portion into place.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

k. Apply adequate pressure at the cove filler strip to ensure uniform contact at the base of the riser and then proceed with the riser installation.

l. Lift the riser portion of the unit and install from the bottom up. After installation is complete, firmly roll with a small hand roller. Make certain that the nosing portion of the stair tread is fit tight against the step nosing.

m. **Important:** If adhesive is allowed to remain uncovered, after the initial drying period, for periods longer than 45 minutes, a loss of adhesion strength will occur. Care should be taken by the installer not to spread more adhesive than can be worked within the 45minute time frame. Adhesive transfer to the back of the stair tread is critical for a successful installation.

7. One-Piece Tread and Riser Combination using Power Tape

Note: CFS-00-A Cove Filler Strip must have been installed prior to the fitting process (see figure 4 on page 10).

a. Prior to applying Power Tape, wipe the back tread and nosing with denatured alcohol to remove any contaminants which may interfere with the adhesive bond. (Follow manufacturer's precautions when using denatured alcohol.)

b. If the angle of the step riser does not allow the stair tread nose to conform (see figure 1 on page 9), adhesive must be used to achieve a tight fit. To adhere the nose of the stair tread directly to the step riser, apply a uniform coat of Tarkett 946 Premium Contact Adhesive to the nosing area of the stair tread and step riser and allow the adhesive to dry to the touch. **When 946 Premium Contact Adhesive is required, the tread nose must be adhered to the step riser surface.**

c. Apply one length of the 9-1/2" wide strip of Power Tape approximately 1/2" back from the internal angle of the stair tread nose and another length of Power Tape across the riser portion of the stair tread.

d. Thoroughly roll the tape to ensure proper bonding to the back stair tread and riser. Trim off excess Power Tape along the edges of the stair tread as required.

e. For a step surface nosing in need of repair or with a radius greater than 1/2" (12.70mm) utilize Tarkett 930 Two-Part Epoxy Caulking Compound (see figure 2 on page 6). Refer to the provided Stair Tread Template located on the tread carton. Gun an adequate amount of Tarkett 930 Two-Part Epoxy Caulking Compound into the nose of the stair tread to completely fill the void between the internal angle of the stair tread and external edge of the stair step. **Caution: Improper application of the caulking compound can interfere with the adhesion of the Power Tape and 946 Premium Contact Adhesive.**

f. Fold the riser portion of the one-piece unit so that the show surface of the riser is laying on the show surface of the stair tread.

g. Set the stair tread nose into its proper position. With the nose in position lay the tread into place until the nose is tight to the step edge.

h. Make certain that the nosing portion of the stair tread is tight against the step nosing.

i. After placing the nosing portion of the stair tread to the step edge, carefully lift the back edge of the tread and riser sections and remove the release paper from the tread section only. **WARNING: Once removed, release paper may be slippery. Please keep work area clean and free of release paper.**

j. Start at the front edge of the stair tread and press the tread portion down firmly and uniformly onto the step surface from front to back.

k. Remove the release paper from the riser section of the tread and install the riser starting at the bottom and continuing up until the top of the riser is fitted tightly and uniformly to the bottom of the stair tread nose on the adjacent step. **WARNING: Once removed, release paper may be slippery. Please keep work area clean and free of release paper.**

l. When the tread is in its final position, roll the entire tread, riser and nosing surfaces (using 946 Premium Contact Adhesive) with a hand roller to ensure proper adhesion to the step surface

8. Clean up:

a. Inspect the tread and riser surfaces, remove any excess adhesive.

b. **Caution:** 930 Epoxy Caulking Compound cannot be removed when dried without resulting in damage to the stair tread/nosing material.

c. Foot traffic must be restricted for 12 to 24 hours after installation depending on temperature and humidity if 965 Tread and Flooring Adhesive, 930 Two-Part Epoxy Caulking Compound and/or 946 Premium Contact Adhesive were used.

d. Stair Treads must be swept or vacuumed to remove loose dirt and grit (Lightly damp mop if necessary).

e. All heavy traffic, rolling loads, furniture dollies, etc. must be restricted for a minimum of 72 hours after installation when using adhesives or caulking compound.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com



ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

ADHESIVE CLEAN UP

Excess adhesive should be removed during the installation process. 965 Flooring and Tread Adhesive

- Use a clean white cloth dampened with water to remove wet adhesive from floor covering and tools.
- Dried adhesive may require the use of denatured alcohol applied to a clean white cloth. (Follow manufacturer's precautions when using denatured alcohol.)

960 Wall Base Adhesive

- Use a clean white cloth dampened with water to remove wet adhesive from floor covering and tools.
- Dried adhesive may require the use of denatured alcohol applied to a clean white cloth. (Follow manufacturer's precautions when using denatured alcohol.)

MAINTENANCE

1. Wait 72 hours after installation before performing initial cleaning.
2. A regular maintenance program must be started after the initial cleaning.
3. Refer to Tarkett's Maintenance Instructions for complete details.

946 Premium Contact Adhesive

- Use a clean white cloth dampened with water to remove wet adhesive from floor covering and tools.
- Dried adhesive may require the use of denatured alcohol applied to a clean white cloth. (Follow manufacturer's precautions when using denatured alcohol.)

930 Epoxy Caulking Compound

- Before the adhesive sets, remove excess adhesive from flooring and clean tools with denatured alcohol applied to a clean white cloth. (Follow manufacturer's precautions when using denatured alcohol.)
- Do not allow adhesive to dry on the flooring surface.
- Removing dried adhesive may cause irreparable damage to the flooring surface.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com






ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

Products	Adhesive	Application and Coverage		Moisture / pH Limits			Notes
		Porous	Non-Porous	RH%	CaCl ₂	pH	
Angle Fit Stair	965 Flooring and Tread Adhesive	1/16 x 1/16 x 1/16 SQ 125 – 150 sq. ft. per gallon	1/16 x 1/16 x 1/16 V 150 – 175 sq. ft. per gallon	85%	7 lbs.	9	The 965 adhesive is sensitive to substrate porosity. Determine substrate porosity and follow the adhesive label instructions regarding porous and non-porous substrate drying times prior to the installation.
Angle Fit Stair Treads Risers	Power Tape	N/A	N/A	80%	5 lbs.	9	MUST not be used to adhere the nose to angled back risers.
Riser Stringer	960 Wall Base Adhesive	1/8 x 1/8 x 1/8 SQ 4" = 200-250 lf. 6" = 100-150 lf. 2.5" = 300-350 lf.	USE 946 PREMIUM CONTACT ADHESIVE	N/A	N/A	N/A	
Angle Fit Stair Tread Nose Riser Stringers	946 Premium Contact Adhesive	Applied with Brush or Roller 1 kg (.95 quart) unit 24 – 36 sq. ft. 6 kg (1.44 gallon) unit 144 – 215 sq. ft.	Applied with Brush or Roller 1 kg (.95 quart) unit 24 – 36 sq. ft. 6 kg (1.44 gallon) unit 144 – 215 sq. ft.	80%	5 lbs.	9	Refer to Section 4.) b. under the TrueFit STAIR TREAD AND RISER INSTALLATION Coverage based on both sides.

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com


ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

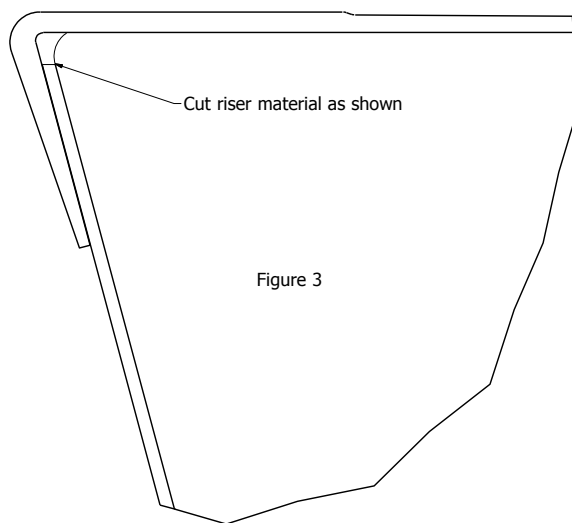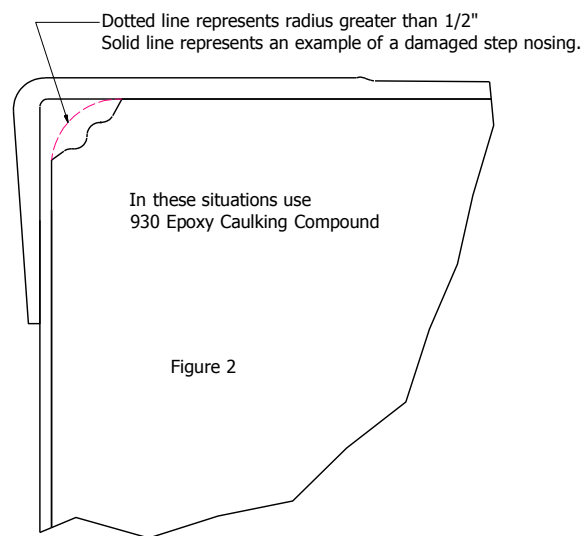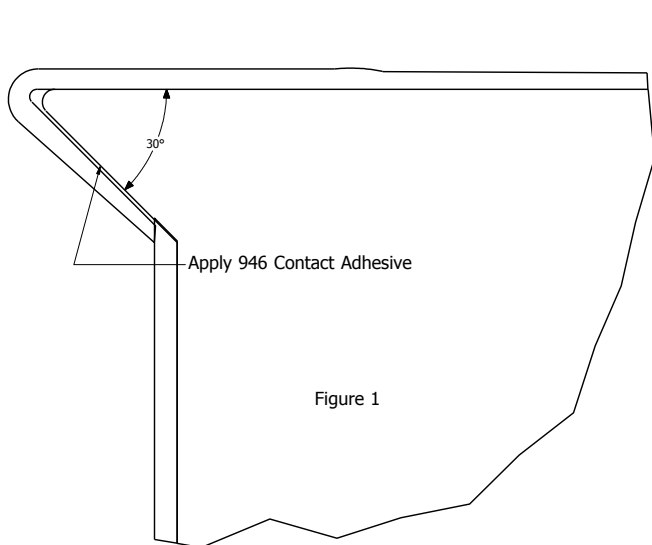

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com

ANGLE FIT™ RUBBER TREADS, RISERS, AND STRINGERS INSTALLATION INSTRUCTIONS

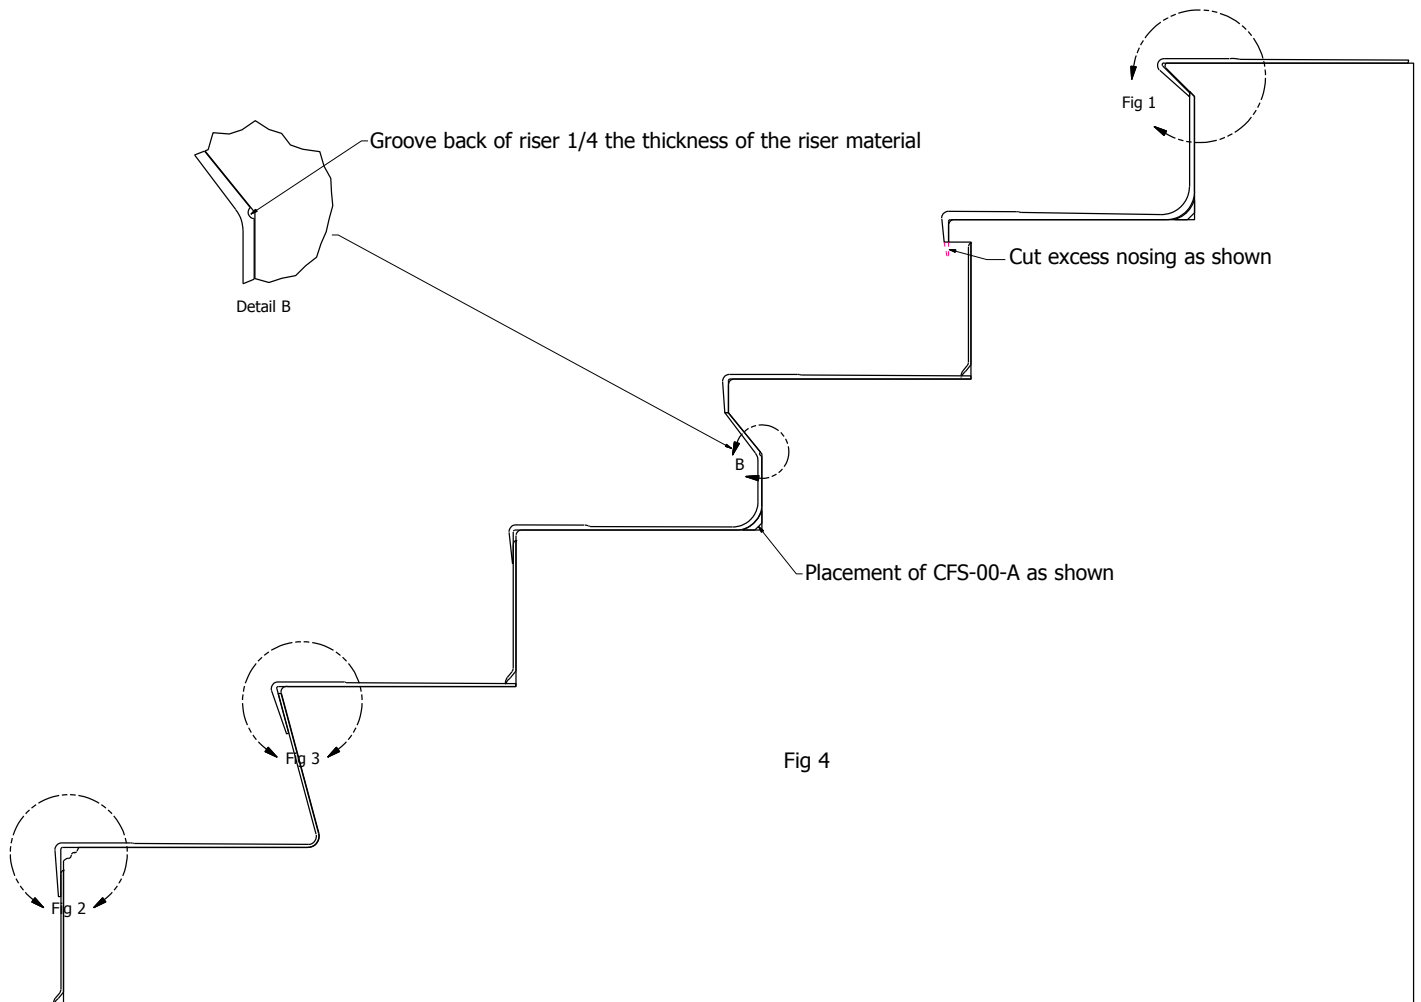

Tarkett North America

Technical Services Department
30000 Aurora Road
Solon, OH 44139
800.899.8916 Fax 440.632.5643
info@tarkettna.com