
(SP2S-RD)

ELEVATION

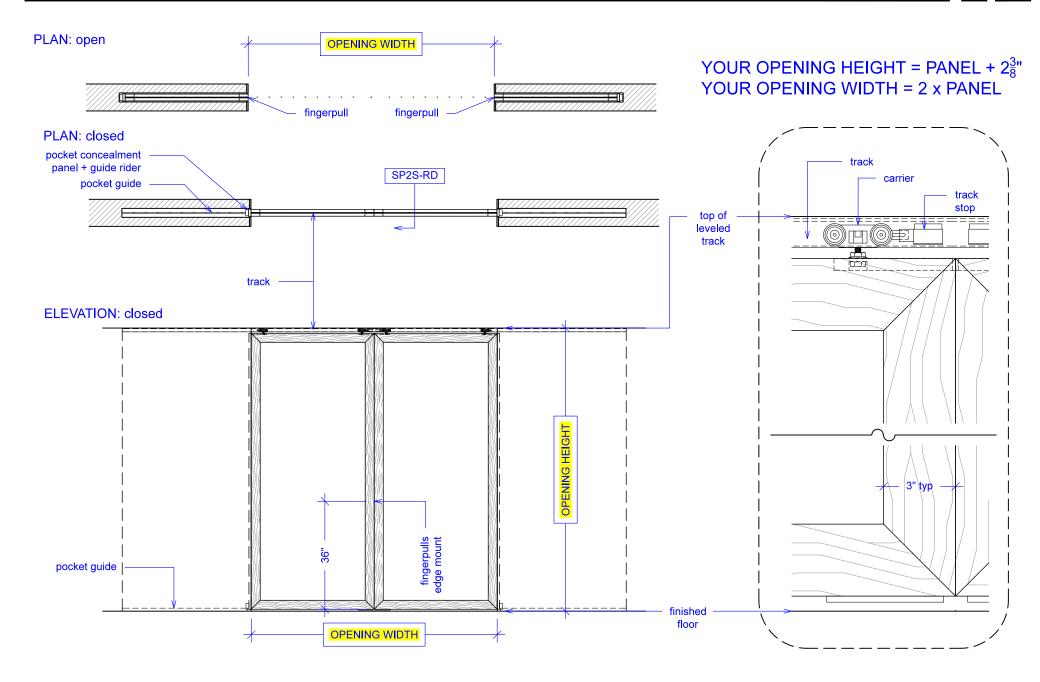




(SP2S-RD)
SECTION

RAYDOOR STANDARD SYSTEM DRAWINGS ©2020



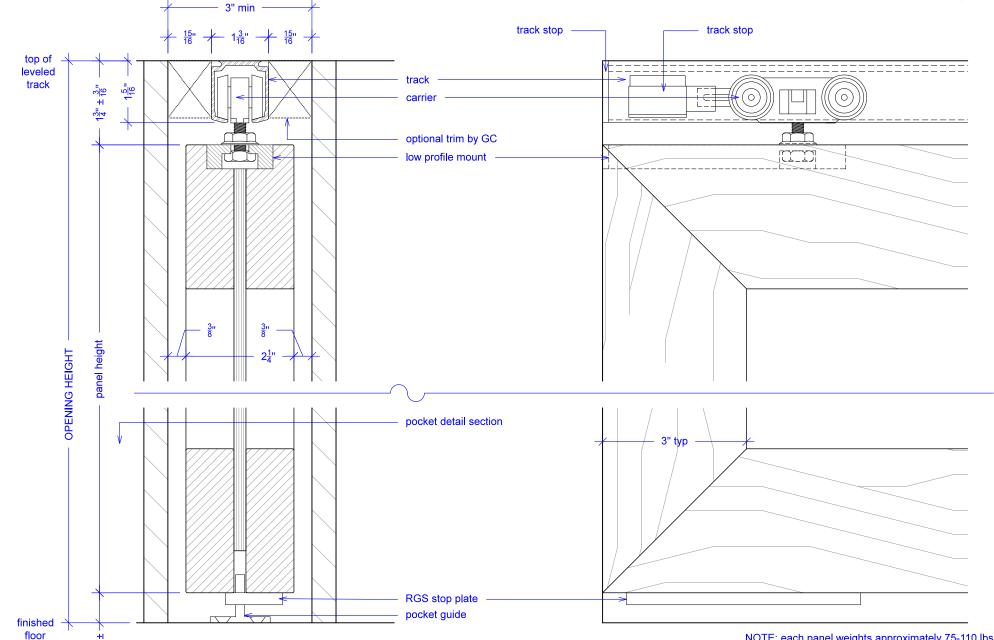


(SP2S-RD)

POCKET DETAILS



NOTE: pocket depth should be 2" deeper than width of doors

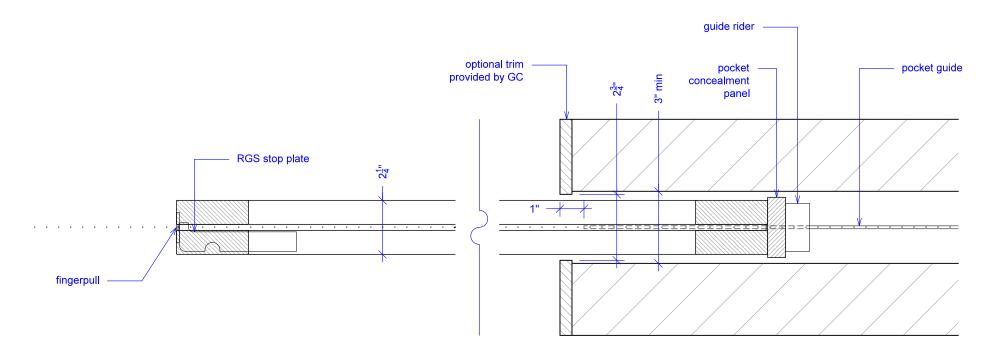

Guide rider is a block with a slit for the pocket guide; it allows for full extension, attach to bottom of concealment panel.

(SP2S-RD)

OPERATION OVERVIEW



