

# MOMENT TABLE AND STOOL

## INSTALLATION GUIDE

SUGGESTED MINIMUM CREW: 1  
APPROXIMATE INSTALL TIME: 10 Min

### TOOLS REQUIRED:


Tite-Joint Rod  
(Included with Hardware)

### HARDWARE:


Tite-Joint Rod

6 1/2"  
Ganging Bracket


9 1/2"  
Ganging Bracket

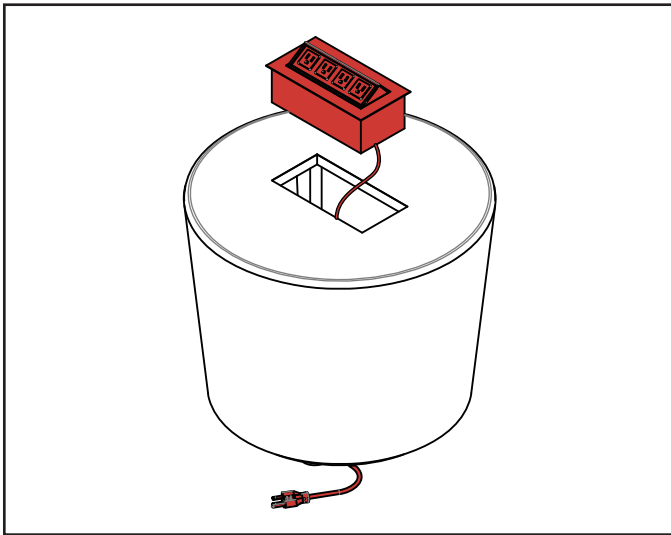


To install Power / Connectivity device follow instructions included with your specific device. Wiring exits the element through 8" dia. hole in bottom.

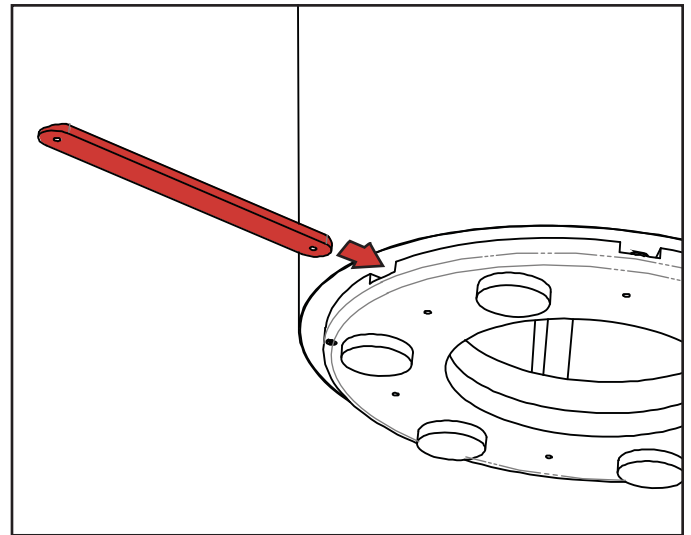

Ganging elements together is achieved by inserting either 6 1/2" or 9 1/2" ganging clip with angled portion facing up, into slots in base. An audible click will be heard once clip is locked into position.

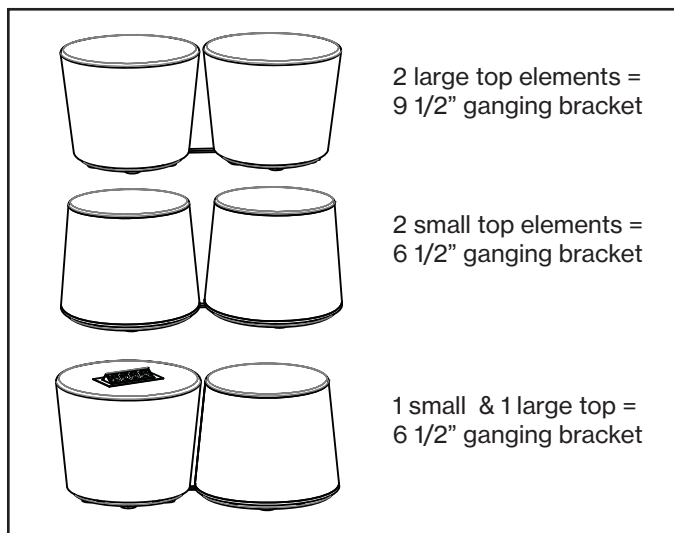

Use appropriately sized ganging clips as per your desired configuration.

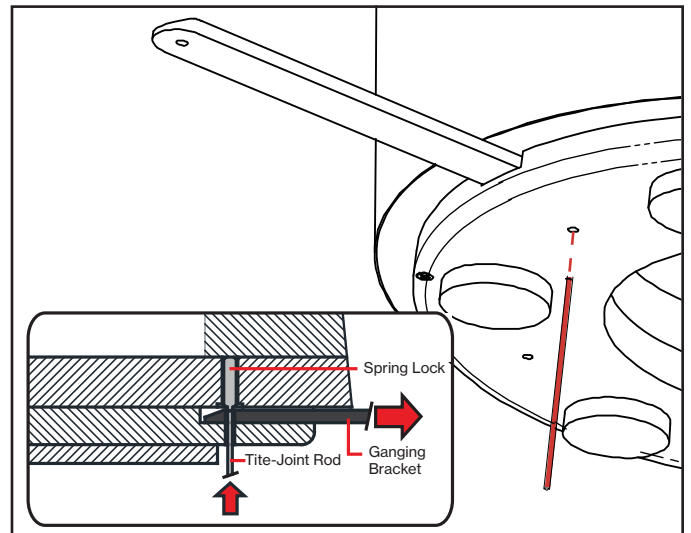

To unlock, insert Tite-Joint Rod into small hole nearest the ganging clip. Depress spring lock while gently pulling the ganging clip away.

P/N 06-9-20