


Vox®

Tel 800 668 9318
Tel 416 298 5700
Fax 416 298 9535
mail@nienkämper.com



VOX OFFICE™ INSTALLATION GUIDE

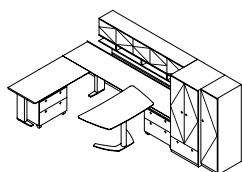

SETTING UP THE INSTALLATION



1

- From the highest point in the room, measure up from the floor surface $59\frac{7}{8}$ ". This dimension will mark the bottom of the wood cleat.

2



- From this point, mark a horizontal level line roughly in the centre of the wall.

INSTALLING THE CLEAT FOR THE WALL MOUNTED OVERHEADS



3

- At the bottom of the plywood cleat, mark centre and position it at the centre point on the wall. Level and appropriately fasten the cleat to the wall.

4



- Measure down $27\frac{3}{16}$ " from the bottom of the plywood cleat. This point represents the bottom of the aluminum cleat.



5

- Centre and level the aluminum cleat. Fasten appropriately.



6

- Slide the tack panel assembly onto the aluminum cleat.



7

- With wood screws, fix the top of the assembly into the predrilled holes.



8

- With wood screws, fix the bottom of the assembly into the slot provided. DO NOT install wood screws in the centre 12" of this slot.



9

- Apply the wire management to the bottom of the panel with wood screws.



10

- Lift the overhead storage unit into place and slide it onto the plywood cleat.
- Take care to align the overhead onto the tack panel.



11

- Finished installation of wall hung elements.

12




- Install woodscrews through the interior of the overhead, locking it to the plywood cleat.



13

- Position the lower storage unit with lights. Fasten with woodscrews through predrilled holes inside overhead. Install shelf pins into middle set of holes. Insert shelves.

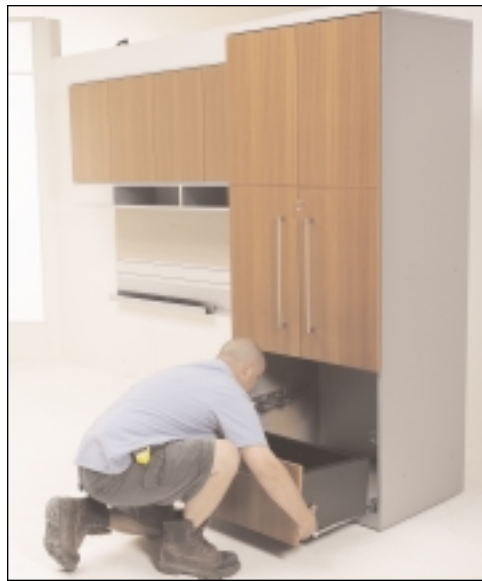

14

- Remove File drawers in closet by depressing orange tabs under the drawer.



15

- Position closet beside overhead storage unit.



16

- From the interior of the cabinet; level the closet, aligning the holes for attaching the overhead storage unit.



17

- Feed the lighting cable into the top slot at the closet back and out of the bottom slot.

18



- Lay the lighting cable in the trough.

FINISHING CLOSET INSTALLATION



19

- Attach the overhead to the closet with hardware supplied.

20



- Position small closet beside larger closet.



21

- Level as required.



22

- Attach small closet from interior of large closet.
- Re-install drawers.

INSTALLATION OF WORKTOP



23

- Install top bracket to closet with 3 machine screws into 3 slots. Flat side of bracket to the top.



24

- Position top with bottom facing up.



25 26

- Install top legs with machine screws supplied.
- Remove the dimmer switch from packaging and install with 2 wood screws.



- Apply rubber extrusion to the rear of the top using the built in stop for alignment.



27 28

- Flip top over.



- Install aluminum pencil stop through predrilled holes with wood screws. Justify the stop flush against closet edge and $\frac{3}{8}$ " above work surface.

INSTALLATION OF WORKTOP (CONT'D)



29 30



- Fix top to bracket with threaded bolts supplied.

- Level top.

INSTALLATION OF OPTIONAL RETURN



31 32



- Adjust level as required with bolts in slots and lock bracket in position with two woodscrews.

- Install leg to return bottom with machine screws.

INSTALLING RETURN



33 34


- Install pencil stop as previous (no rubber extrusion on this top).



- Position beside main worktop and align with bracket.

*Note: this return may be at a 90 degree (use symbol) angle.

SECURING TOPS

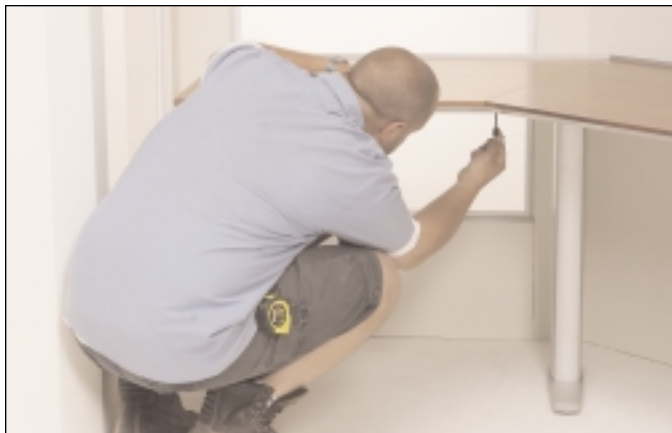

35 36

- Fix with machine screws.



- Apply top to wall bracket in the gap between the wire troughs. Additional bracket is required along wall past tack panel – install into metal stud.

INSTALLATION OF FIXED PROJECT TABLE



37 38



- For optional fixed top, install flat brackets to main work surface. Note this top has two positions for installation. Choose bracket locations furthest away from the closet.

- Install single leg to underside of fixed top.

*Note: this may be a detached height-adjustable Project Table.



39 40



- Position fixed top and install onto brackets with machine screws.

- Plug lighting cable into transformer assembly and mount the transformer to the underside of the top with woodscrews.



41 **42**

- Store cable in trough.



- Remove the small machine screw that is inside the dimmer switch under the top. Place the small cable inside the dimmer switch and re-insert the screw. Tighten.



43

- Installation complete.