



Bivi™ Upper & Lower Footshelf
Repose-pieds supérieur et inférieur Bivi™
Mesa com Plataforma Superior e Inferior Bivi™
Reposapiés superior e inferior Bivi™

turnstone®




Bivi Tool
Outil Bivi
Ferramenta da Bivi
Herramienta Bivi

OR
OU
O






3/16" Allen Wrench
Clé Allen de 3/16po
Chave Allen de 3/16"
Llave Allen de
3/16 pulgadas

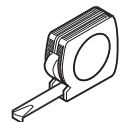

Mounting of lower footshelf
Installation du repose-pieds inférieur
Montagem da plataforma inferior
Instalación del reposapiés inferior

turnstone

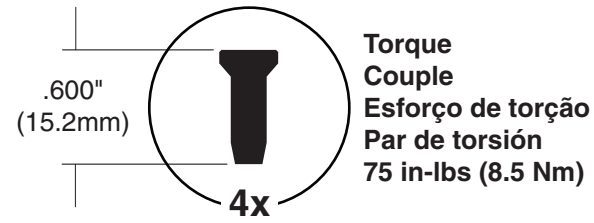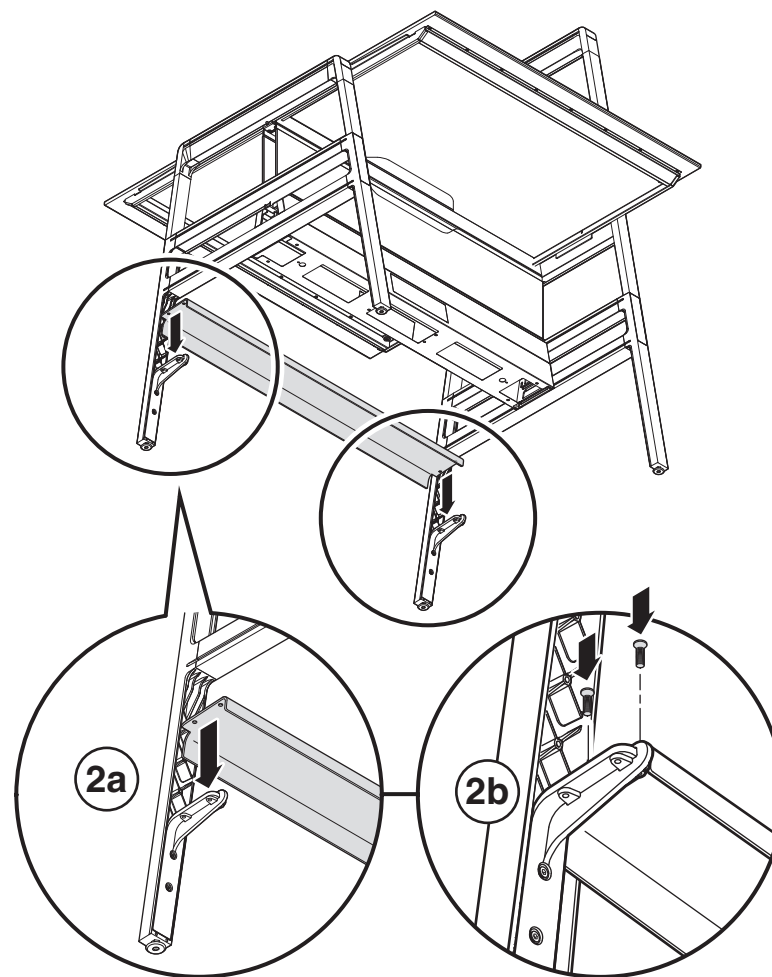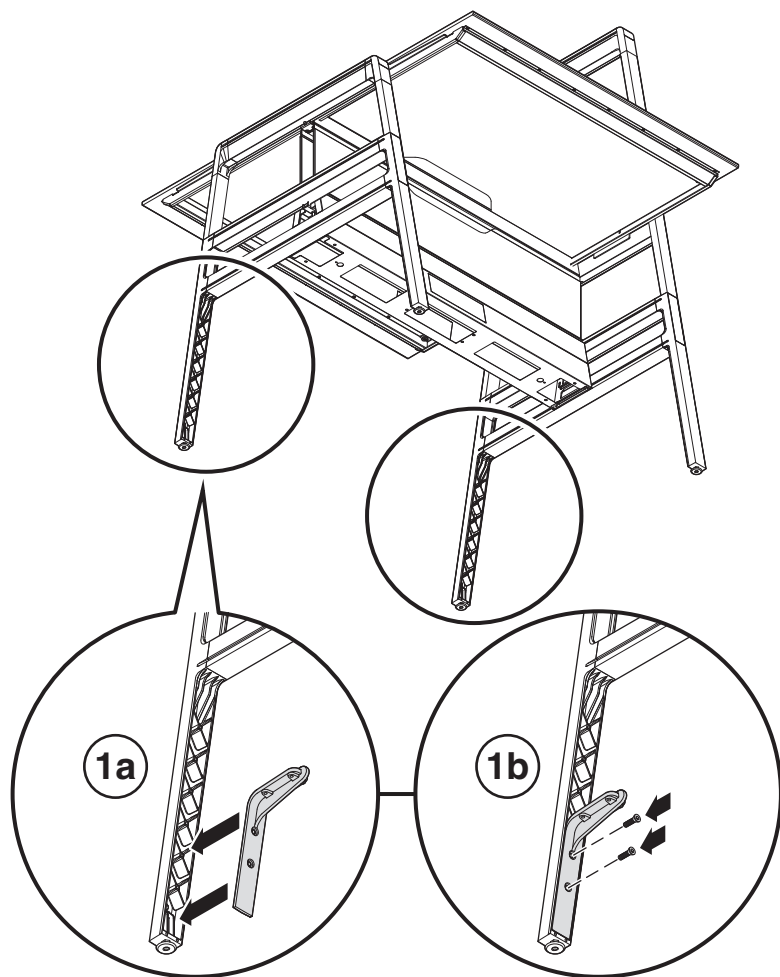

Mounting of upper footshelf

Installation du repose-pieds supérieur

Montagem da plataforma superior

Instalación del reposapiés superior


NOTE: Install all screws loosely until placed into correct position, then tighten.

REMARQUE: Installez toutes les vis sans les serrer complètement tant qu'elles en seront pas correctement positionnées, puis serrez-les.

OBSERVAÇÃO: Instale todos os parafusos levemente até serem colocados na posição correta, então aperte-os.

NOTA: Instale todos los tornillos sin apretar hasta que estén en la posición correcta, luego apriételes.

turnstone

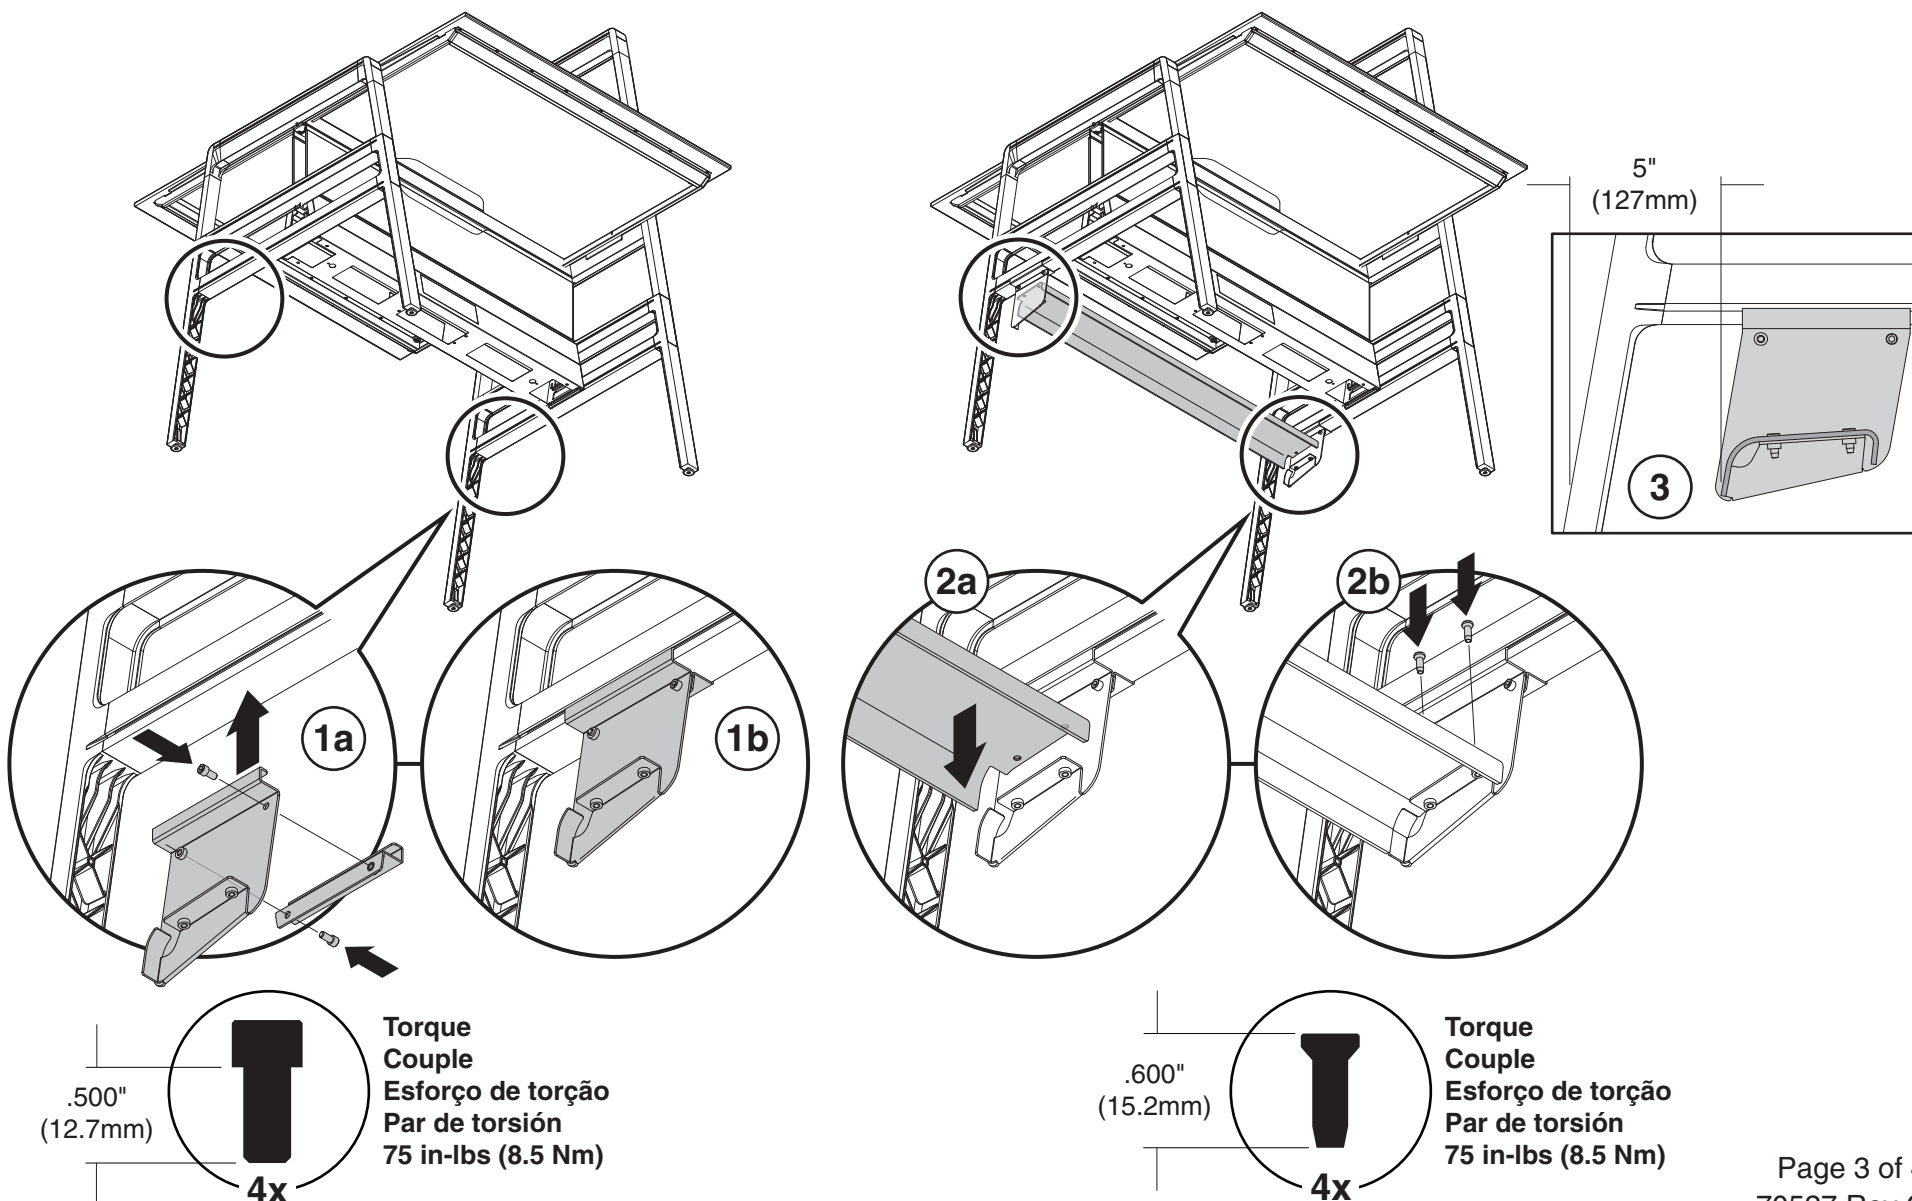






Ganging of upper footshelf

Fixation du repose-pieds supérieur

Alinhamento da plataforma superior

Agrupación del reposapiés superior

turnstone

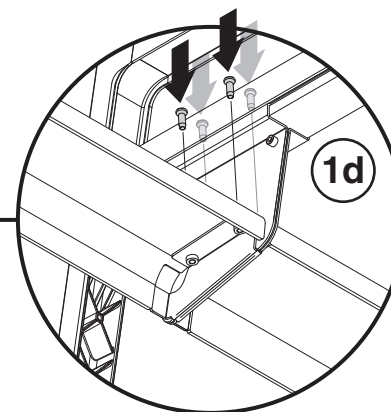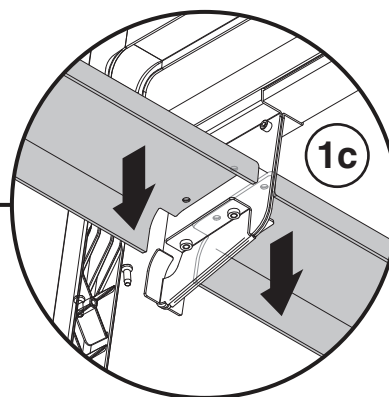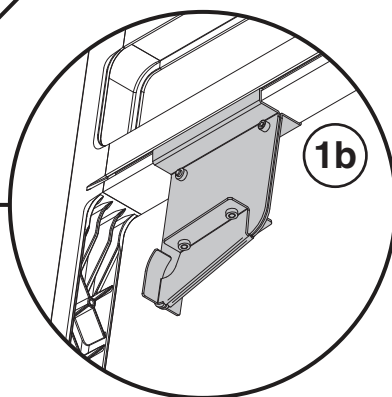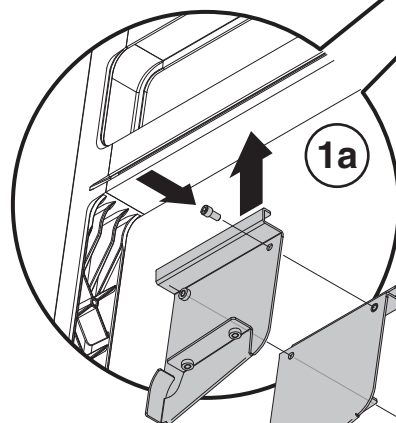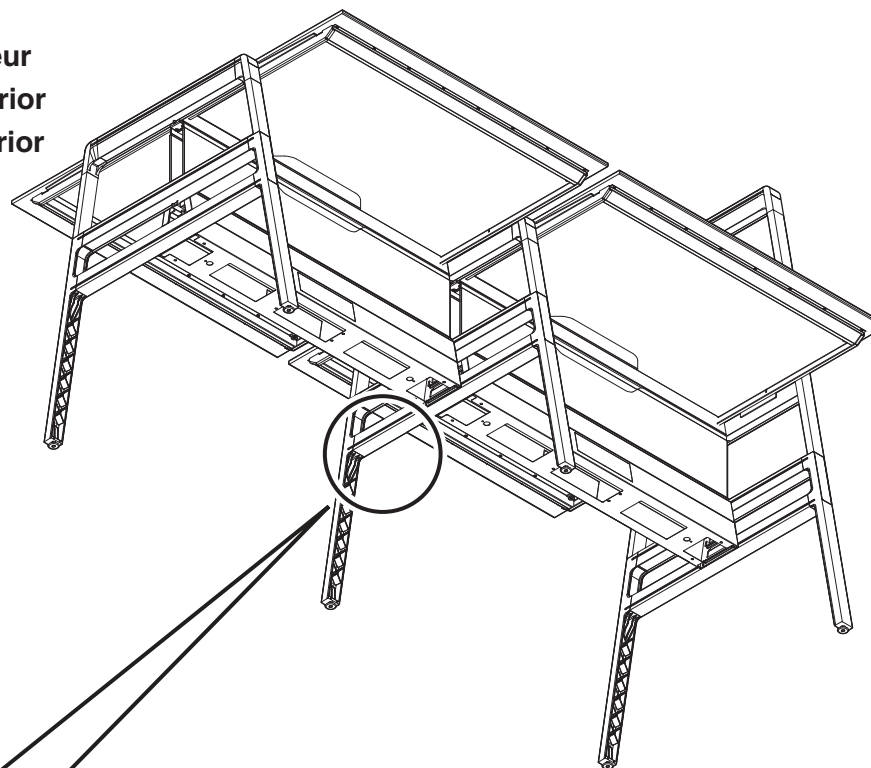

.500"
(12.7mm)



2x

Torque
Couple
Esforço de torção
Par de torsión
75 in-lbs (8.5 Nm)

.600"
(15.2mm)



4x

Torque
Couple
Esforço de torção
Par de torsión
75 in-lbs (8.5 Nm)