



NOTE:

- Weight capacity is 20 lbs.

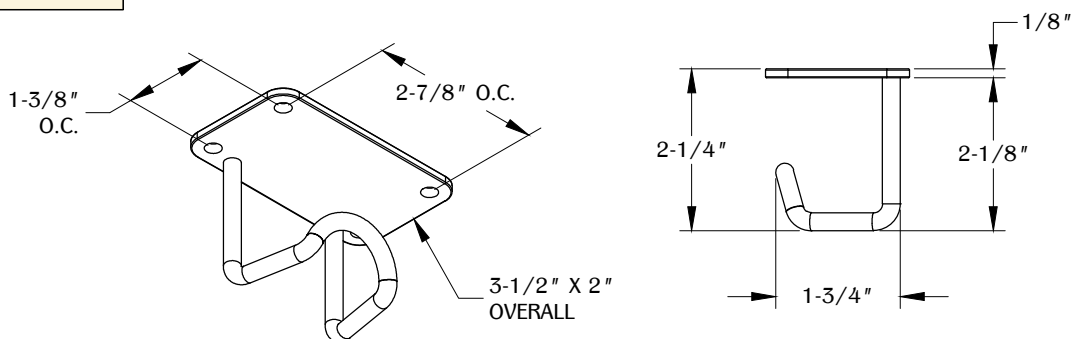


SIDE VIEW

## 1a Under mount (Purse Hook)

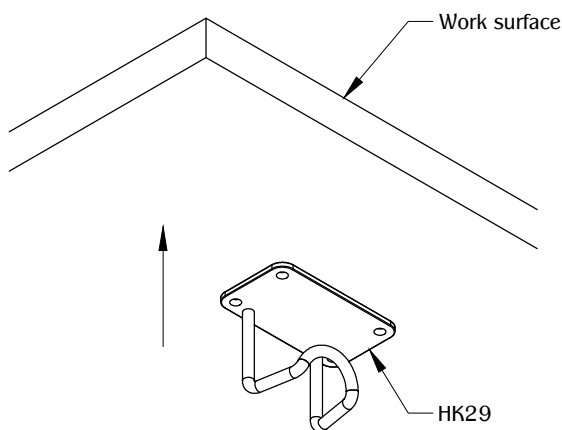


Determine the position and location of the part under the work surface. Allow enough clearance for part function.

## 2a

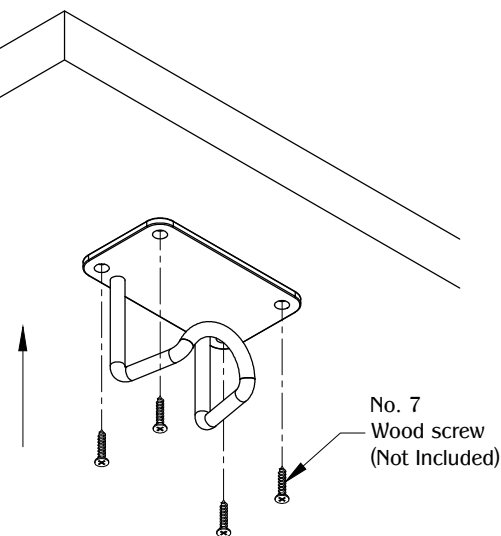


Use (4) No. 7 flat head screws to secure the part under the work surface. (Note: Use appropriate mounting hardware type and length depending on the material and thickness of the work surface.)

## 1b Wall mount (Coat Hook)

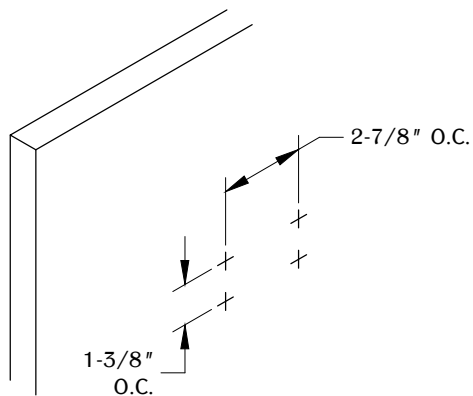

Determine the position and location of the part on the work surface. Mark the mounting positions for the mounting hardware.

## 2b

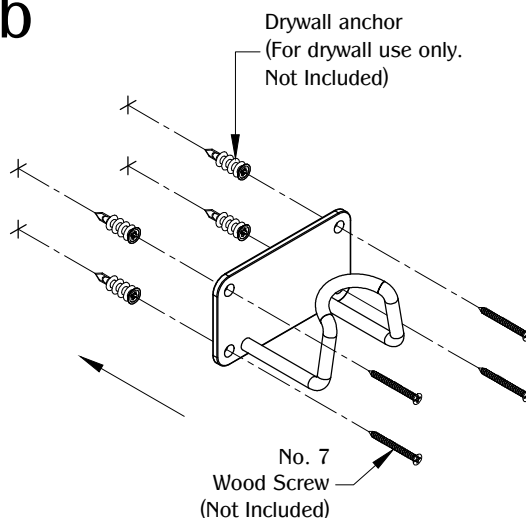

Secure the part using (4) No. 7 flat head screws. Make sure the part is fully level on the work surface.