

Assembly Instructions ■

Villa®

Worksurface Grommet Installation

September 2014

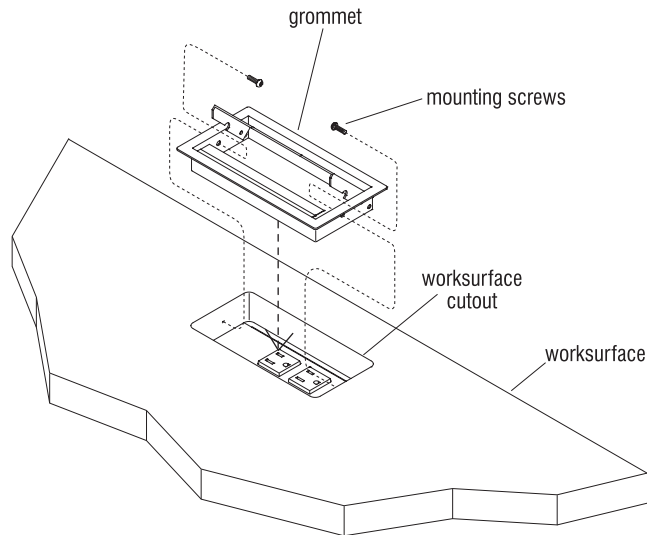


Figure 1

1. Position the grommet above the worksurface cutout with the lid opening towards the user (Figure 1).
2. Push the grommet into the cutout, tap lightly with a rubber mallet if required, use caution to avoid scratching the grommet (Figure 1).
3. Secure the grommet to the worksurface by inserting two small screws through the holes on the inside of the module into the cut edge of the worksurface (Figure 1).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

