
MOCKETT

PART #

PCS54/2/E


310.318.2491 • 800.523.1269 • www.mockett.com

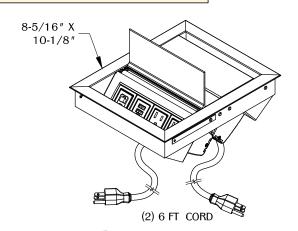




BOTH USB OUTLETS FOR CHARGING USE ONLY


2

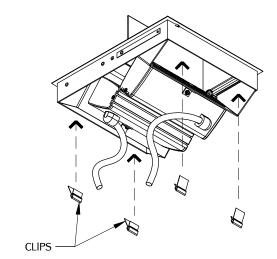


Place clips before installing in cut out.

4

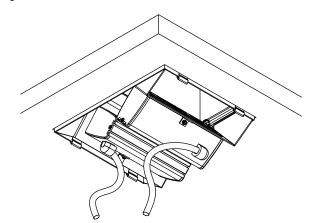

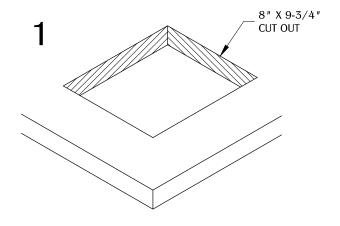

Make a cut out at the desired surface.

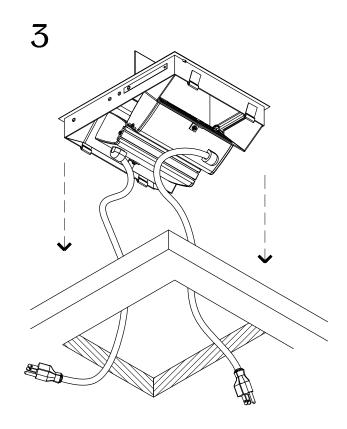



PLEASE USE APPLICABLE ADAPTER FROM DATA TREE. (SEE PCS DATA TREE PAGE FOR MORE INFORMATION.)





TABLE OF CONTENTS:







PART #

PCS Data Tree


310.318.2491 • 800.523.1269 • www.mockett.com

1.) Select the appropriate adapter from the chart below. (example: Panduit Mini-Com Series jack would use "FFF" adapter marked on back of adapter.)



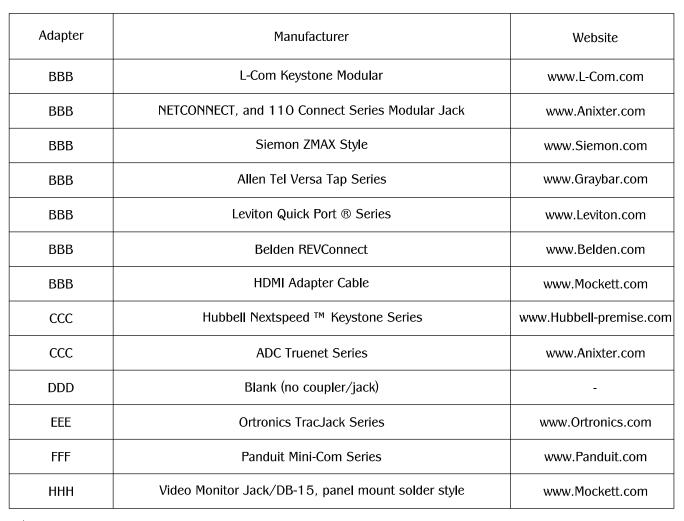

- 2.) Snap Jack into adapter following the instructions provided with the jack.
- 3.) Once assembled, snap adapter into the notched, square holes in the orientation shown.

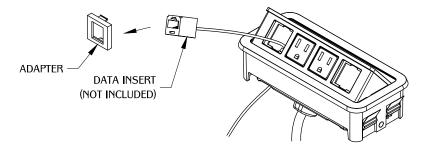

NOTE:

Please verify fit of jack in adapter before ordering large quantities as manufacturer designs may change without notice.