

## PCS36/2A/UC

PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A  $\pm 1/16"$  TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


### WARNING

- Do NOT remove tape!
- For indoor use only.
- For use on a normally dry work surface.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Avoid placing the unit in a high temperature environment or near fire.
- Avoid liquid spills into outlet.
- Do not insert foreign objects into the socket.
- Allow enough clearance for part operation.

### SPECIFICATIONS

- 6 ft. cord lengths.
- Table thickness is  $3/4"$  MIN. to  $1-11/16"$  MAX.
- Dimensions for plugs are  $1-11/32"$  X  $1-1/32"$  X  $7/8"$ .
- USB-A and USB-C ports are for charging use only.

### TABLE OF CONTENTS

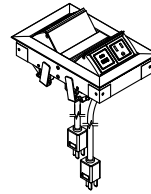

..... 1X PCS36/2A/UC




..... .2X Wire Manager




..... .2X Metal Clip



..... .2X Wing Clamp

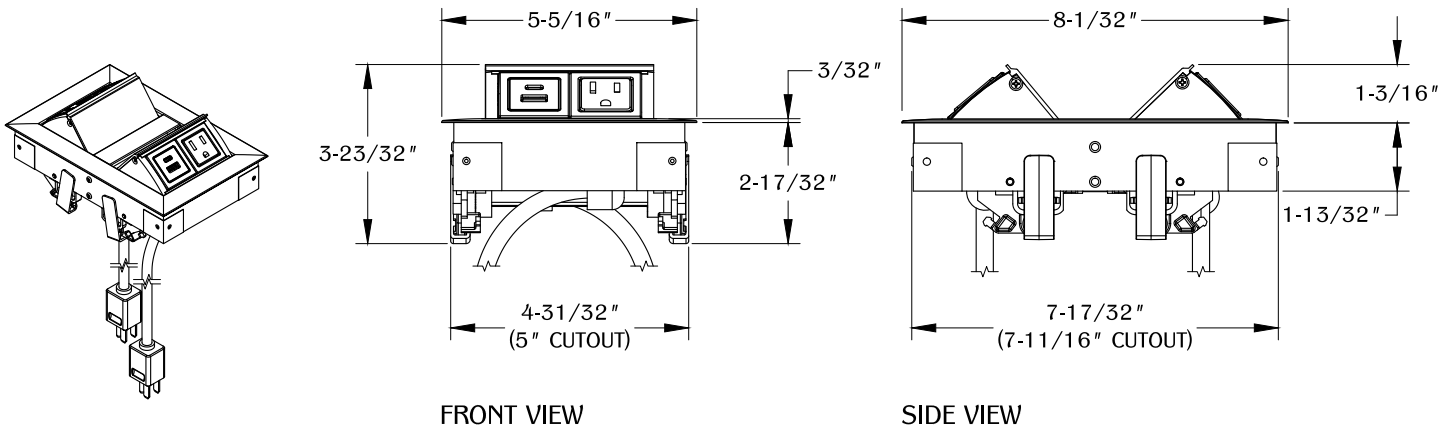


1

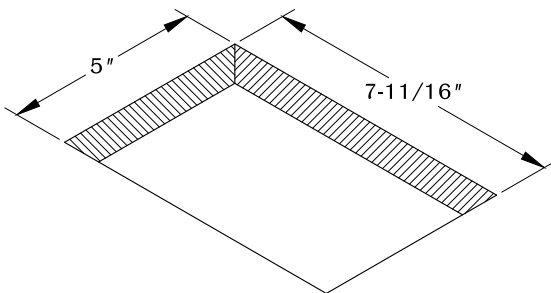

Determine the position and location of the unit in the work surface. Cut the hole at  $7-11/16"$  X  $5"$ . Place and allow enough clearance for unit operation. DO NOT place unit where the cables are strained or trapped.

2

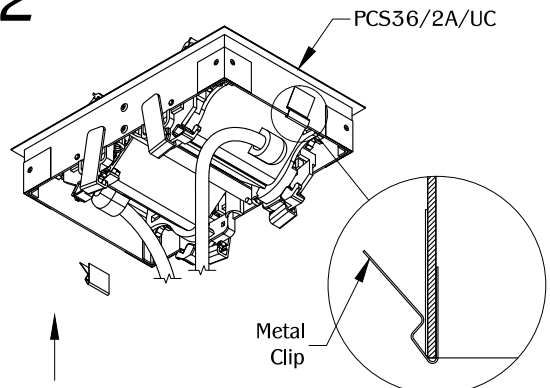


Place metal clips near the ends of the front and back of the unit. (NOTE: Metal clips are for use in hard surface material only as an optional mounting means.)

## PCS36/2A/UC

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A  $\pm 1/16"$  TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

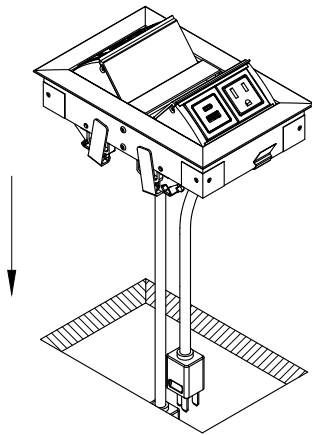


Guide the power cords through the cutout. Install the unit into the cutout and make sure it is fully leveled onto the surface.

4

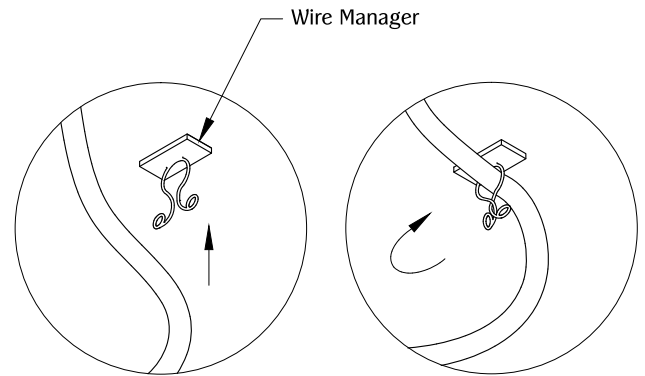

Affix optional wire manager under desk for cable management.

5

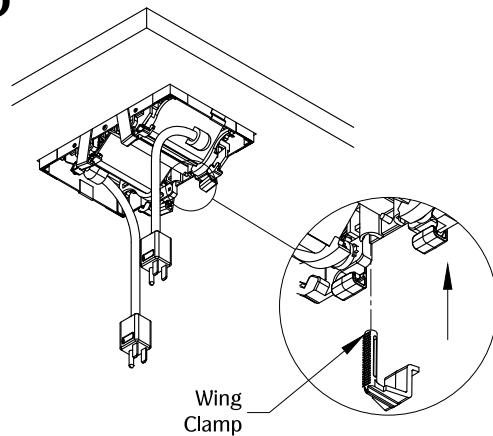

Secure unit by turning bottom wing clamp.