


Α	ASSEMBLY INSTRUCTION	งร	
1	Push EXPANDING PINS *into CAMLOCKS in part B	1	
2	Align Reception Gallery on furniture worksurface		
3	⊕⇒♠ (*IMPORTA see below	NT*)
4	Attach CONNECTOR PLATES to undersides of Gallery Tops		
5	Secure in place with double sided on underside of end panels		
6	Stick Covers over Camlocks		

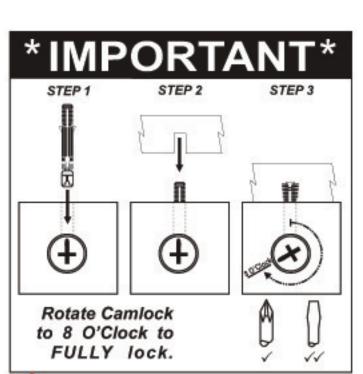

HARDWARE PACKAGES

7HP29				
0	Cover	5		
(X)	Camlock (extra)	1		
1	Expanding Pin	3		
9	#8 x 1" Screws	16		
	Connector Plate	2		

