

Assembly Instructions

Aristotle™ Casegoods

Corner Overhead Cabinet

March 2008




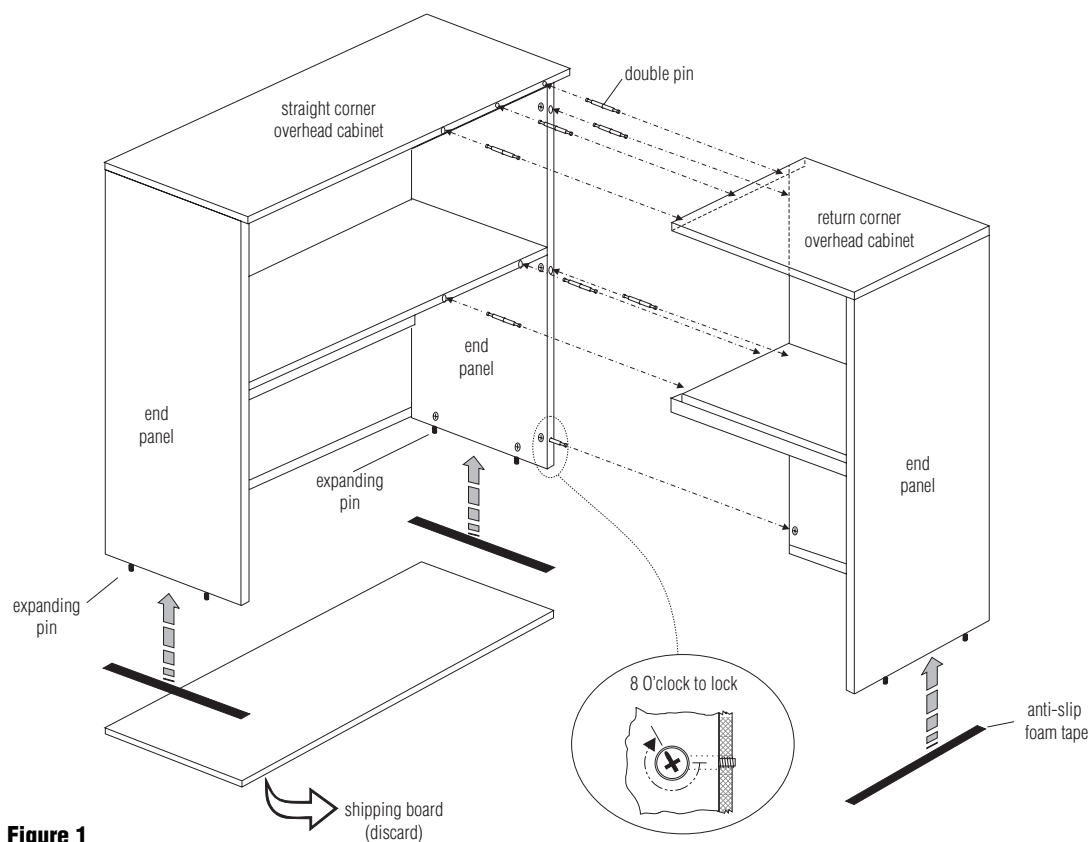


Figure 1

7HP4 - Hardware Pack		
	Cover	16
	Camlock (extra)	1
	Expanding Pin	7
	Foam Tape	3
	Drilling Template	1
	Double Pin	8

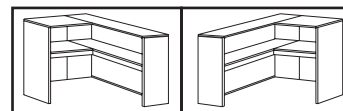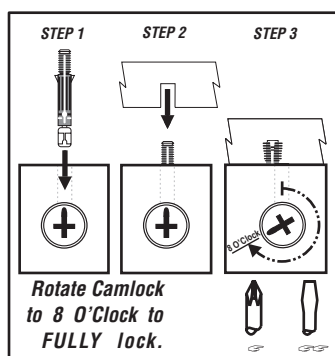

Detail A

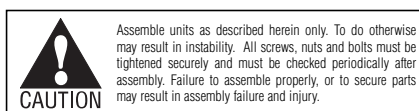

1. Carefully unpack all parts from shipping container and place straight corner overhead cabinet and return corner overhead cabinet onto a soft, protective surface. Remove shipping board from bottom of straight corner overhead cabinet and discard (Figure 1). Identify parts below from the "Hardware Pack" diagram.

2. Level worksurface before attaching overhead.

Note: Actual components may vary in appearance from the diagram, depending upon unit sizes, etc.

3. Attach anti-slip foam tape to underside of each end panel (Figure 1). Cut away foam at pin holes.

4. Determine approximate location to install straight corner overhead cabinet and return corner overhead cabinet to worksurface. Locate and reference "Overhead Drilling Template" and follow directions to drill holes into worksurface.

5. Press double pins into holes of straight corner overhead cabinet as illustrated (Figure 1 and Detail A, step 1).

6. Assemble straight corner overhead cabinet to return corner overhead cabinet, mating double pins into holes in return corner overhead cabinet. See Detail A, steps 2 & 3 to secure cabinets together (Figure 1 & Detail A).

7. Press expanding pins into bottom of end panels on straight corner overhead cabinet and return corner overhead cabinet as illustrated (Figure 1 and Detail A, step 1).

8. Set straight corner overhead cabinet/return corner overhead cabinet assembly onto worksurface, mating expanding pins into holes drilled into worksurface in step 4. See Detail A, steps 2 & 3 to secure overhead cabinet assembly to worksurface (Figure 1 & Detail A).

9. Stick covers over camlocks.

