

Assembly Instructions

Aristotle™ Casegoods
Corner Unit

February 2008



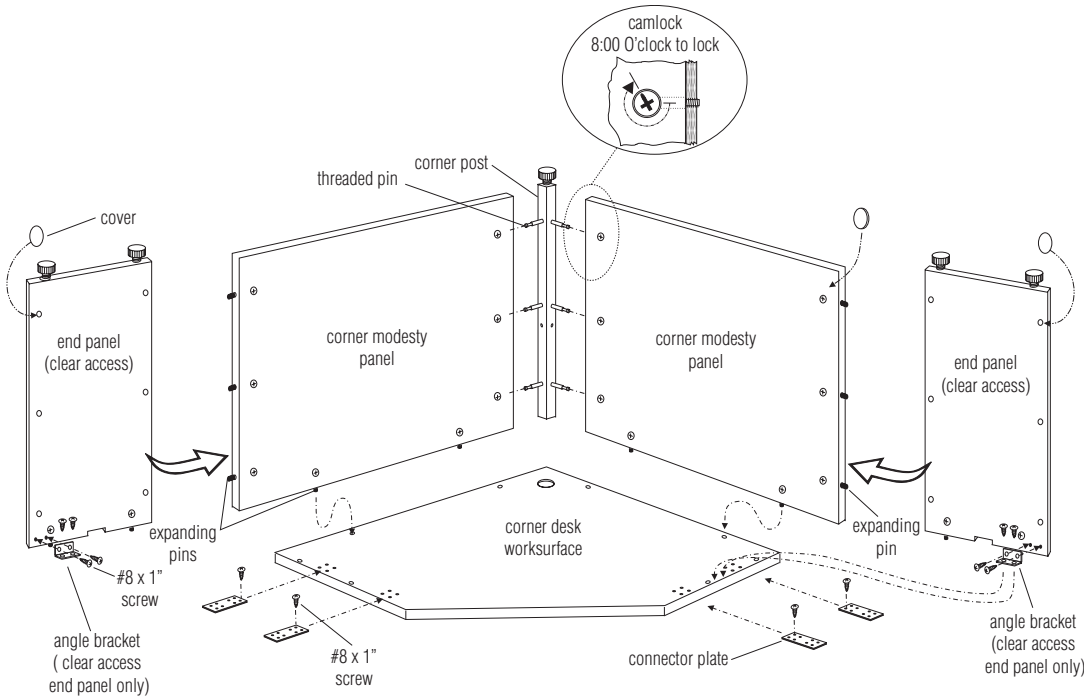


Figure 1

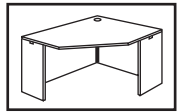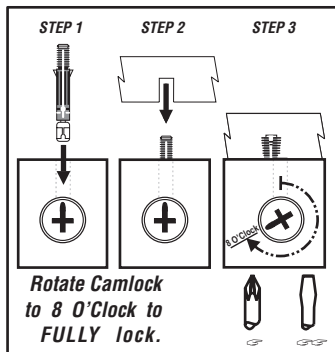

Detail A

7HP3 - Hardware Pack		
	Cover	28
	Camlock (extra)	1
	Expanding Pin	6
	Threaded Pin	16

7HP8 - Hardware Pack		
	#8 x 1" Screws	20
	Angle Bracket	1
	Connector Plate	2

1. Carefully unpack all parts and place worksurface face down on a soft protective surface. Identify parts below from the "Hardware Pack" diagrams, Figure 1 & Detail A.

Note: End panels are reversible for configuration versatility.

2. Screw threaded pins into corner post sides (Figure 1).
3. Press expanding pins into all corner modesty panels and end panels at camlock locations as illustrated (Figure 1 & Detail A, step 1).
4. Mate the corner post to both corner modesty panels at threaded pin/camlock locations. Follow steps 2 & 3 of Detail A to twist camlocks and secure modesty panels to corner post (Figure 1 & Detail A).
5. Mate end panels (clear access) to corner modesty panels at expanding pin locations. Follow steps 2 & 3 of Detail A to twist camlocks and secure end panels together (Figure 1 & Detail A).
6. Carefully set corner panel/end panel assembly onto underside of worksurface, placing all expanding pins of panels into camlock holes at underside of worksurface. Follow steps 2 & 3 of Detail A to twist camlocks and secure all together (Figure 1 & Detail A).
7. Install angle bracket to clear access end panel and corner desk worksurface using #8 x 1" screws (Figure 1).
8. Install connector plates to underside of corner desk worksurface using #8 x 1" screws where necessary (Figure 1).
9. Stick covers over all camlocks and unused expanding pin holes (Figure 1).

