

Assembly Instructions

Aristotle™ Casegoods
Desk Shell & Executive Corner Desk

February 2008


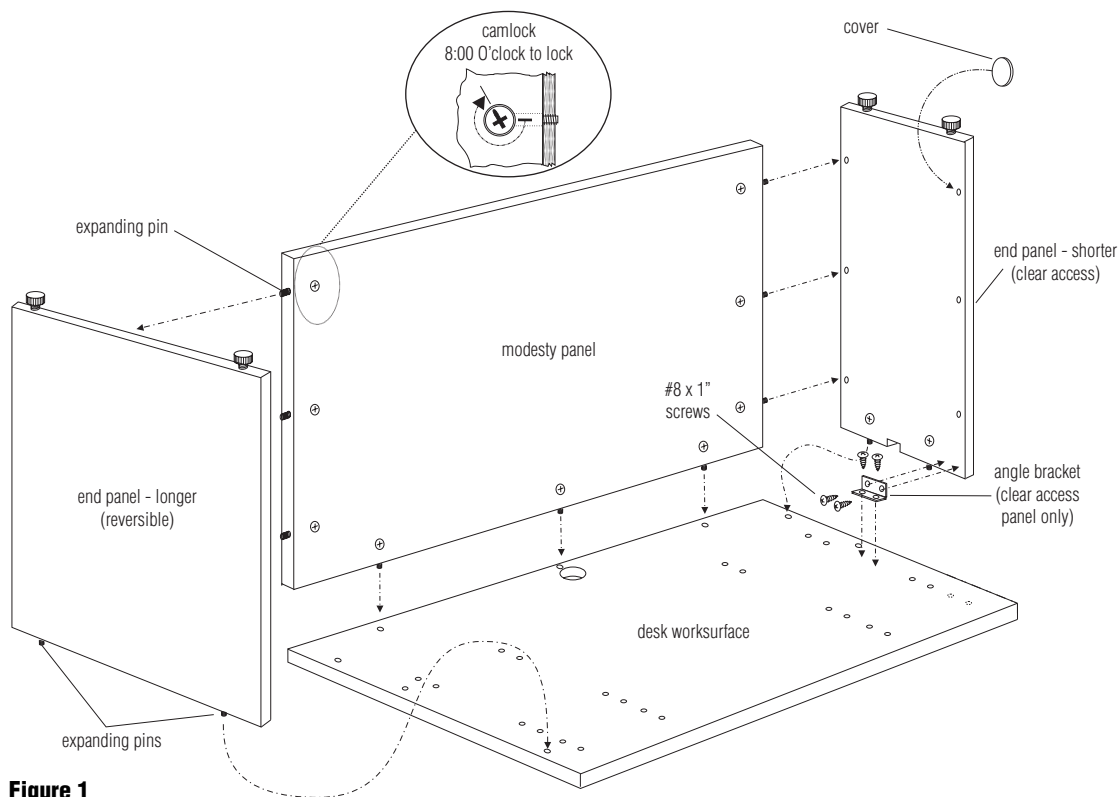


Figure 1


7HP1 - Hardware Pack		
	Cover	20
	Camlock (extra)	1
	Expanding Pin	15
Standard Hardware Pack		

7HP8 - Hardware Pack		
	#8 x 1" Screws	20
	Angle Bracket	1
	Connector Plate	2
Note: One provided for each Clear Access End Panel.		



7HP23 - Hardware Pack		
	Cover	5
	Camlock (extra)	1
	Expanding Pin	5
Shipped with desk shells 78" and wider only.		

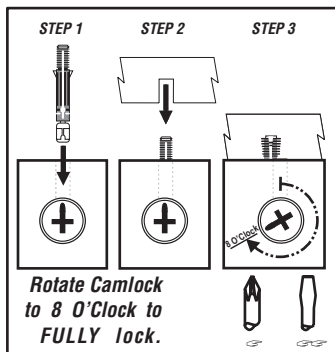

Detail A

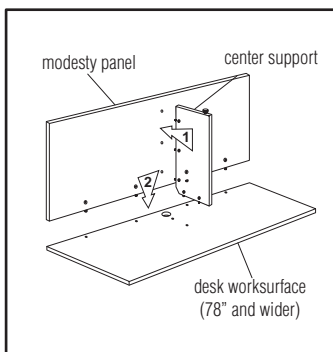

Detail B

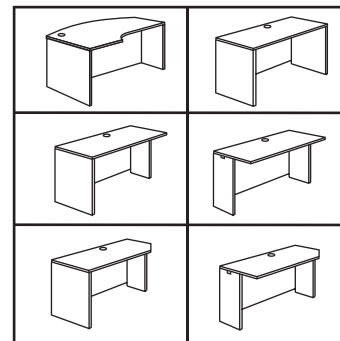

1. Carefully unpack all parts and place worksurface face down on a soft protective surface. Identify parts below from the "Hardware Pack" diagrams, Figure 1 & Detail A.

Note: End panels are reversible for configuration versatility.

2. Press expanding pins into modesty panel and end panels at camlock locations as illustrated (Figure 1 & Detail A, step 1).

Note: Expanding pin/camlock connectors are only present in units 42" and wider.

3. Mate end panels to modesty panel at expanding locations. Follow steps 2 & 3 of Detail A to twist camlocks and secure end panels together (Figure 1 & Detail A).

4. Carefully set modesty panel/end panel assembly onto underside of worksurface, placing all expanding pins of panels into camlock holes at underside of worksurface. Follow steps 2 & 3 of Detail A to twist camlocks and secure all together (Figure 1 & Detail A).

5. Install angle bracket to clear access end panel and corner desk worksurface using #8 x 1" screws (Figure 1).

6. **Desk shells 78" and wider only:** Install center support with connector pins to worksurface and modesty panel as illustrated (Detail B). Follow steps 2 & 3 of Detail A to twist camlocks and secure end panels together (Figure 1 & Detail A).

7. Stick covers over all camlocks and unused expanding pin holes (Figure 1).

