

Assembly Instructions ■

Likha Caseloads

4" & 7" Laminate Modesty Panels for Fixed-Height Units

August 2021

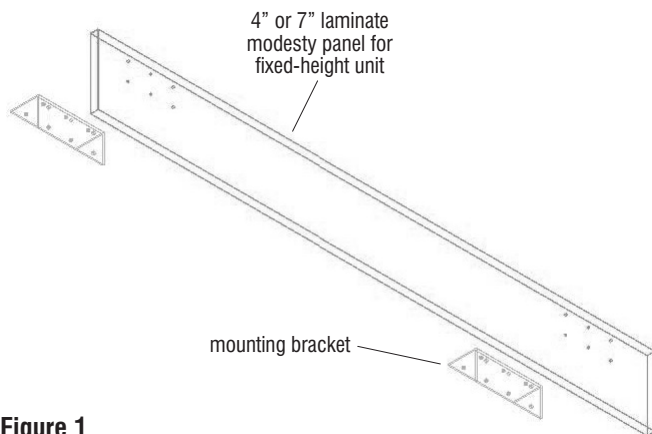


Figure 1

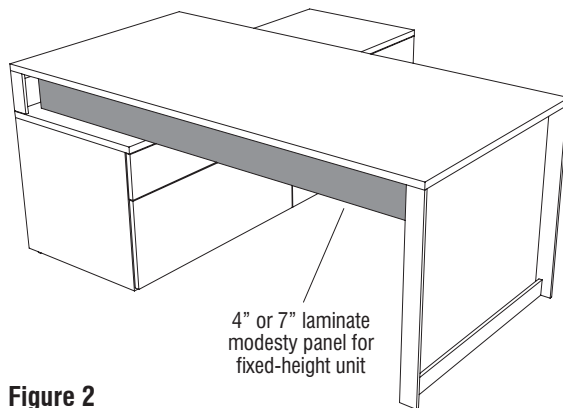


Figure 2

Parts List

- Mounting Bracket
- #10 x $\frac{5}{8}$ " Phillips Pan Head Screw

1. Align the mounting holes of the bracket with the pre-drilled holes on the back of the panel and secure using three #10 x $\frac{5}{8}$ " Phillips pan head screws per bracket. Repeat this step to secure the remaining mounting brackets to the modesty panel (Figure 1).

2. Position the modesty panel with brackets centered underneath the adjustable-height worksurface on the non user side of the unit.

Note: The panel can be positioned flush with the worksurface, or it can be recessed.

3. Using the modesty panel with brackets as a template underneath the worksurface, align the unit straight, then mark the mounting hole locations.

4. Align the mounting holes of the brackets with the marked locations at the underside of the worksurface. Secure the brackets to the worksurface using three #10 x $\frac{5}{8}$ " Phillips pan head screws per bracket (Figure 2).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.