


Access Panel Bottom for LVQ, LVA, LD5010 and LD3010

Installation

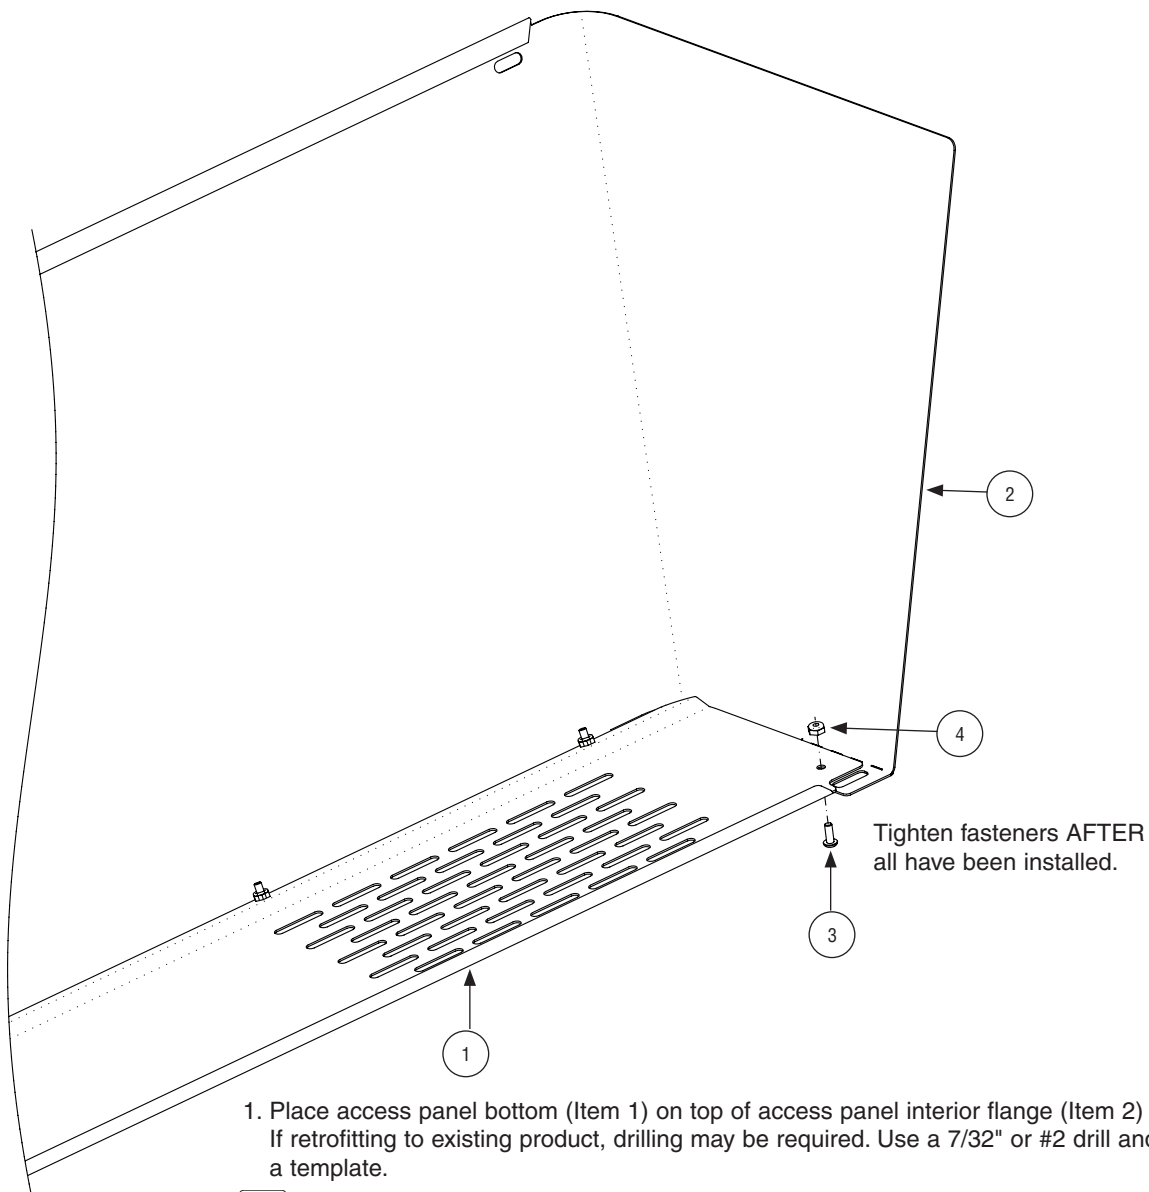

1. Place access panel bottom (Item 1) on top of access panel interior flange (Item 2) as shown. If retrofitting to existing product, drilling may be required. Use a 7/32" or #2 drill and Item 1 as a template.



Tighten fasteners (Items 3 and 4) after all fasteners have been installed.

2. Starting with the front center hole, install fasteners (Item 3) from bottom thru Items 1 and 2 to nut (Item 4) as shown.
3. Install all other fasteners. There may be extra fasteners depending on the length of the access panel bottom (Item 1).
4. Tighten all fasteners.

Service Parts

- Item 1 (part numbers will be etched on part)
- Item 3, Item 4 and Hex Key with hole (p/n S45-2996)

