

Installation

Access Panel Cam Lock Option




Thumb screws are not needed for LVQD1. LVQD2 and LVQD3 require (2) thumb screws along with (2) cam locks.



Use thumb screws to hold panel in position while fitting panel to bowl and wall.

A

Install (2) brackets (one on left side and one on right side). Secure lock bracket to inside of front bowl apron using #10 screw. Bracket tabs should touch bottom of bowl apron.

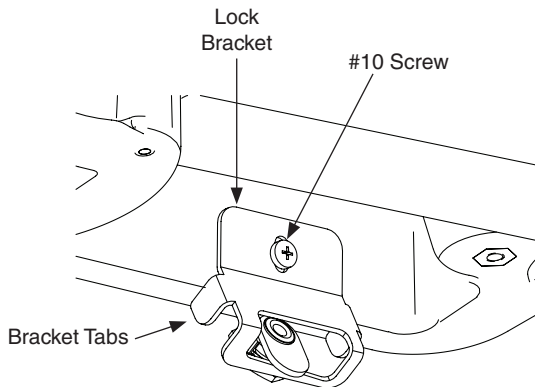

Evero Matte Only: Lavatory systems in the Evero Matte family feature a cam lock bracket that is integrated into the standard access panel bracket (shown below).

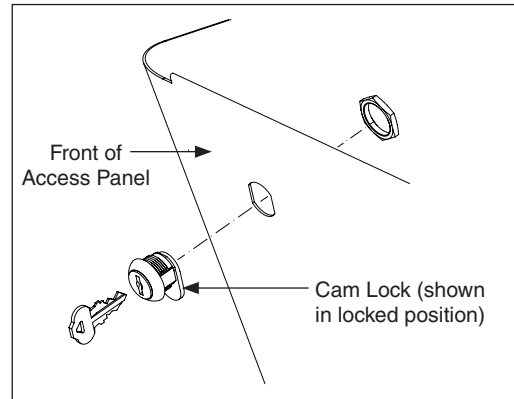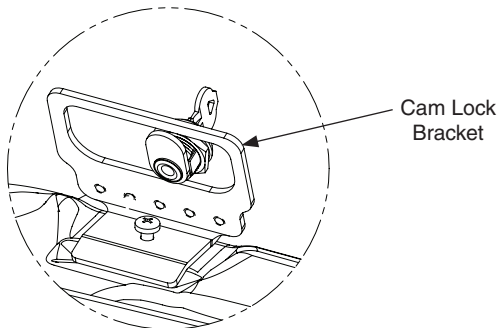

B

Position cam lock through access panel hole as shown and secure with nut (2 places).

C

Rotate key clockwise. Lock is now in open position (horizontal).

D

Swing access panel up and rotate key counter clockwise to lock panel.

E

If cam lock does not engage, adjust bracket as needed.

