


Assembly Instructions

Overhead Door Stop

July, 1998


KI
1330 Bellevue Street
Green Bay, Wisconsin 54302

TEL (920) 468-8100
FAX (920) 468-0280

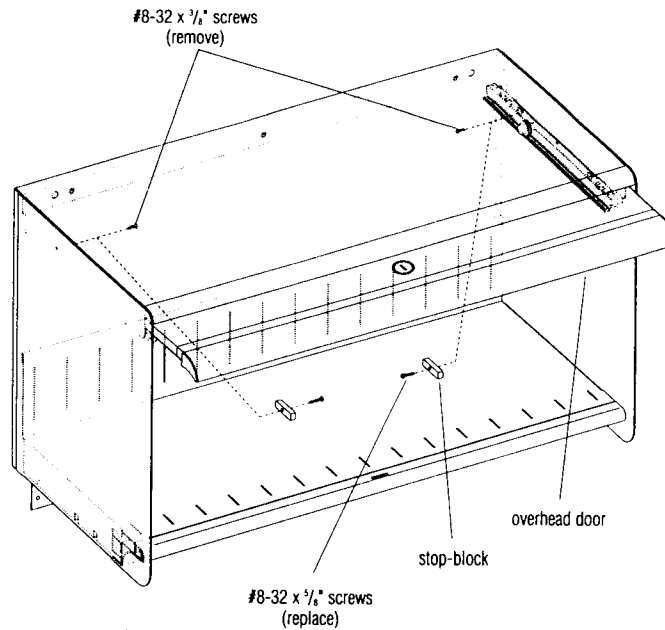

Note: The instructions below are to install a stop-block into the mechanism of the cabinet. The block is used to stop the overhead door from receding fully when the key is left in the door.

1. Flip open the overhead door and slide it approximately three-quarters into the cabinet to allow access to the rear, top shelf/door screws.
2. Remove the rear #8-32 x 3/8" screws from each side of the top shelf/door assembly.
3. Route the #8-32 x 3/8" screw through the mounting hole in the stop-block and secure the pair into the cabinet at the location which the 3/8" screw was removed from.

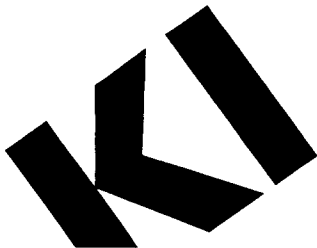

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be checked periodically after assembly. **Failure to assemble properly, or to secure parts may result in assembly failure and injury.** Illustrations and specifications are based on current product information at the time of this printing.