


Assembly Instructions


Adjustable WorkZone Privacy Screens/
Modesty Panels/Wireway

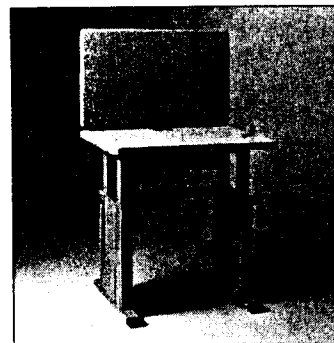


August, 1993

KI
1330 Bellevue Street
P.O. Box 8100
Green Bay, Wisconsin 54308-8100

TEL (414) 468-8100
FAX (414) 468-0280

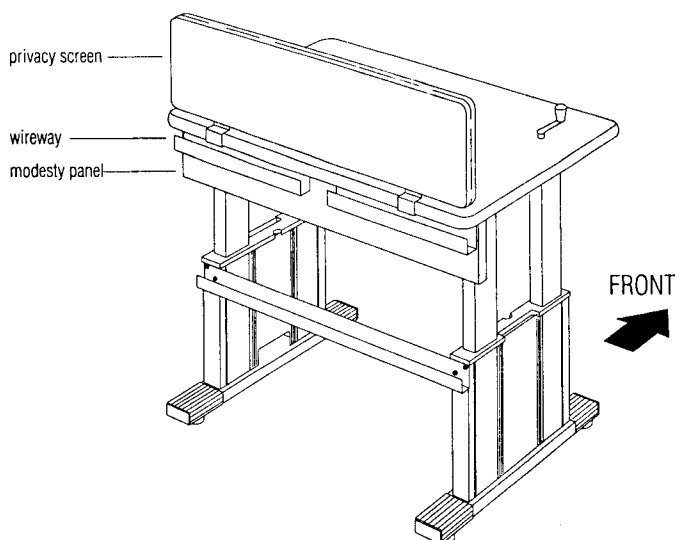

Side View

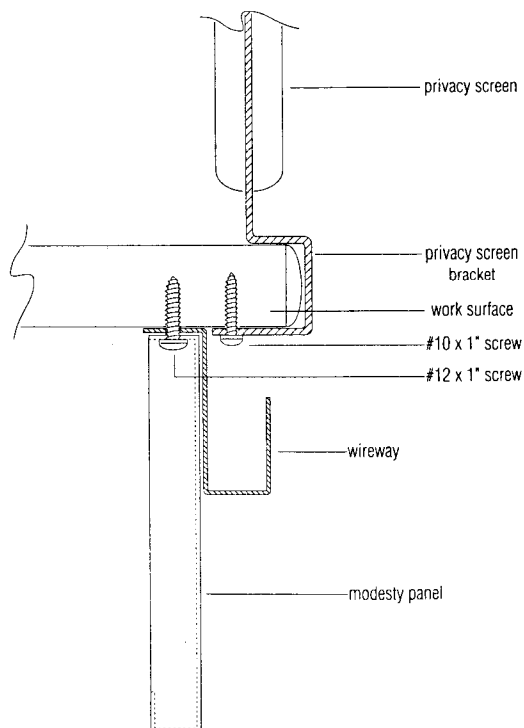

PRIVACY SCREEN

Screw #10 x 1" screws through the privacy screen bracket into the pre-drilled worksurface holes, as shown.

Note: If a wireway is also being used you must attach the privacy screen first.

MODESTY PANEL

Screw #12 x 1" screws through the holes in the modesty panel into the pre-drilled worksurface holes, as shown.


Note: If a wireway is also being installed it should be slid between the modesty panel and the worksurface. The #12 x 1" attaching screws then attach through the modesty panel holes, through the wireway holes then into the pre-drilled worksurface holes.

WIREWAY

Screw #12 x 1" screws through the holes in the wireway into the pre-drilled worksurface holes, as shown.

Note: If a modesty panel is also being installed it should be placed under the wireway. The #12 x 1" attaching screws then attach through the modesty panel holes, through the wireway holes then into the pre-drilled worksurface holes.

HARDWARE

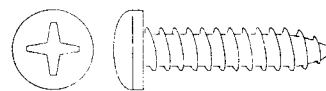

#12 X 1"



#10 X 1"



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be checked periodically after assembly. **Failure to assemble properly, or to secure parts may result in assembly failure and injury.** Illustrations and specifications are based on current product information at the time of this printing.