

Assembly Instructions

Wedge Worksurface

March, 1999

KI
1330 Bellevue Street
Green Bay, Wisconsin 54302

TEL (920) 468-8100
FAX (920) 468-0280

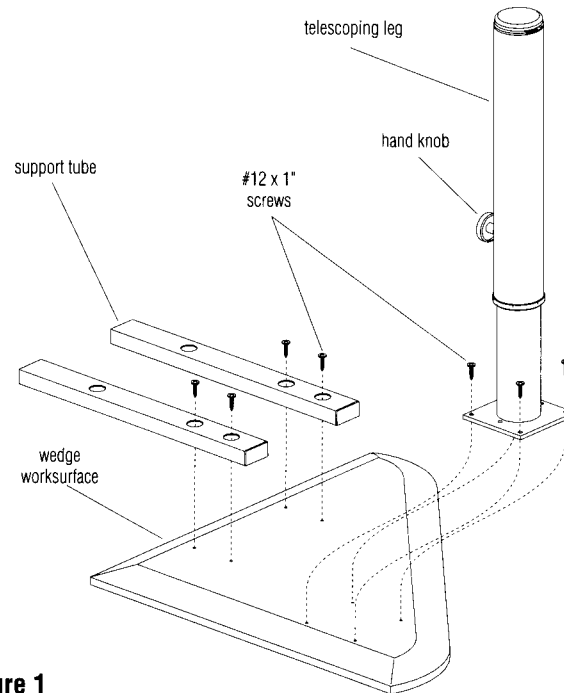


Figure 1

1. Carefully turn wedge worksurface upside down onto a soft protective surface. Attach the telescoping leg to the wedge worksurface using four #12 x 1" screws (Figure 1).
2. Attach two support tubes to the underside of the wedge worksurface using four #12 x 1" screws (Figure 1).
3. Loosen the hand knob on the telescoping leg. Adjust the leg to the approximate height of the workstation which the wedge surface will attach to. Tighten the hand knob to lock the leg into position (Figure 1).
4. Turn the wedge worksurface assembly right side up and position at the location where it is to be assembled to the workstation. Attach the support tubes and the support brackets to the underside of the workstation using ten #12 x 1" screws (Figure 2).
5. Make final height adjustments to the telescoping leg using the hand knob and/or the adjustable glide (Figure 2).

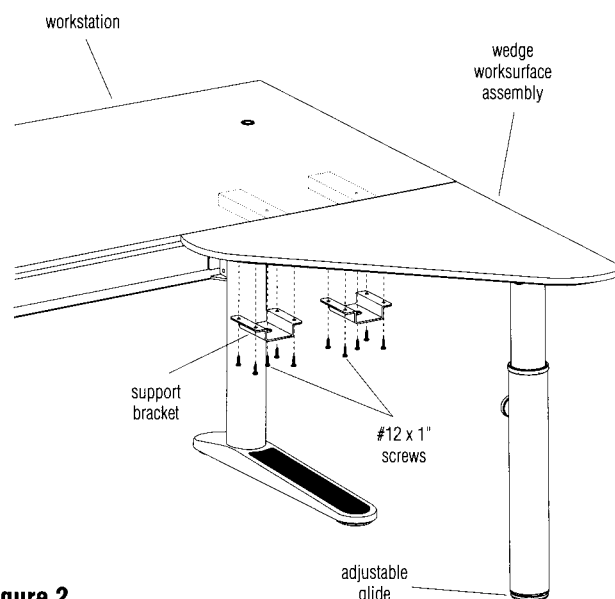


Figure 2



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be checked periodically after assembly. **Failure to assemble properly, or to secure parts may result in assembly failure and injury.** Illustrations and specifications are based on current product information at the time of this printing.