



Assembly Instructions ■

Bobbr Undermount Storage


June 2021

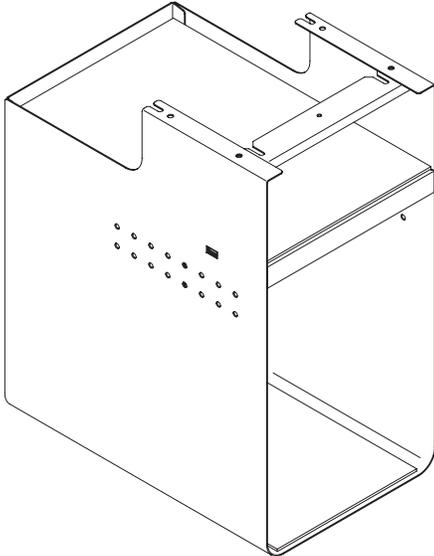


Open Top Shelf & Open Cubby Undermount Storage

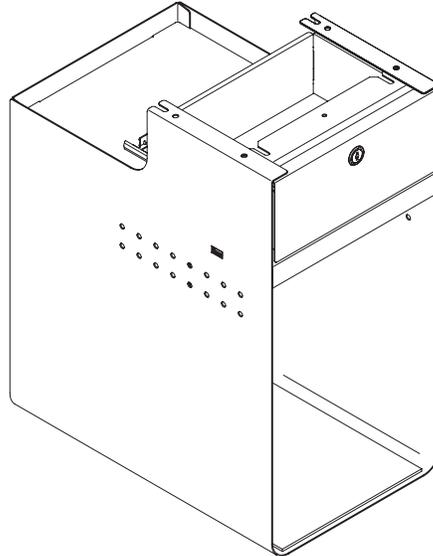

Top Drawer & Open Cubby Undermount Storage

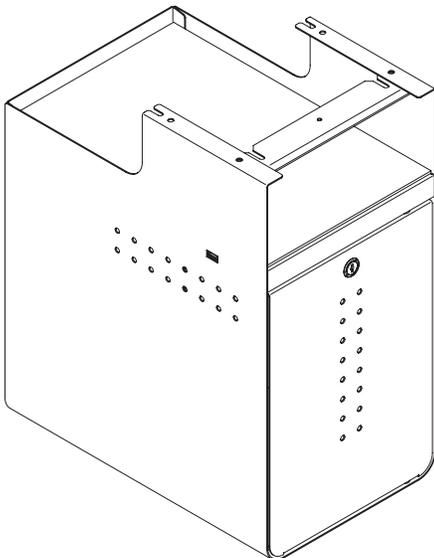

Open Top Shelf & Cubby with Door Undermount Storage

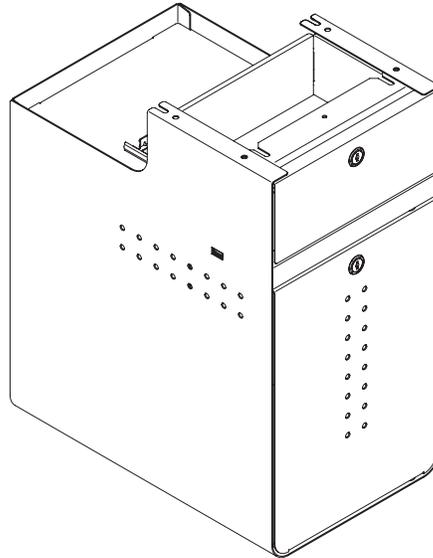

Top Drawer & Cubby with Door Undermount Storage

Bobbr Undermount Storage - Overview

Note: A variety of Bobbr undermount storage options are available as illustrated on this page. Storage units ordered with drawers and cubby doors arrive with the drawer and/or door fully assembled to the unit.

Important: Bobbr undermount units ship mostly assembled as ordered, and they may initially be purchased without a particular top drawer, cubby door, USB-A cable or hanging metal shelf option. If an option is desired and ordered later as a retrofit, refer to the "Bobbr Undermount Storage - Top Drawer, Cubby Door, USB-A Cable & Hanging Metal Shelf - Assembly Instructions" (KI-AI-000079).

1. If the Bobbr undermount storage unit being assembled will receive an optional USB-A cable, proceed to the next page. If the storage unit being assembled will not receive an optional USB-A cable, proceed to page 3.


CAUTION Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Bobbr Undermount Storage

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

USB-A Cable Installation

Note: Figures on this page show USB-A cable installation with the storage unit in the upright position. It may help to turn the unit on its side for some steps. Take care to always place the storage unit on a soft protective surface when assembling components.

Note: The USB-A cable port end may be installed on either side of the storage unit. Although the figures on this page show the port end being installed on the left side of the storage unit, the instructions apply to both orientations. Your configuration may vary.

1. Remove the #4-40 x 7/16" screws from the USB-A port end (Detail A).
2. Slide the USB-A spacer onto the USB-A port end so it straddles the port end base as illustrated (Detail B).
3. From inside the Bobbr storage unit, route the USB-A connector end through and out the 3/4" diameter hole on the back of the storage unit (Figure 1).
4. Route the USB-A port end with spacer down over the corresponding USB-A notch on the underside of the fixed shelf, inside the storage unit (Figure 1 & Detail C).
5. Secure the USB-A cable port end with spacer to the USB-A notch on the underside of the fixed tray using the previously removed #4-40 x 7/16" screws (Figure 2 & Detail D).
6. Remove the tape backing on the cable manager to expose the adhesive surface. From inside the Bobbr storage unit, position the manager centered on the underside of the fixed shelf. Apply firm pressure to the wire manager to set the adhesive (Figure 2 & Detail E).
7. Use the cable manager to strap the USB-A cable to the underside of the fixed shelf (Detail E).

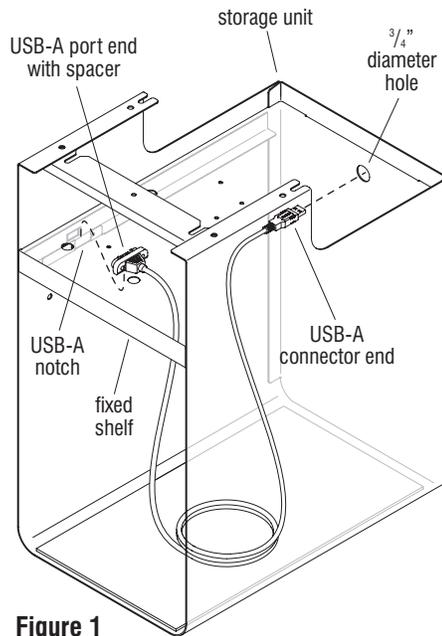


Figure 1



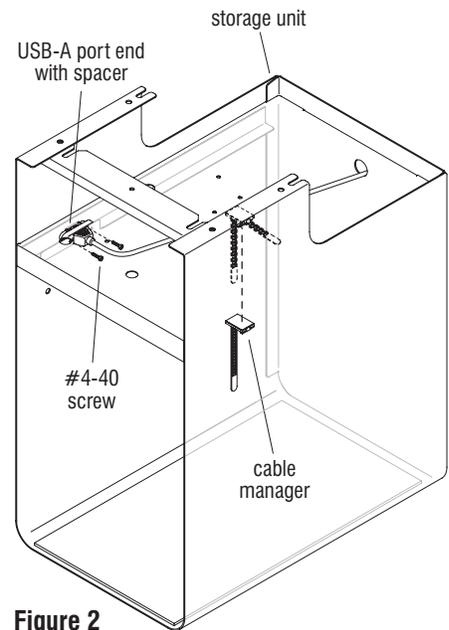



Figure 2

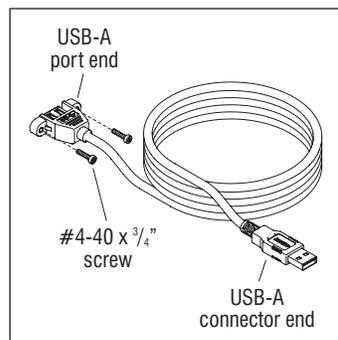


Detail A

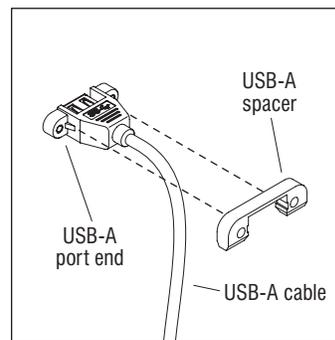


Detail B

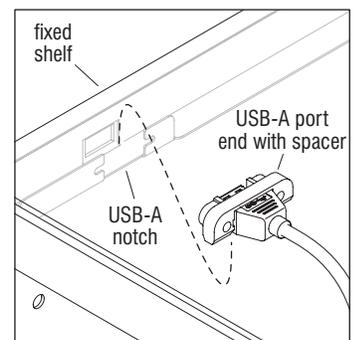

Detail C

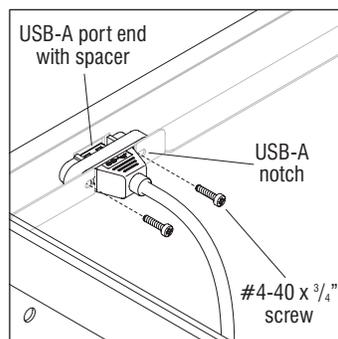


Detail D

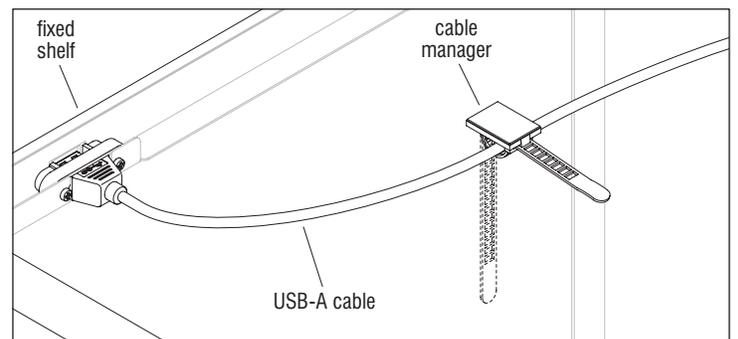


Detail E



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

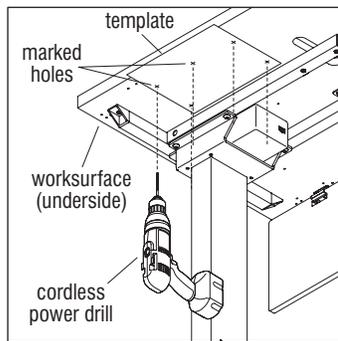

Detail F - (underside view)

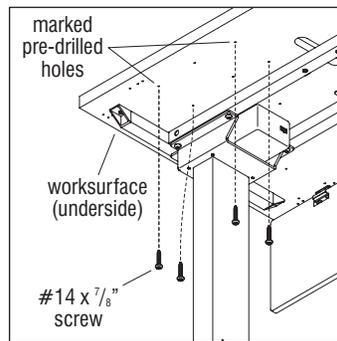

Detail G - (underside view)

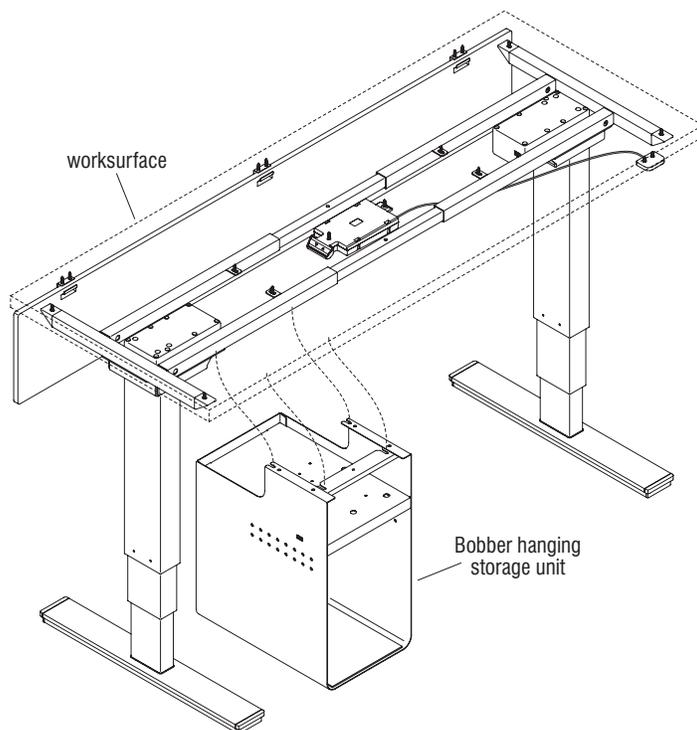


Figure 3

Storage Mounting Installation

1. Determine the desired location to mount the Bobbr undermount storage unit to the worksurface (Figure 3).
2. Using the Bobbr undermount storage template provided on page 7, hold or tape the template in the desired installation location, making sure the storage unit will not be obstructed by a leg or other components on the underside of the table. Assure that the template is straight, then carefully bore a $\frac{1}{8}$ " diameter pilot hole, $\frac{1}{2}$ " deep at the center of each of the five marked template locations underneath the worksurface using a cordless power drill. Take care to not drill too deep, piercing the worksurface (Detail F).
3. Using a cordless power drill with a #2 Phillips tip, partially twist a #14 x $\frac{7}{8}$ " screw into each of the four corner pilot holes, leaving a $\frac{1}{8}$ " gap between the screw heads and the worksurface (Detail G).

Bobbr Undermount Storage

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Storage Mounting Installation (cont.)

Note: If a storage unit being installed to a worksurface contains a top drawer, it must be extended out, to gain access to tighten screws. For easier installation, the drawer may be removed by referencing instructions on page 6.

- Carefully lift the Bobbr storage unit up and align the slots on top of the storage unit with the screws underneath the worksurface. Slide the storage unit back until the screws reach the end of each slot (Figure 4).
- Locate the suspended storage unit's front, middle hole location and associated fixed shelf access hole below it. Place a #10 x 1/2" screw onto a 6" long #2 Phillips tip chunked into a cordless screwdriver. Insert the screw up through the fixed shelf access hole and into the mounting hole at the front, middle of the storage unit and secure the front to the worksurface (Detail H).
- Using a cordless screwdriver and 6" long #2 Phillips tip, one at a time insert the tip through the four fixed shelf access holes to tighten the four screws installed in step 3. Tighten the four corner screws to fully secure the hanging storage to the worksurface (Detail H).
- If a top drawer was removed from the storage unit, proceed to "Top Drawer Installation" instructions on page 6. If the storage unit does not have a top drawer, locate two strips of double-sided tape. Cut each piece in half and apply a strip to each corner of the shelf felt pad, about 1/4" from the edges. Remove the backing from the double-sided tape adhered to shelf felt pad. Guide the pad through the drawer opening until it reaches the back of the storage unit. Align the pad so there is an equal amount of space on both sides of the pad once set onto the fixed shelf, then set to adhere to the shelf (Detail I).



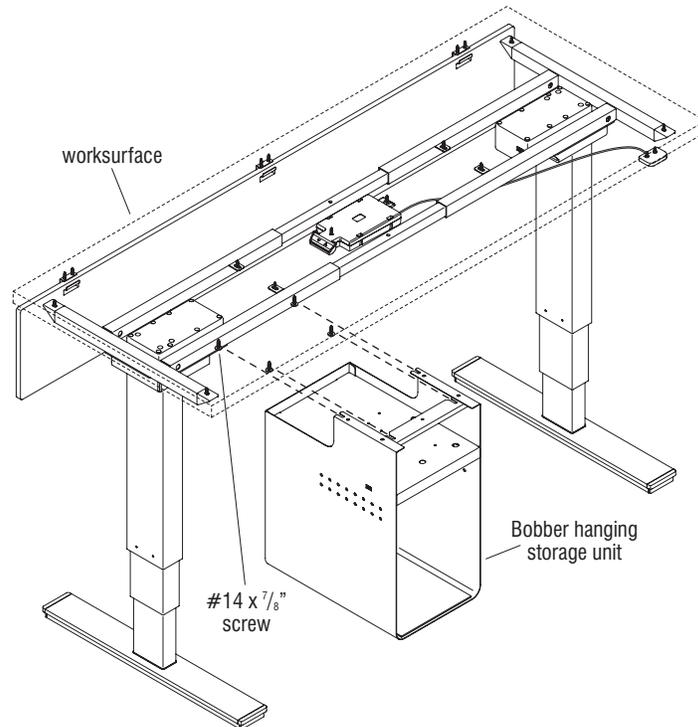



Figure 4

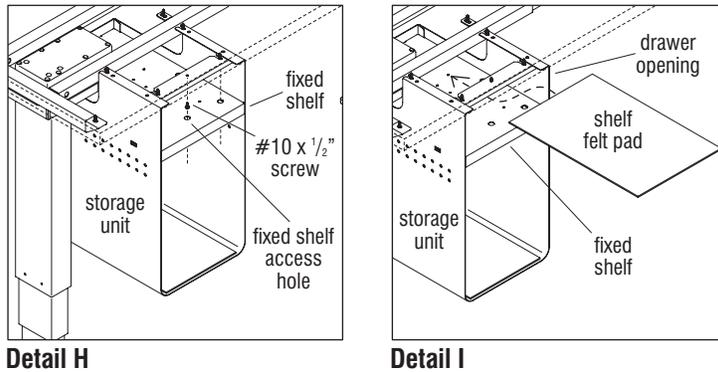

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

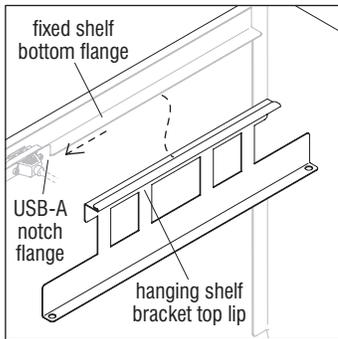

Detail A

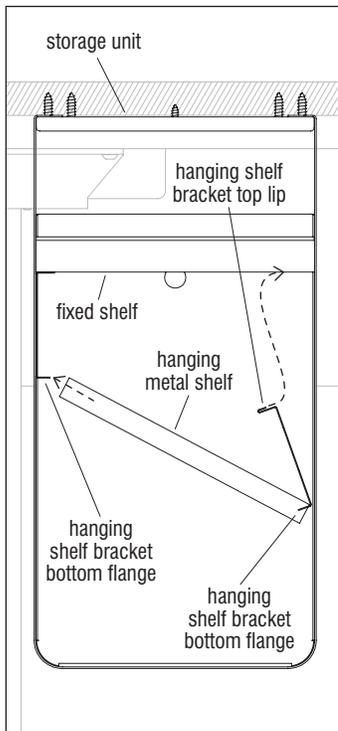

Detail B - (front view)

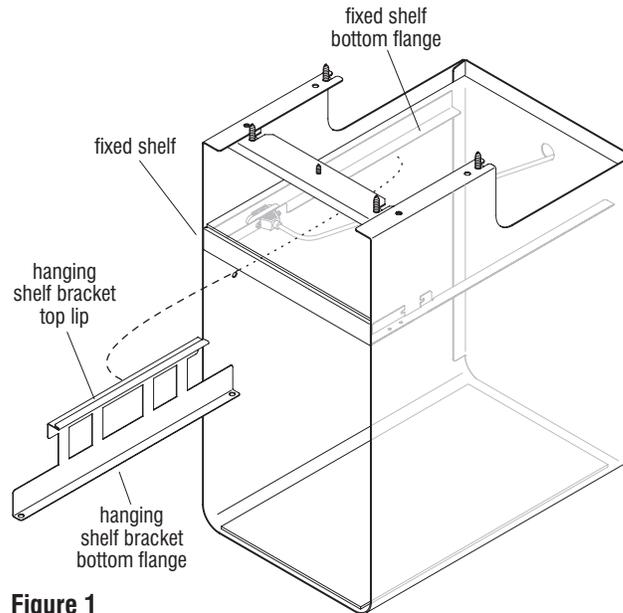


Figure 1

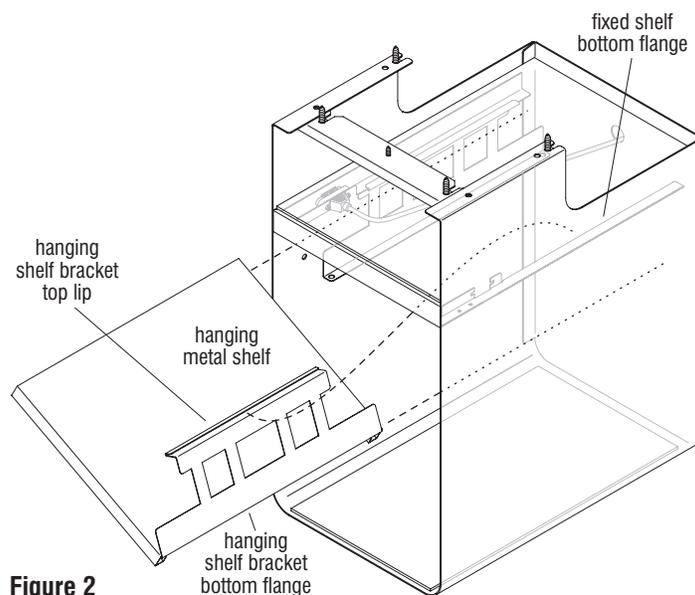


Figure 2

Hanging Metal Shelf Installation (optional)

Note: The hanging metal shelf is an optional accessory available on Bobber undermount storage.

1. From inside the Bobbr storage unit, insert the top lip of one hanging shelf bracket over the bottom flange of the fixed shelf (Figure 1 & Detail A).
2. Pull the installed hanging shelf bracket toward the USB-A notch flange in order to create a small gap between the back of the bracket and the back of the storage unit (Detail A).
3. Locate the second hanging shelf bracket and insert the bottom flange of the bracket to the underside of the hanging shelf as illustrated in Figure 2.
4. Fully insert the hanging shelf and bracket into the storage unit. Slightly angle the hanging shelf so the side without the bracket can slide into the bottom flange of the first hanging shelf bracket (Detail B).
5. Lift up the opposite side of the shelf with the second hanging bracket, then orient the bracket so it is approximately 45° to the shelf for ease of installation. Rotate the second hanging shelf bracket until the top lip of the shelf bracket engages the bottom flange of the fixed shelf (Detail B).

Bobbr Undermount Storage

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Top Drawer Removal

1. Open the top drawer until suspensions are fully extended (Figure 1).
2. Underneath the top drawer, locate the black plastic tabs on each end of the middle suspensions. Press the black plastic tabs in at the same time while pulling the drawer out to disengage the inside suspensions and drawer from the middle suspensions (Figure 2, Details A & B).

Top Drawer Installation

Note: Reinstallation of the top drawer should only take place after the Bobbr undermount storage has been securely mounted to the worksurface.

1. On top of the fixed shelf, fully slide both middle suspensions into the outer suspensions (Detail C).
2. Align the inner suspensions on the underside of the drawer with the middle suspensions and slide the drawer into place until each middle suspension black tab engages the inside suspension slots of the drawer, and the drawer slides into the storage unit completely (Detail B).

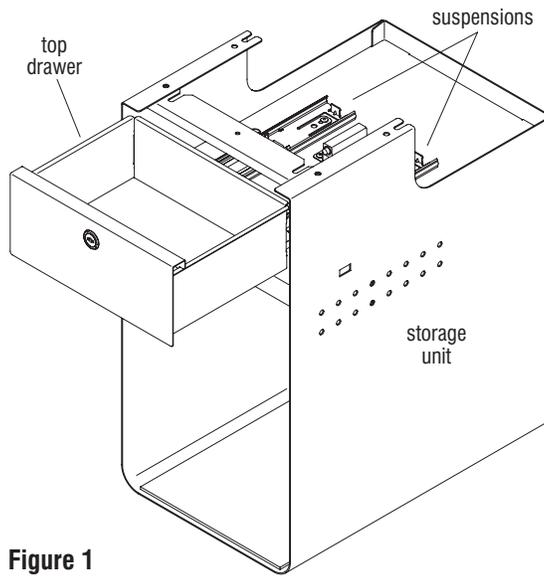


Figure 1



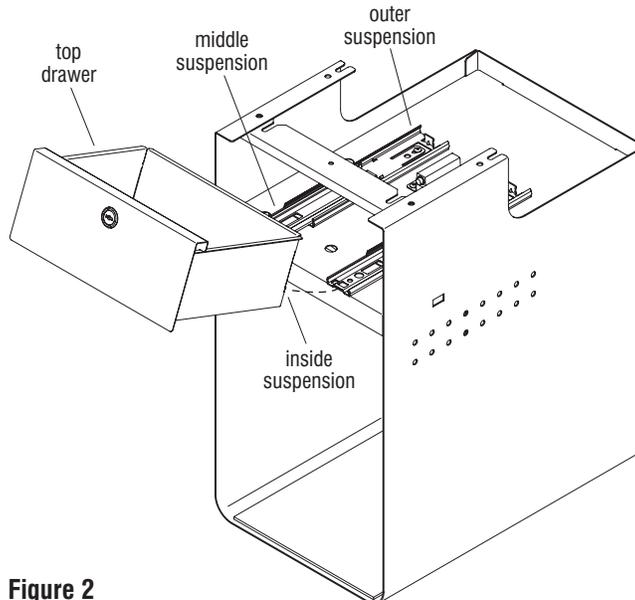



Figure 2

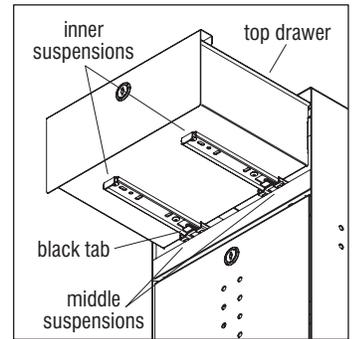


Detail A - (underside view)

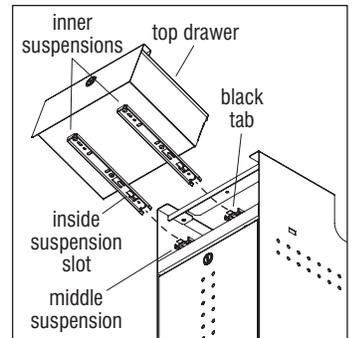

Detail B - (underside view)

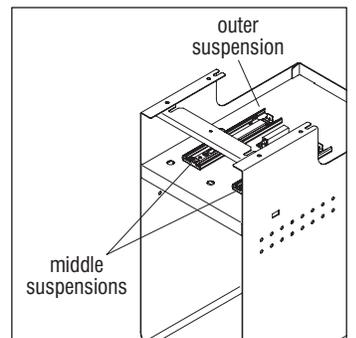

Detail C

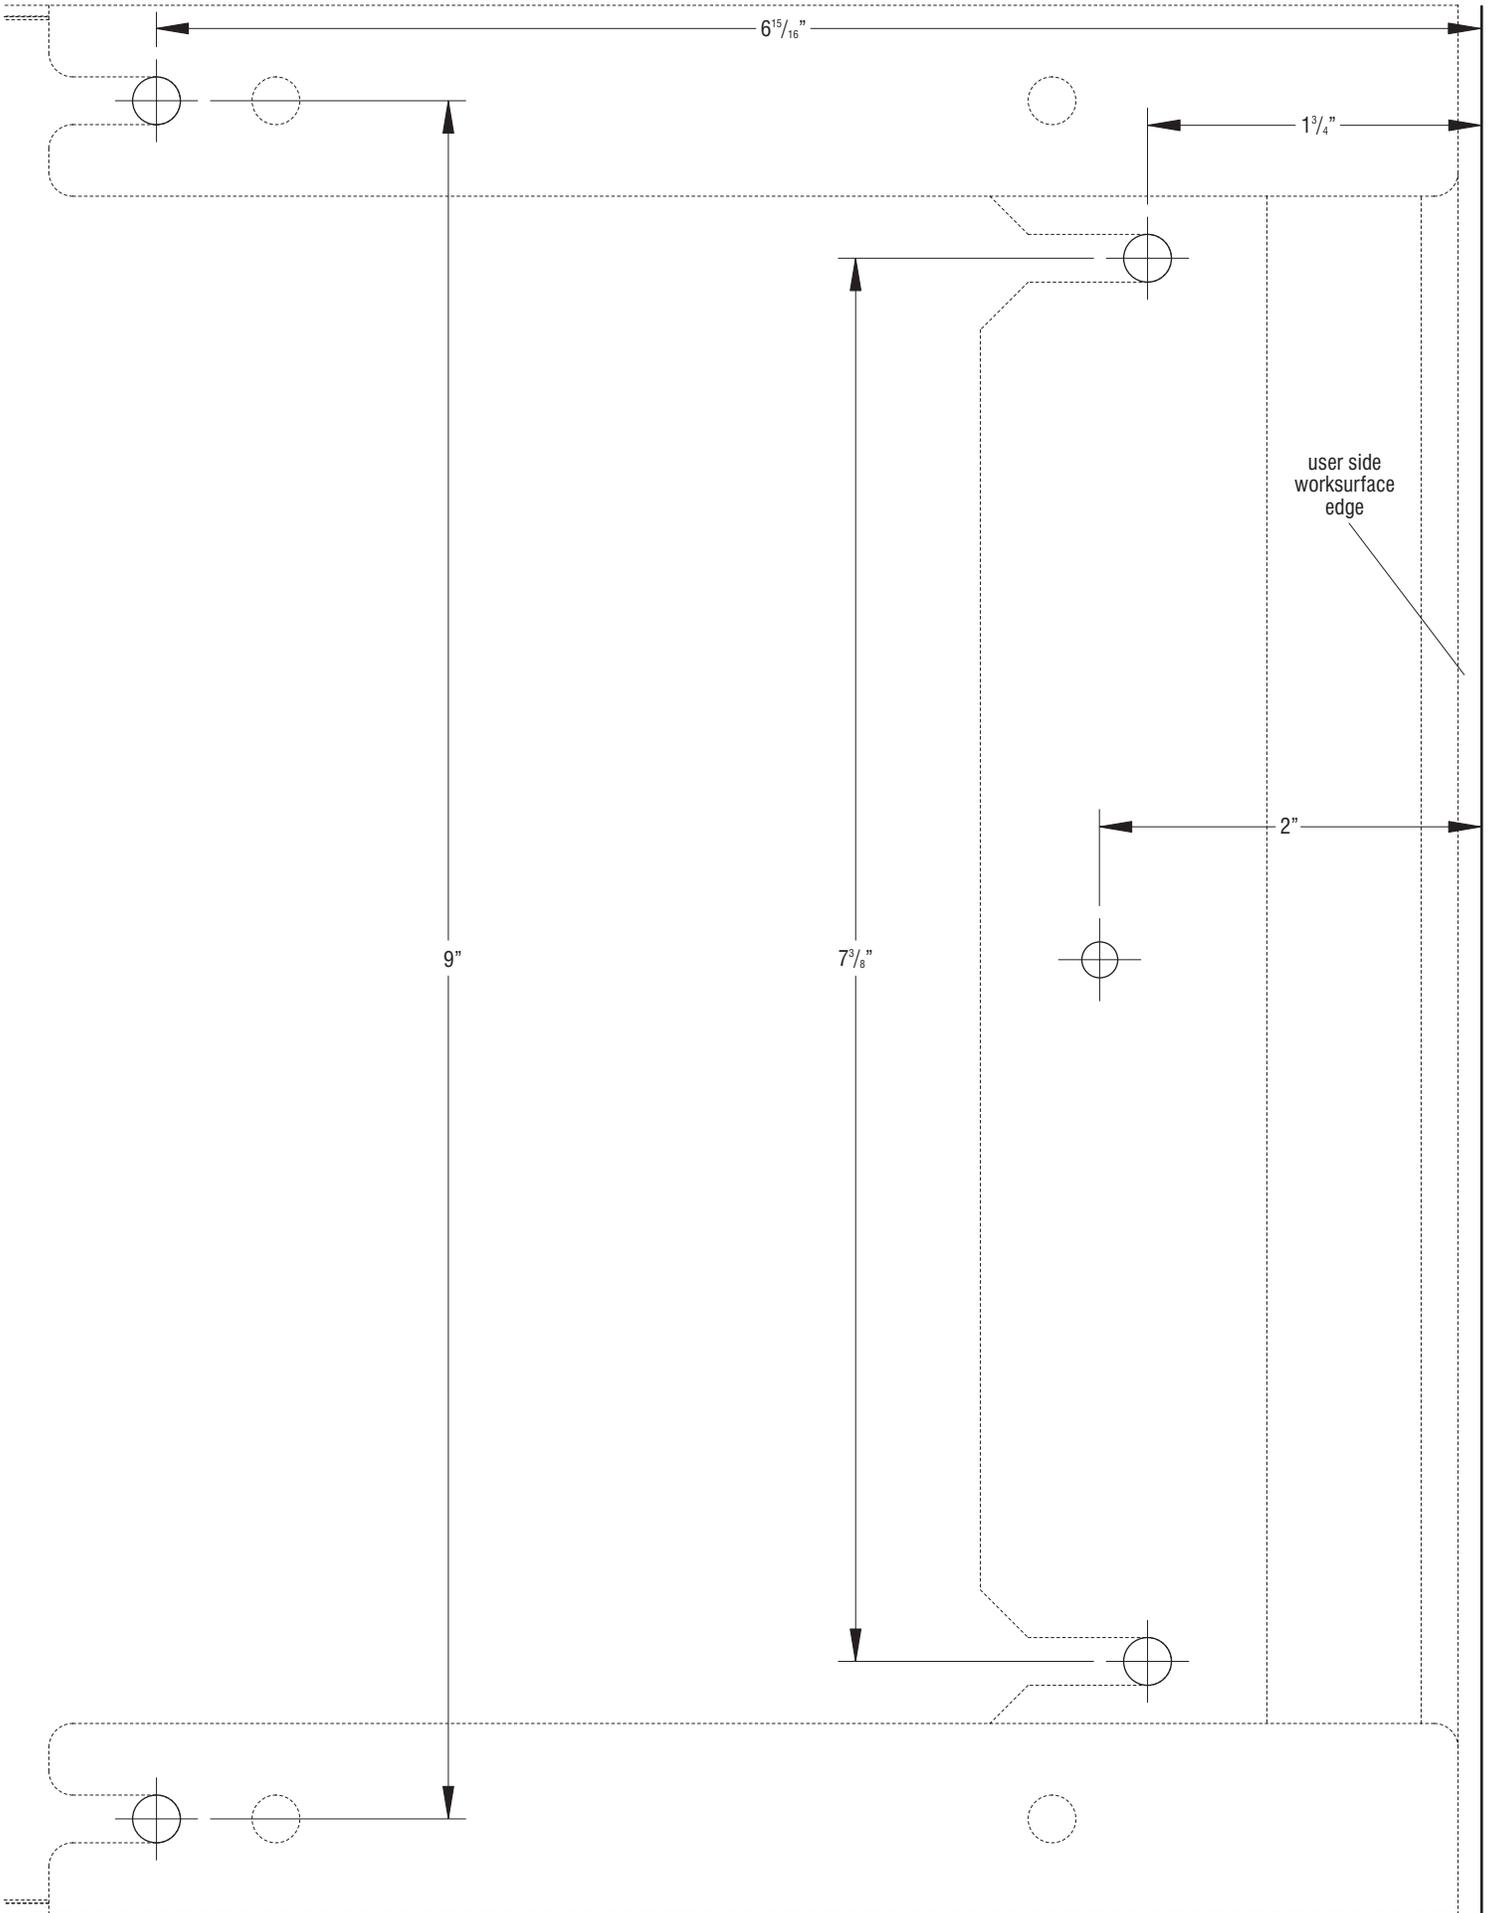

■ **Bobbr Undermount Storage**
Assembly Instructions

1330 Bellevue Street • P.O. Box 8100 • Green Bay, WI 54308-8100 • Tel 1-800-424-2432 • www.ki.com

Part # 2.41093

© 2021 Krueger International, Inc. All Rights Reserved • Code KI-AI-000078/KI/PDF/0621



Furnishing Knowledge®