



# Assembly Instructions

Tattoo™ Pedestal


June 2023

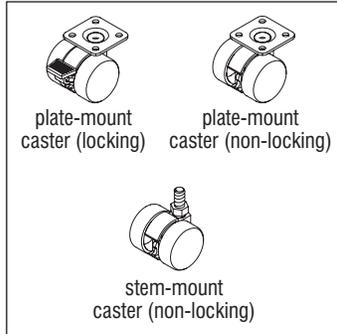

Detail A

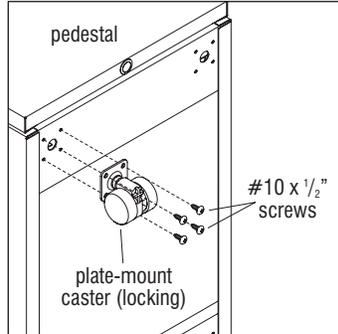

Detail B

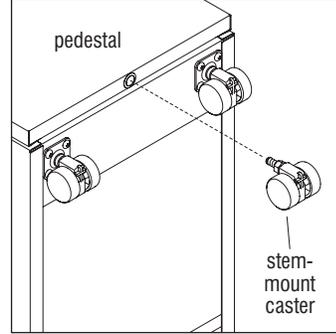

Detail C

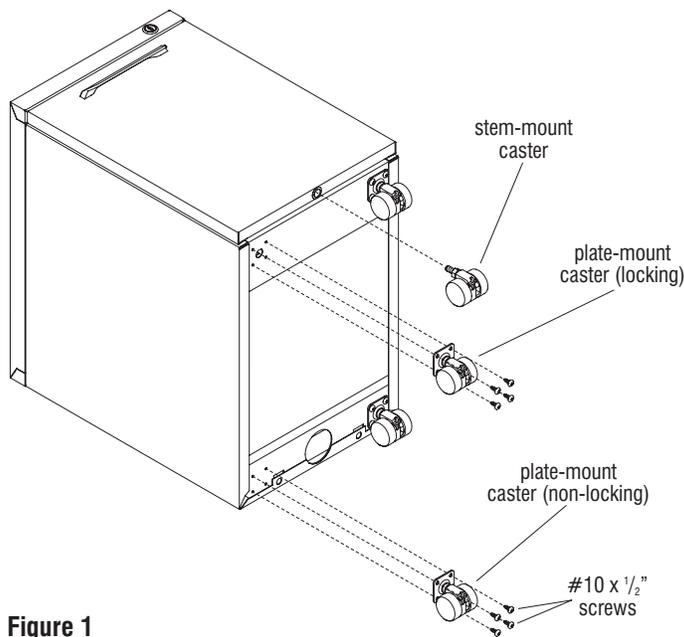


Figure 1

## Required Tools

- 12mm Hex Wrench
- Power Drill Driver
- #2 Phillips Tip

## Caster Installation

1. Carefully lay pedestal onto a soft, protective surface, on its back-side as illustrated (Figure 1).

**Note:** Leg posts are not available on pedestals. Four plate-mount casters (two locking and two non-locking) are provided, and are installed directly to the underside of the base. A stem-mount caster is also provided, and installs to the bottom of the drawer face (Detail A).

2. Align the mounting holes of each plate-mount caster with the pilot holes on the underside of the pedestal, making sure to position the two locking casters towards the front, user side of the pedestal and the non-locking casters at the back. Using a #2 Phillips tip and power drill driver, secure each caster to the underside of the pedestal with four #10 x 1/2" screws (Figure 1 & Details A & B).

3. Using a 12mm hex wrench, fasten the stem-mount caster into the threaded insert at the underside of the pedestal drawer and tighten securely (Figure 1 & Detail C).

4. Once all casters have been installed to the underside of the pedestal, carefully turn the pedestal to the upright position.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

# ■ Tattoo™ Pedestal

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

## Padded Topper Installation (optional)

**Note:** The pedestal padded topper is an optional accessory that must be ordered separately.

1. Place the padded topper on top of the corresponding unit. The anti-skid rubber strips located on the bottom of the topper keeps sliding of the topper to a minimum (Figure 2).

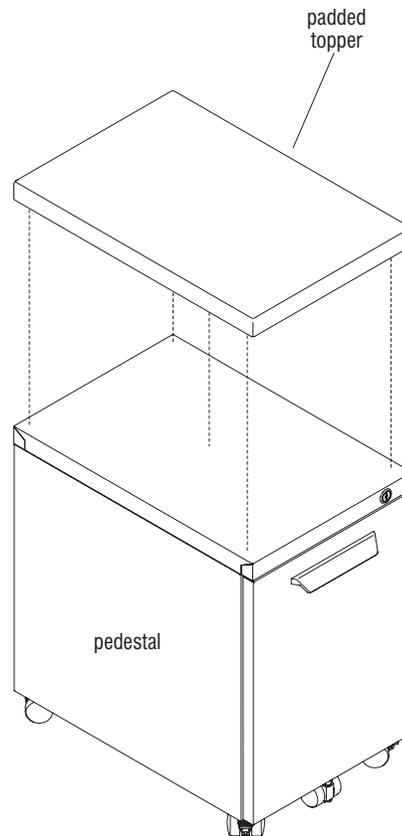


Figure 2