

## Seminar™ Tables with 4-Wire Power System

January 2023




# Seminar™ Tables with 4-Wire Power System - Floor Anchor Specifications

## Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

### Floor Anchor Specifications

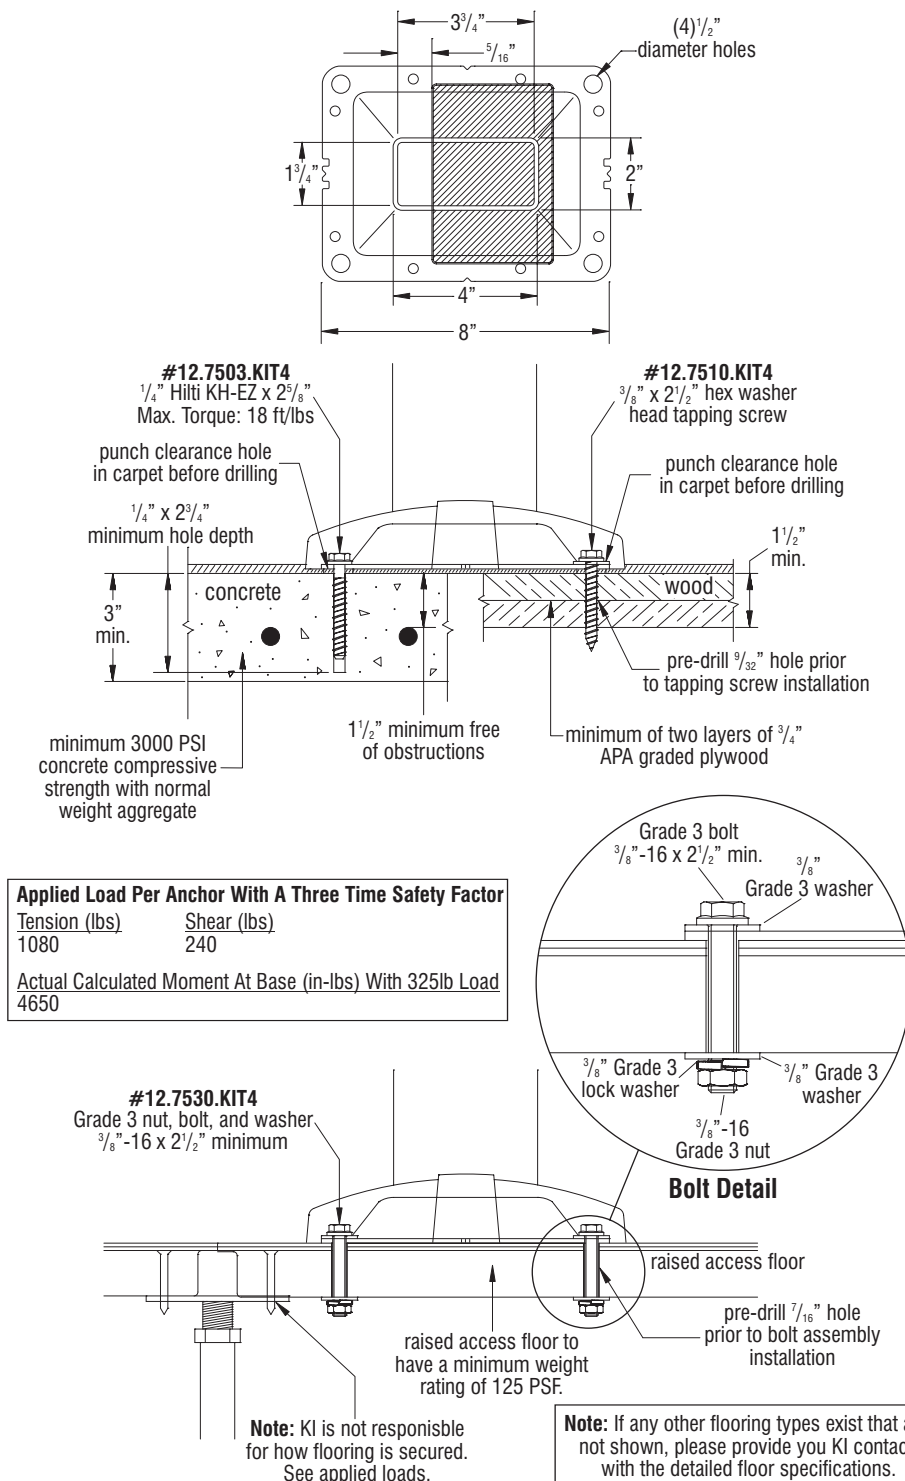



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

## TOOLS REQUIRED

- Quick clamps
- Level
- Hammer drill and bit for concrete anchor holes
- Drill and bit for pilot holes in wood floor
- Socket set
- #2 and #3 Phillips head screwdriver bits
- Tape measure
- C-clamps
- Caulk gun

**Note:** Read these assembly instructions carefully prior to product installation. Product failure may result if instructions are not followed.

## MINIMUM CONSTRUCTION REQUIRED FOR FLOOR MOUNTING

### Wood Floors

- Minimum two sheets  $\frac{3}{4}$ " thick plywood
- APA rated grade plywood
- Allow minimum embedment  $1\frac{1}{2}$ " with lag screws

### Concrete Floors

- 3000 psi Concrete compressive strength
- 3" thick free of obstructions for  $1\frac{1}{2}$ "
- Riser to be plumb within  $\frac{1}{8}$  degree
- Minimum anchor embedment  $1\frac{1}{2}$ "

**Note:** Warranty null and void if KI product is installed on flooring not meeting minimum structural requirements stated above.

## FLOOR FASTENER REQUIREMENTS

### Wood Floors

- $\frac{5}{16}$ " x  $2\frac{1}{2}$ " hex washer head tapping screw
- Four bolt assemblies required per upright

### Concrete Floors

- $\frac{1}{4}$ " Hilti KH-EZ x  $2\frac{5}{8}$ "
- Max torque: 18 ft/lbs
- Four screw assemblies required per base

**Note:** Floor mounting fasteners are not provided, unless specified.

- For questions concerning anchor selection and special floor conditions, please contact KI Customer Service at 1-800-424-2432.

## STEPS FOR INSTALLATION

1. Read and review Assembly Instructions.
2. Review space-planning layout.
3. Review job site and verify field conditions.
4. Verify floor structural conditions.
5. Stage product for installation.
6. Locate and mark reference points to floor.
7. Locate and install columns and tabletops. If any below floor power infeed runs up any column, install infeed in column before installing column to floor.
8. Attach duplex receptacles to underside of table.
9. Install power infeed and receptacle Jumpers.
10. Install receptacle hub shrouds and jumper covers.
11. Connect power infeed to building power source (electrician) (for 4-Wire Power System).
12. Check mechanical and electrical operation (for 4-Wire Power System).
13. Install modesty panel and other accessories if required.
14. Clean product and site.
15. Walk through with installation crew to assure the product has been installed per assembly instructions and space-planning layout.
16. Perform final walk through with the customer. Receive sign off.

**Note:** Dimensional spacing referenced is center line to center line unless otherwise noted.

## ■ Seminar™ Tables with 4-Wire Power System - Bases & Tops

### Assembly Instructions




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

### Seminar Table Base & Top Installation

**Note:** When installing Seminar Tables equipped with the power module or undersurface power, extra care must be taken to hold very close tolerances to the dimensions shown on the space-planning layouts. Failure to follow the dimensions shown may prevent proper installation of the electrical components.

1. Refer to the space-planning layouts and the identification numbers on the underside of the tabletops. Carefully position tops on the floor, top side up, at the location that they will be installed later (Figure 1).
2. With the tops properly laid out on the floor, refer to the space-planning layouts to determine the front-to-back center line locations for base flanges. Mark the front-to-back center line location for each base flange on the floor at the front and rear edge of the tabletops. Make a perpendicular mark at the front edge of the tabletops (Figure 1). Move the tabletops back far enough to make the final marks for the position of base flanges.

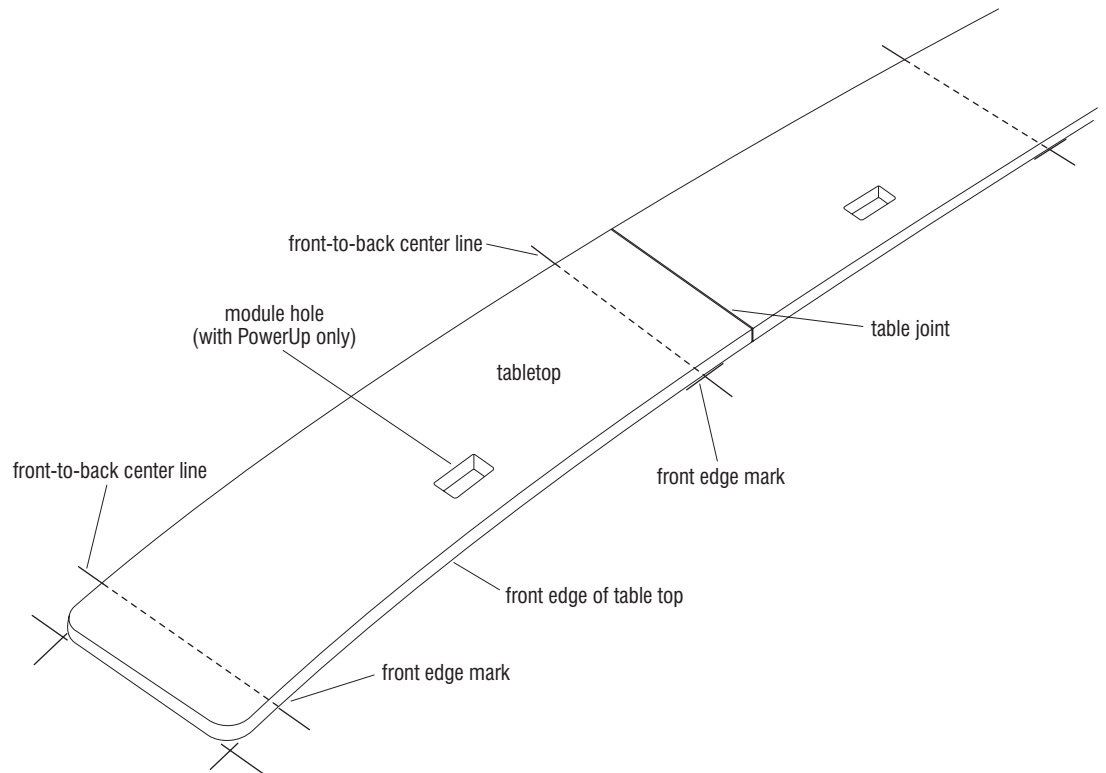

**Figure 1**



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.



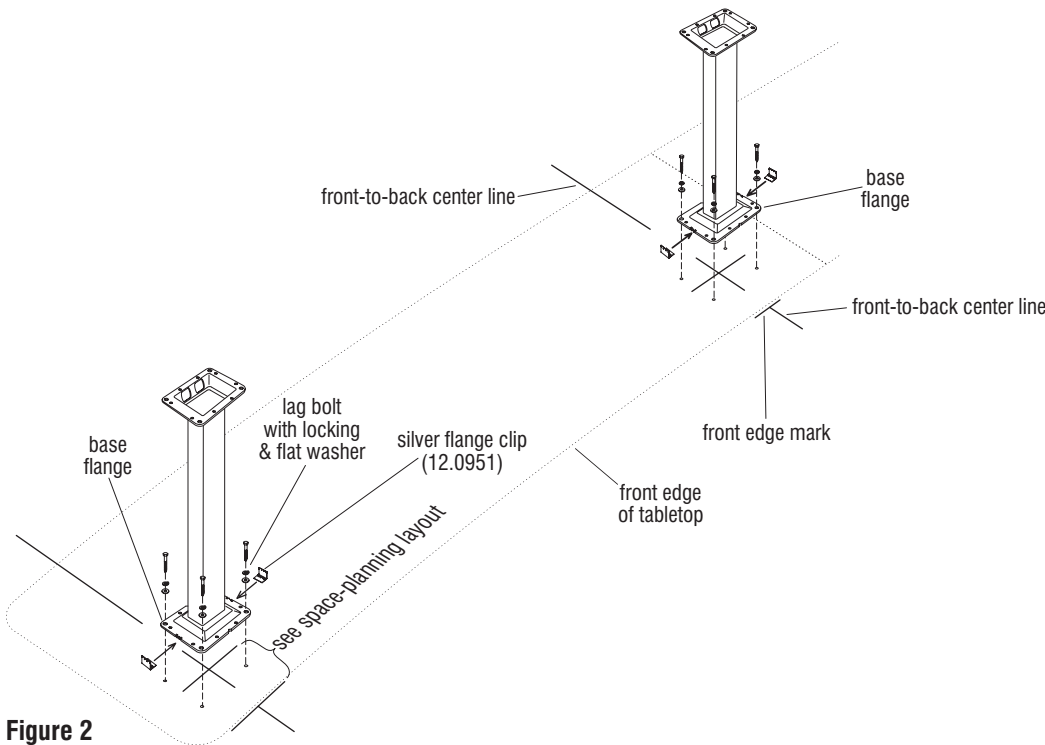



Figure 2

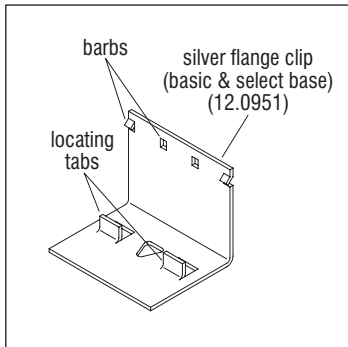


Silver Flange Clip - Basic & Select

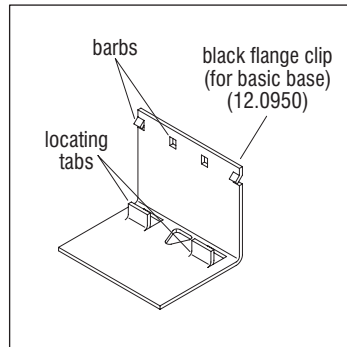

Black Flange Clip - Basic Base

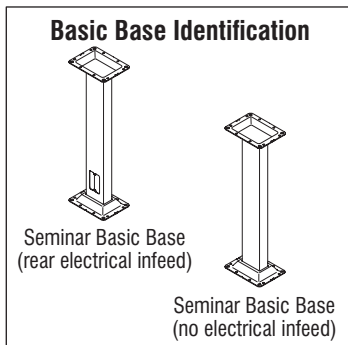

Detail A

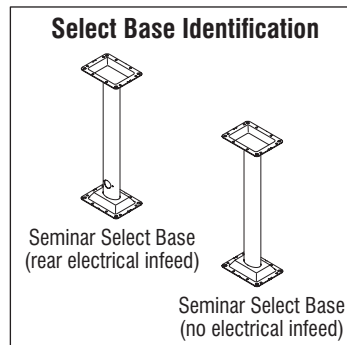

Detail B

#### Seminar Table Base & Top Installation (cont.)

- Refer to the space-planning layout and Figure 2 above, to accurately mark for base flange mounting locations on the floor (Figure 2).

**Note:** On carpeted floors, it is recommended that the carpet be removed directly under the base flange for full contact of the base with the floor. If carpet is not removed, the floor anchors must be retightened after two weeks of use.

- Identify the different base types to be used on the installation (Detail A or B). Lay out the bases according to the locations specified on the space-planning layout. Position the

base on the floor at the center mark where the base will be installed. Determine if bases are to be installed: (a) over the carpeting or (b) with carpeting removed.

(a) With the base correctly centered over the marks on the floor, mark where the anchor holes are to be drilled into the floor. Using a  $\frac{1}{2}$ " diameter hollow punch, cut out carpeting for anchor holes. Read note below and go to step 5.

**Note:** After two weeks of use, the base flange mounting fasteners must be rechecked for tightness.

(b) With the base correctly **centered** over the marks on the floor, mark around the perimeter of the base for removal of the carpeting. Cut and remove the carpeting. Mark the anchor hole locations on the floor.

**Note:** If power infeed is to be run from below the floor (no exposed connections), the wires should be run up through the column prior to installing the base flange to the floor.

- Bore anchor holes to minimum  $\frac{1}{4}$ " x  $2\frac{3}{4}$ " hole depth for concrete anchors, or  $\frac{9}{32}$ " hole for wood floor, with flat washer and lock washer (not included). Locate base over pre-drilled holes and drive in (do not tighten) mounting fasteners. **Shim under base flange with steel washer(s) as needed to level or compensate for floor variances. See shim instructions (KI-62058) included with shim kit (Figure 2).**

- For Basic (rectangular) and Select (oval) bases, use the silver flange clips (12.0951). Center flange clips under both 6" sides of base flanges, with the barbs up. Insert the locating tabs of the flange so that they are tight into the base flange notches for proper engagement of flange covers later. After all bases are positioned and adjusted with shims, securely tighten base flanges to the floor (Figure 2). Do not install plastic flange covers until step 11.

## ■ Seminar™ Tables with 4-Wire Power System - Bases & Tops

### Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

**WARNING:** Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

#### Seminar Table Base & Top Installation (cont.)

7. Carefully position tabletops onto tabletop mounting flanges of installed bases. Recheck space-planning layout and identification numbers under tabletops to verify correct location.
8. Tabletops are to be joined together from underneath with two KV joint fasteners per pair of tabletops (Figure 3). First join both tabletops together, aligning the hardwood spline (installed in one tabletop at the factory). Check to make sure hardwood spline fits snug in both tabletops. If it does not, lightly sand down the spline so it does fit. If this is not done, it may be difficult to get a tight fit on the tabletop seam. The spline joint and tabletop seams are to be glued using the adhesive supplied with the KV fasteners. Do not use a wood glue for seam gluing as the working time for that adhesive is too short. Then, thread each draw bolt a few turns into each tightening nut and press each pair up into a  $\frac{7}{8}$ " hole and slot. The flat end of each draw bolt will be visible in the  $\frac{7}{8}$ " holes of the tabletop being joined. Insert locking sleeves into the  $\frac{7}{8}$ " holes so that the slotted sleeve engages the rounded collar on the bolt (Figure 3). Tighten the nut with a tightening tool or nail set. Check the top side of the joint for proper alignment. The joint should be smooth and level with no gaps. Adjust as necessary to achieve a "seamless" look. Once the seam is glued, use the C-clamps to clamp either end of the seam.

**Note:** Each pound of pressure on the tightening tool exerts 500 pounds of force on the joint. Overtightening the KV fasteners will cause the tops to delaminate.

9. Per the space-planning layout, secure the required number of 5" x 5" splice plates over the joint using four #14 x 1" screws per plate, torqued to 100 in/lb. Continue securing all joints with adhesive, KV joint fasteners and splice plates along the run of tabletops (Figure 4).

**Note:** Allow assembled tabletops time for joint adhesive to cure (approximately 1 hour) before moving to assemble to support arms, and before installing splices.

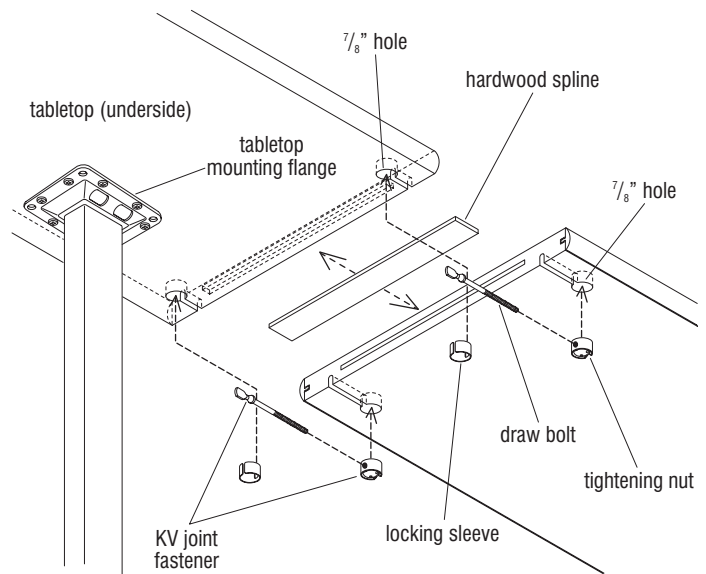


Figure 3

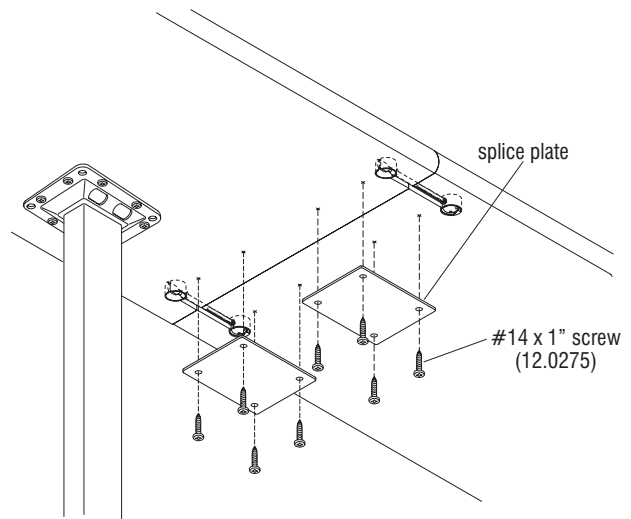


Figure 4



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


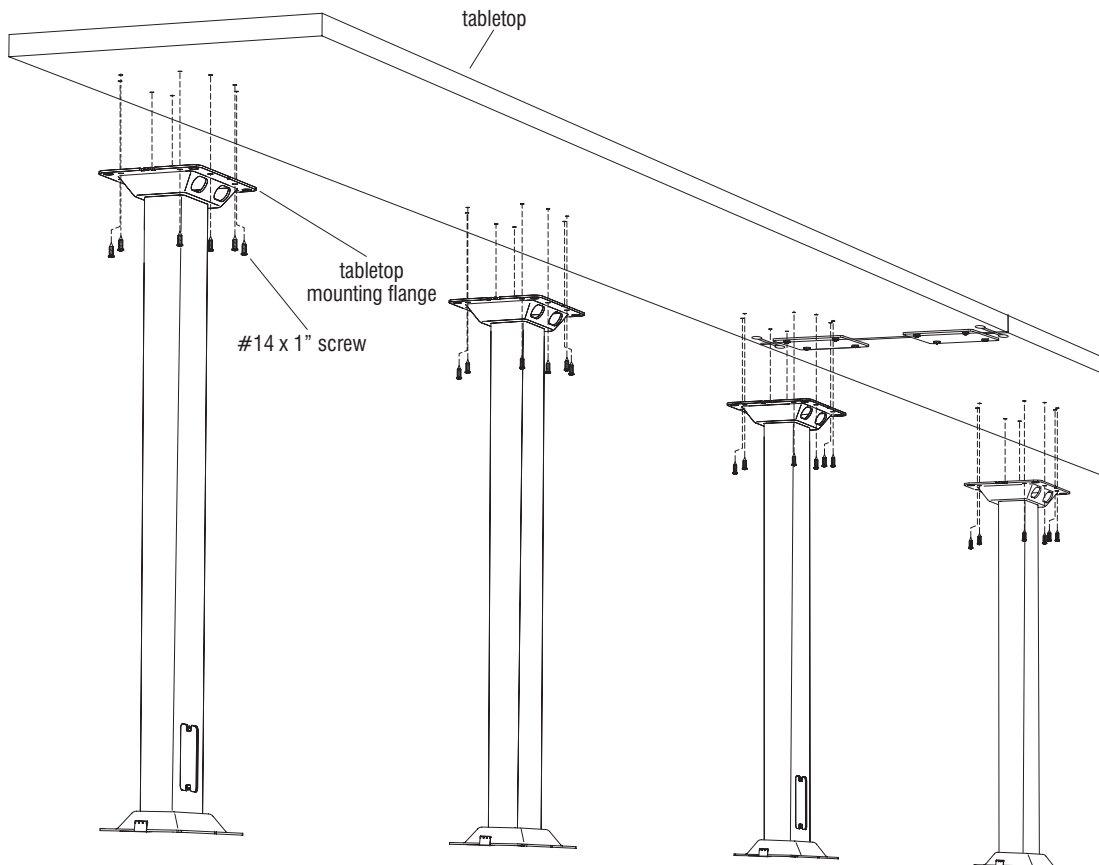



Figure 5

### Seminar Table Base & Top Installation (cont.)

10. With tabletops joined together correctly in place on tabletop mounting flanges (per the space-planning layout), check to be sure tabletops are level. Use shims between tabletop and mounting flange to assure that the joint stays flush and tabletops are level. Pre-drill holes with  $\frac{3}{16}$ " drill bit, and secure tabletops to mounting flanges with eight #14 x 1" screws torqued to 100 in/lb per flange (Figure 5).
11. Position plastic flange covers over the base flange at each side of either the rectangular or the select base oval column. Snap the flange covers together and push the flange cover down tight to the floor to engage the flange clips and secure the cover (Detail C or Detail D).

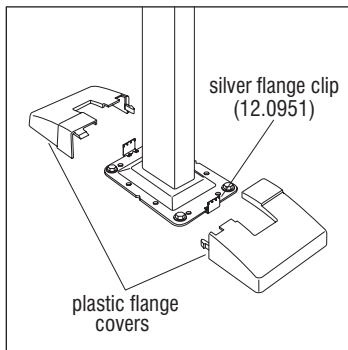

Detail C - Basic Base

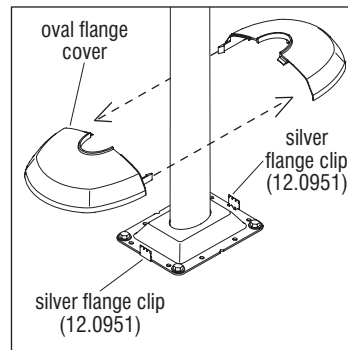

Detail D - Select Base



# Seminar™ Tables with 4-Wire Power System - Receptacles

## Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

### Receptacles Installation

**Note:** All table connections (joint fasteners and splice plates) must be securely fastened before electrical components can be installed.

**Important:** Duplex receptacles must install correctly oriented to the power infeed they will receive power from. The single ground prong must always orient toward the power infeed. If this is not done, disassembly and re-assembly will be required.

12. Position the receptacle mounting brackets up to the pre-drilled mounting holes as illustrated, and secure each using two #10 x 3/4" screws per bracket. Torque screws to 25 in/lb (Figure 6).
13. Reference the space-planning layout and determine where the power infeed(s) are located, and which direction the power will run on the length of tabletops before installing duplex receptacles. Position each duplex receptacle with the single ground prong oriented toward the associated power infeed. Then snap each receptacle into place on the receptacle mounting brackets (Figures 6 & 7).
14. Continue following steps 1 & 2 closely to install all remaining duplex receptacles (Figures 6 & 7).

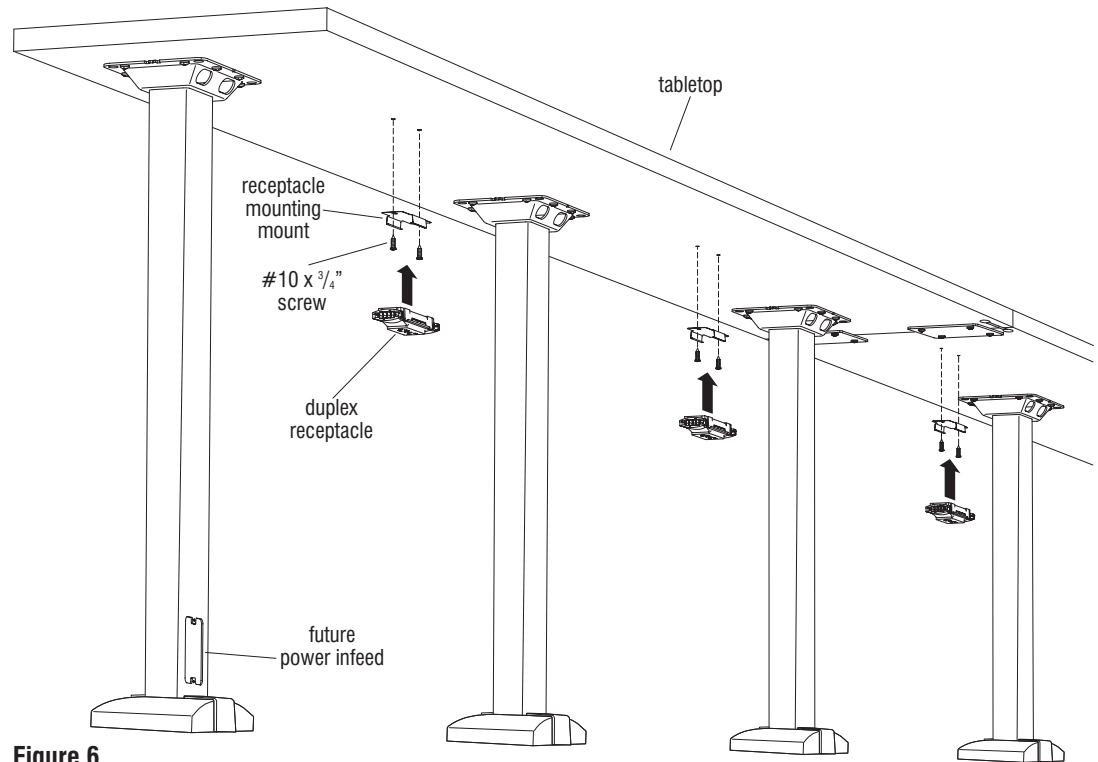


Figure 6


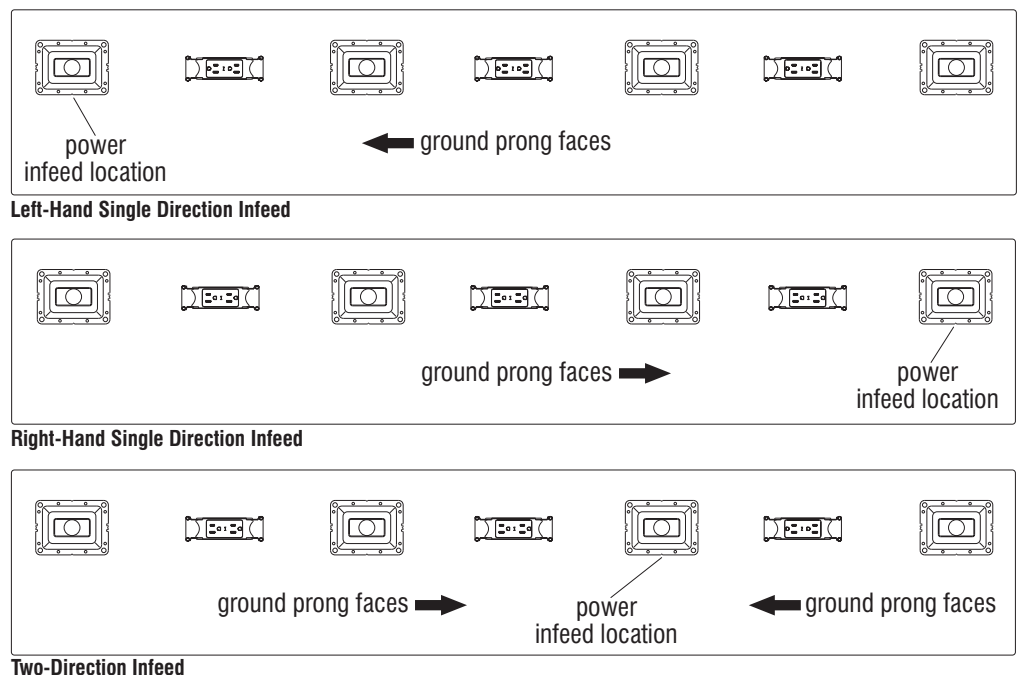


Figure 7





Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

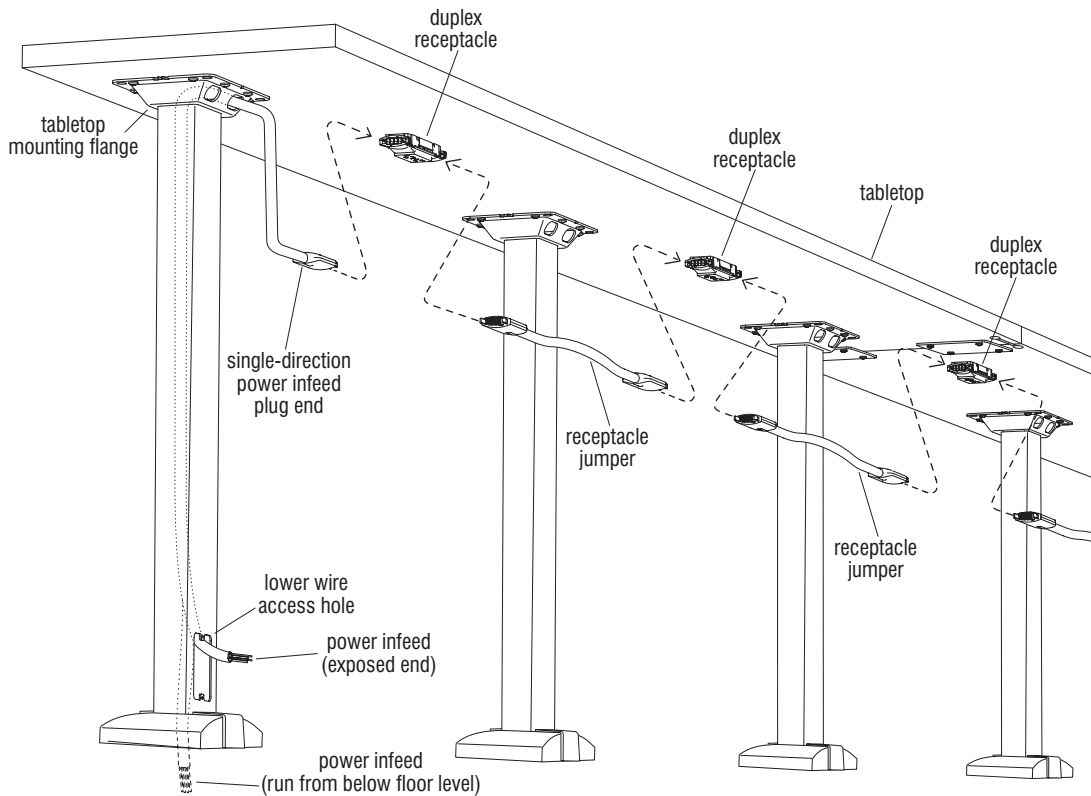

**Figure 8 - Power Infeed Single Direction (right-hand or left-hand)**

### Single-Direction Power Infeed Installation

**Note:** All table connections (joint fasteners and splice plates) must be securely fastened before electrical components can be installed.

**Note:** Refer to the space-planning layout for power infeed location. The instructions below cover single-direction power infeed with receptacle jumpers. See pages 11 & 12 for two-direction power infeed, which uses the same power infeed but adds a quad block to direct power two ways.

15. Reference the space-planning layout and determine the table base location for the single-direction power infeed. Check and assure that the duplex receptacles are installed correctly (Page 8, Figures 6 & 7). The ground prongs must be oriented to the side of the associated power infeed. If below floor level power is to be run to the tabletops, the power infeed should already be in place. To install above floor level power infeed, run the exposed wires end of the power infeed through the oval cut-out in the tabletop mounting flange, down the table base column and out the lower wire access hole, then plug the connector end into the first duplex receptacle next to the power infeed (Figure 8).
16. Verify that the power infeed's exposed wire ends will reach their desired connection location at floor level. Do not attach power infeed to any source power until instructed to at a later time (Page 18, Figure 18).
17. Per the space-planning layout, locate the required receptacle jumpers and connect each end into the installed duplex receptacles under the tabletop (Figure 8).

## ■ Seminar™ Tables with 4-Wire Power System - Single-Direction Receptacle Hub Shrouds


### Assembly Instructions




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Single-Direction Power Infeed Installation (cont.)

18. Orient each receptacle hub shroud so the "receptacle orientation marking" at the underside of the shroud matches the orientation of the correctly installed duplex receptacles under the tabletop. Remove jumper knock-outs from ends where power cables will run through, then position each receptacle hub shroud up correctly over the receptacle and secure using four #10 x 3/4" screws as illustrated (Figure 9 & Detail E).
19. At the power infeed location, a single-direction infeed shroud must be installed. Depending on the direction that the power runs, either a right- or left-side knock out must be removed. Position the infeed shroud as illustrated over the power infeed and against the table mounting flange and secure to the underside of the table using three #10 x 3/4" screws (Figure 9).

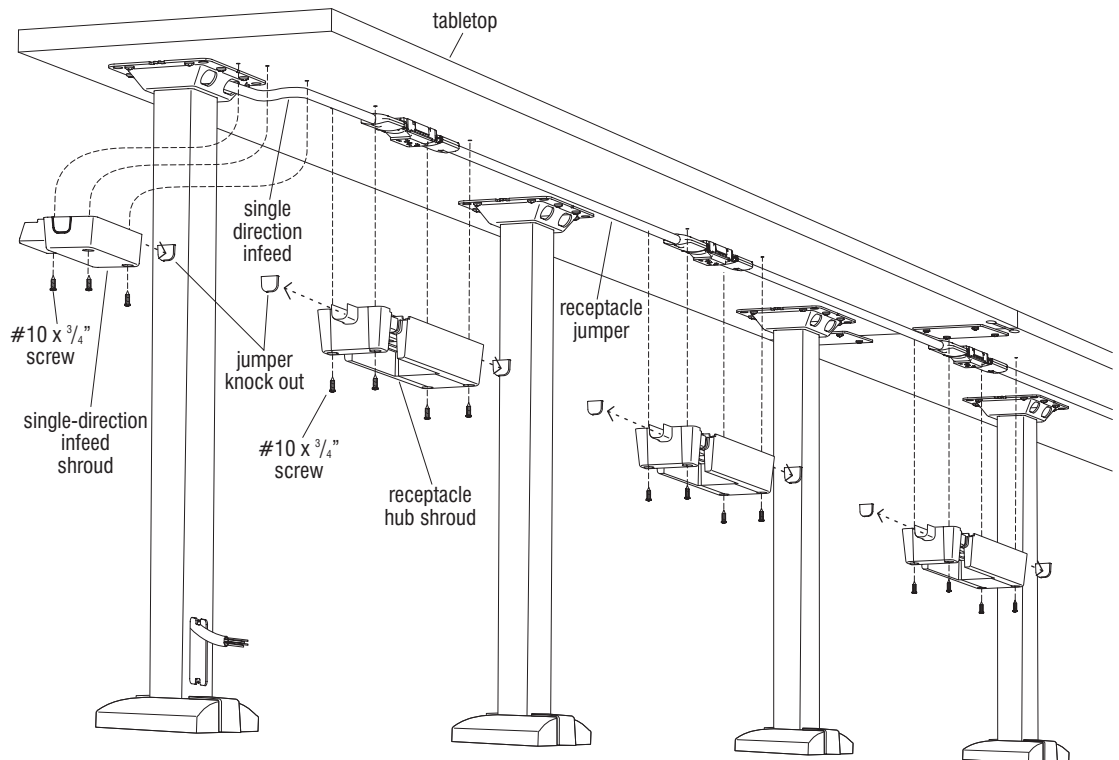


**Figure 9 - Power Infeed Single-Direction Shroud (right-hand or left-hand)**

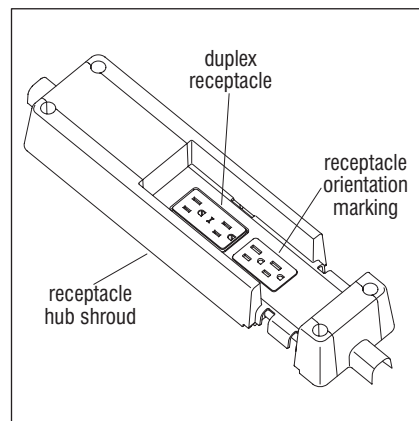

**Detail E**



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

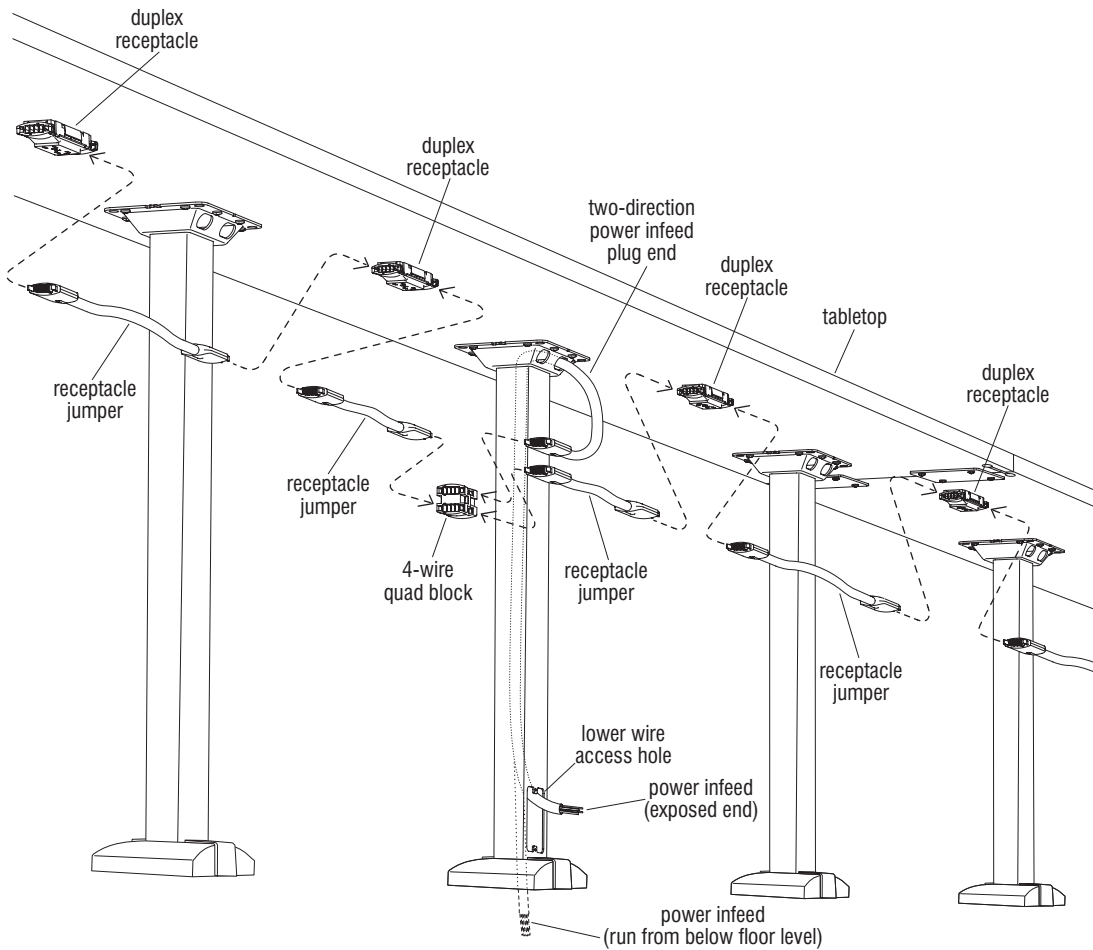

**Figure 10 - Power Infeed Two-Direction (right-hand or left-hand)**

### Two-Direction Power Infeed Installation

**Note:** All table connections (joint fasteners and splice plates) must be securely fastened before electrical components can be installed.

**Note:** Refer to the space-planning layout for power infeed location. The instructions below cover two-direction power infeed using a quad block and receptacle jumpers. See pages 9 & 10 for single-direction power infeed.

20. Reference the space-planning layout and determine the table base location for the two-direction power infeed. Check and assure that the duplex receptacles are installed correctly (Page 8, Figures 6 & 7). The ground prongs must be oriented to the side of the associated power infeed. For two-sided power infeed the receptacles will be oriented in different directions on each side of the power infeed. If below floor level power is to be run to the tabletops, the power infeed should already be in place. To install above floor level power infeed, run the exposed wires end of the power infeed through the oval cut-out in the tabletop mounting flange, down the table base column and out the lower wire access hole, then plug the connector end into the first duplex receptacle next to the power infeed (Figure 10).
21. Verify that the power infeed's exposed wire ends will reach their desired connection location at floor level. Do not attach power infeed to any source power until instructed to at a later time (Page 18, Figure 18).
22. Per the space-planning layout, locate the required quad block and plug the two-direction power infeed plug end into the quad block. Then locate the required receptacle jumpers and plug them into the installed duplex receptacles. At the quad block on the two-direction power infeed, two receptacle jumpers will plug into the quad block as illustrated (Figure 10).

## ■ Seminar™ Tables with 4-Wire Power System - Two-Direction Receptacle Hub Shrouds


### Assembly Instructions




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Two-Direction Power Infeed Installation (cont.)

23. Orient each receptacle hub shroud so the "receptacle orientation marking" at the underside of the shroud matches the orientation of the correctly installed duplex receptacles under the tabletop. Remove jumper knock-outs from ends where power cables will run through, then position each receptacle hub shroud up correctly over the receptacle and secure using four #10 x  $\frac{3}{4}$ " screws as illustrated (Figure 11 & Detail F).
24. At the power infeed location, a two-direction power infeed shroud must be installed. Before installation, remove the knock outs at at each end of the two-direction infeed shroud. Position the infeed shroud as illustrated over the power infeed with quad block and jumpers against the table mounting flange then secure to the underside of the table using three #10 x  $\frac{3}{4}$ " screws (Figure 11).

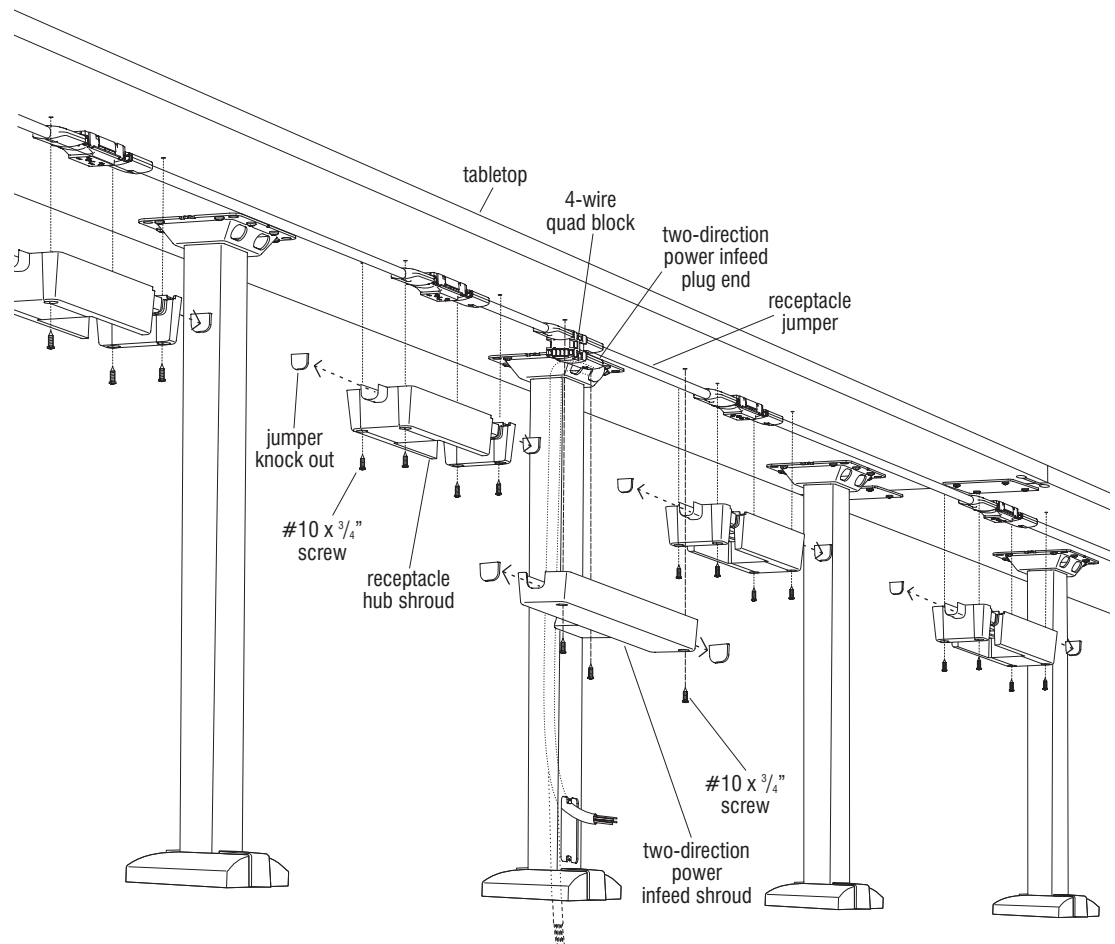


**Figure 11 - Power Infeed Two-Direction Shroud (center)**

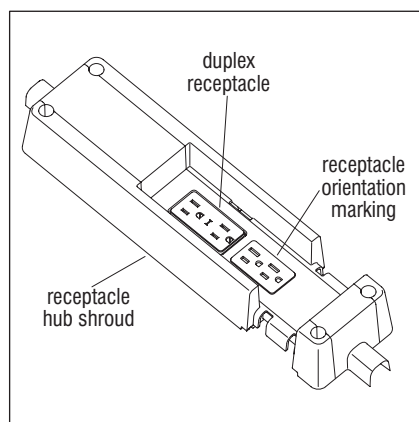

**Detail F**



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

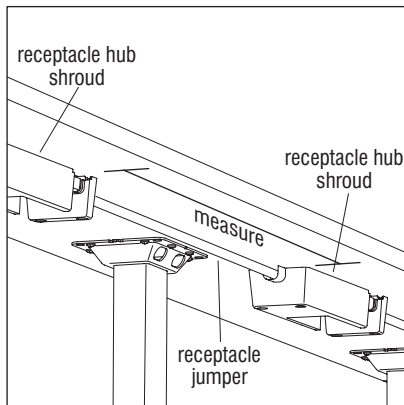

Detail G

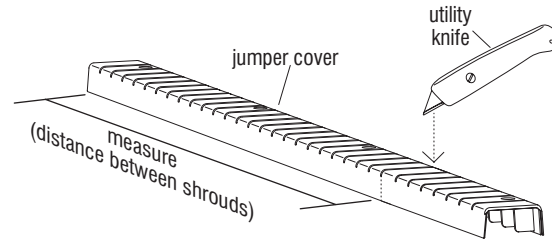


Figure 12

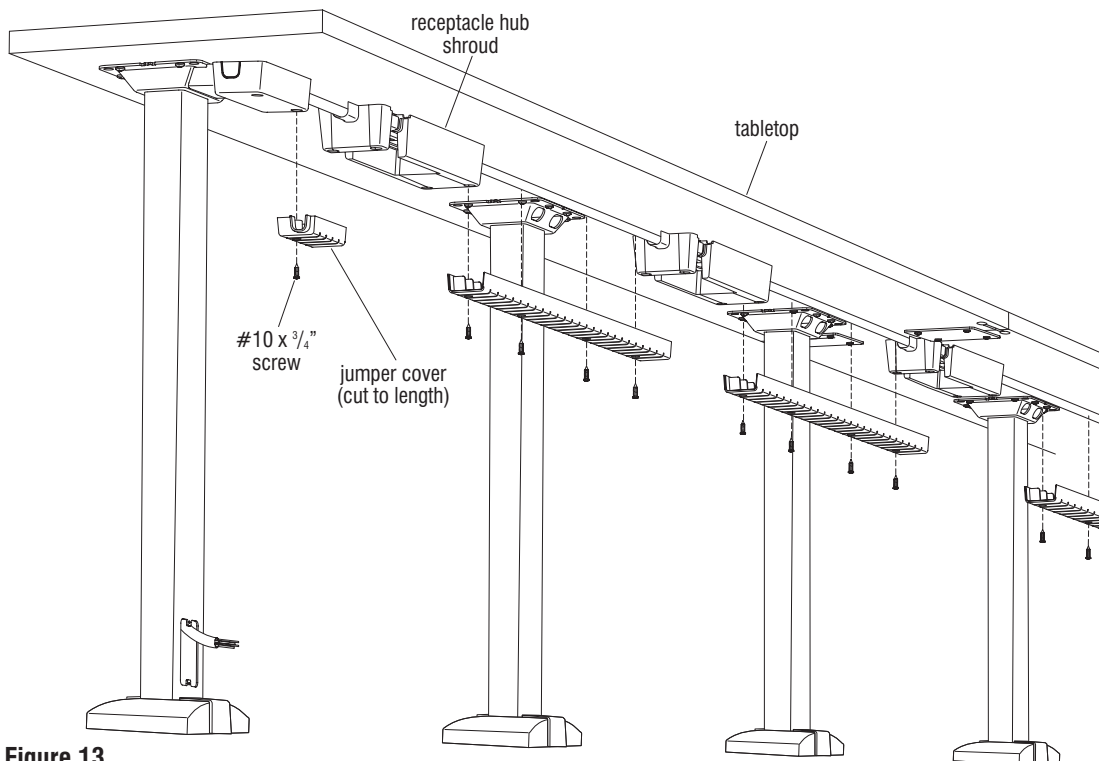


Figure 13

### Seminar Tables with 4-Wire Power System (cont.)

**Note:** 4-Wire Power System jumper covers must be properly cut to size at the installation location. Take care when measuring and cutting.

25. Begin installation of jumper covers at one end of the unit and carefully measure the distance between two receptacle hub shrouds, or between an installed power infeed shroud and the next receptacle hub shroud at the location to receive a jumper cover under the tabletop. The measurement should be made so the cut jumper cover will fit between the shrouds, cover the knock-out ends of the shrouds as well as the receptacle jumpers (Detail G).
26. Place a jumper cover onto a protective surface and transfer the measurement from step 25 to the cover. Using a utility knife, cut the jumper cover along the slits in the cover, then cut down along the sides and separate the cover apart (Figure 12).
27. Position the correctly sized cover up between the receptacle hub and/or power infeed shrouds, centered over the receptacle jumper. At mounting hole locations along the length of the jumper cover, insert #10 x  $\frac{3}{4}$ " screws and secure the cover to the underside of the tabletop. Do not over-tighten, torque the screws to 25 in/lb (Figure 13).
28. Follow steps 25 through 27 above to cut, fit and install the remaining jumper covers.

## ■ Seminar™ Tables with 4-Wire Power System - Power Modules

### Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Dean® In-Surface Power Module Installation

29. Install the Dean In-Surface power module with 3-prong plug into the mounting hole in the tabletop per the manufacturer's instructions included with the module (Figure 14).
30. Once the Dean In-Surface power module with 3-prong plug is installed, route the power cord to the nearest duplex receptacle under the table and plug the 3-prong plug end into it (Detail H).


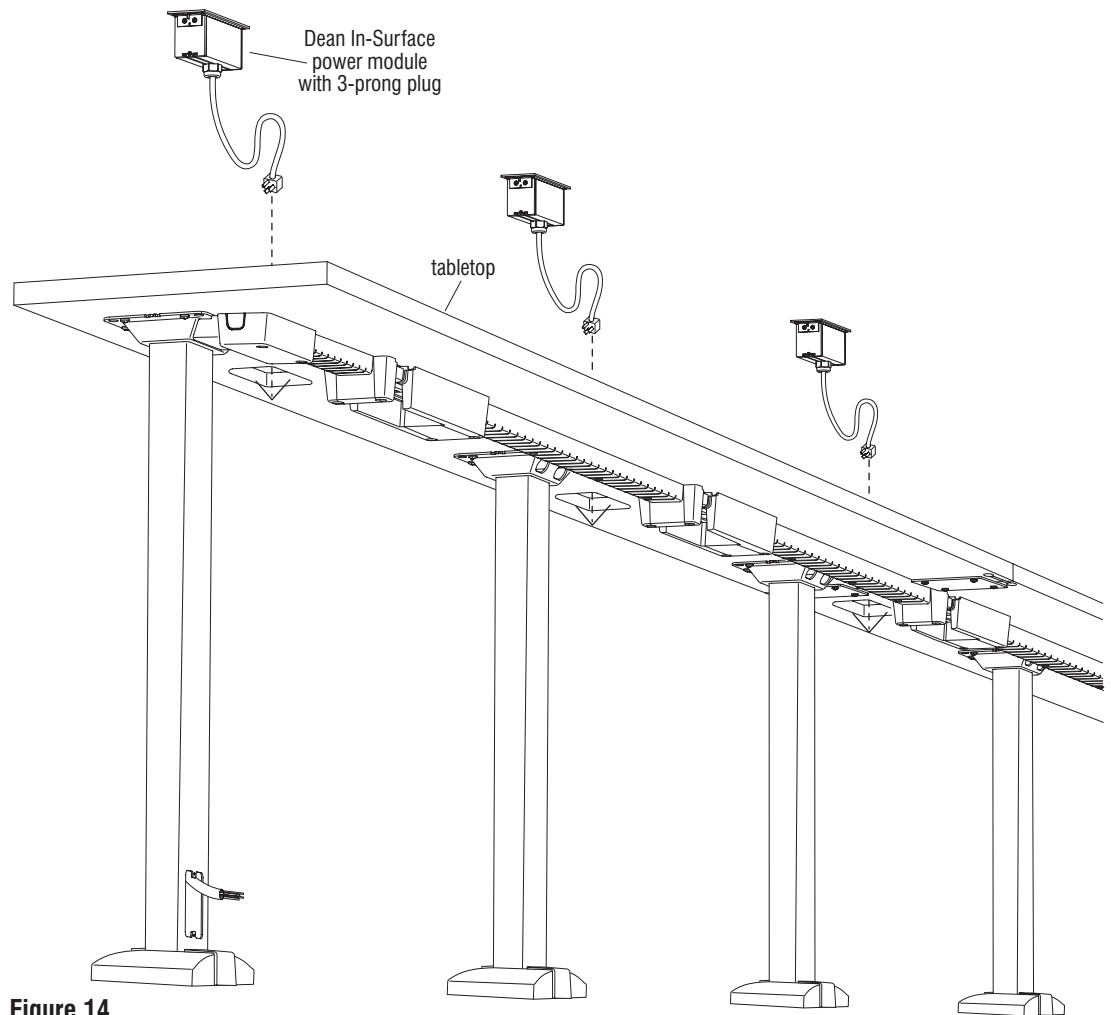


Figure 14



Detail H

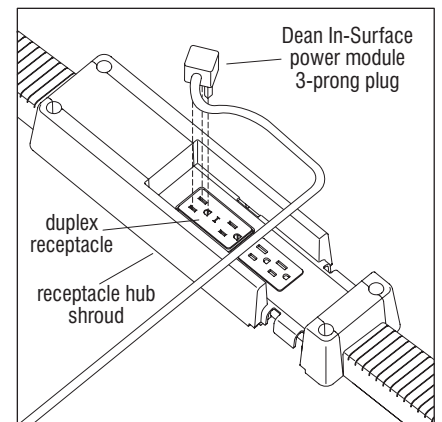

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Dubbel Undersurface Power Module Installation

31. Install the Dubbel Undersurface power module with 3-prong plug to the underside of the tabletop with two #10 x 3/4" screws in pre-drilled holes (Figure 15)
32. Once the Dubbel Undersurface power module with 3-prong plug is installed, route the power cord to the nearest duplex receptacle under the table and plug the 3-prong plug end into it (Detail I).


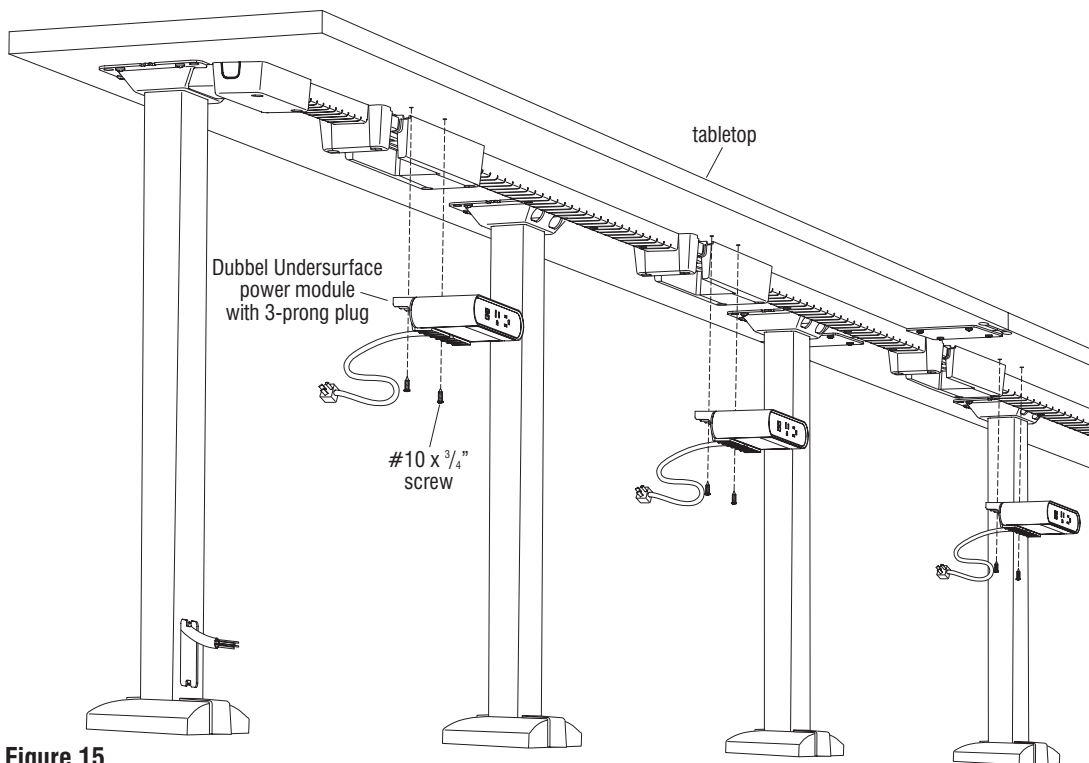


Figure 15



Detail I

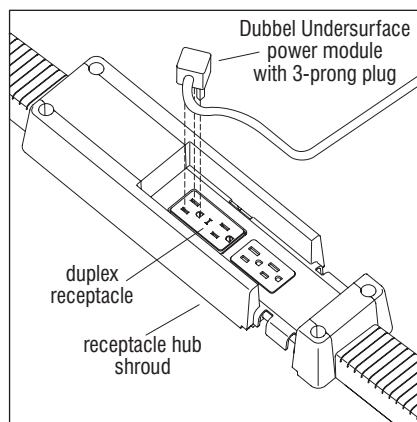

## ■ Seminar™ Tables with 4-Wire Power System - Power Modules

### Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Nacre® In-Surface Pop-Up Power Module Installation

33. Install the Nacre In-Surface Pop-Up power module with 3-prong plug into the mounting hole in the tabletop per the manufacturer's instructions included with the module (Figure 16).
34. Once the Nacre In-Surface Pop-Up power module with 3-prong plug is installed, route the power cord to the nearest duplex receptacle under the table and plug the 3-prong plug end into it (Detail J).


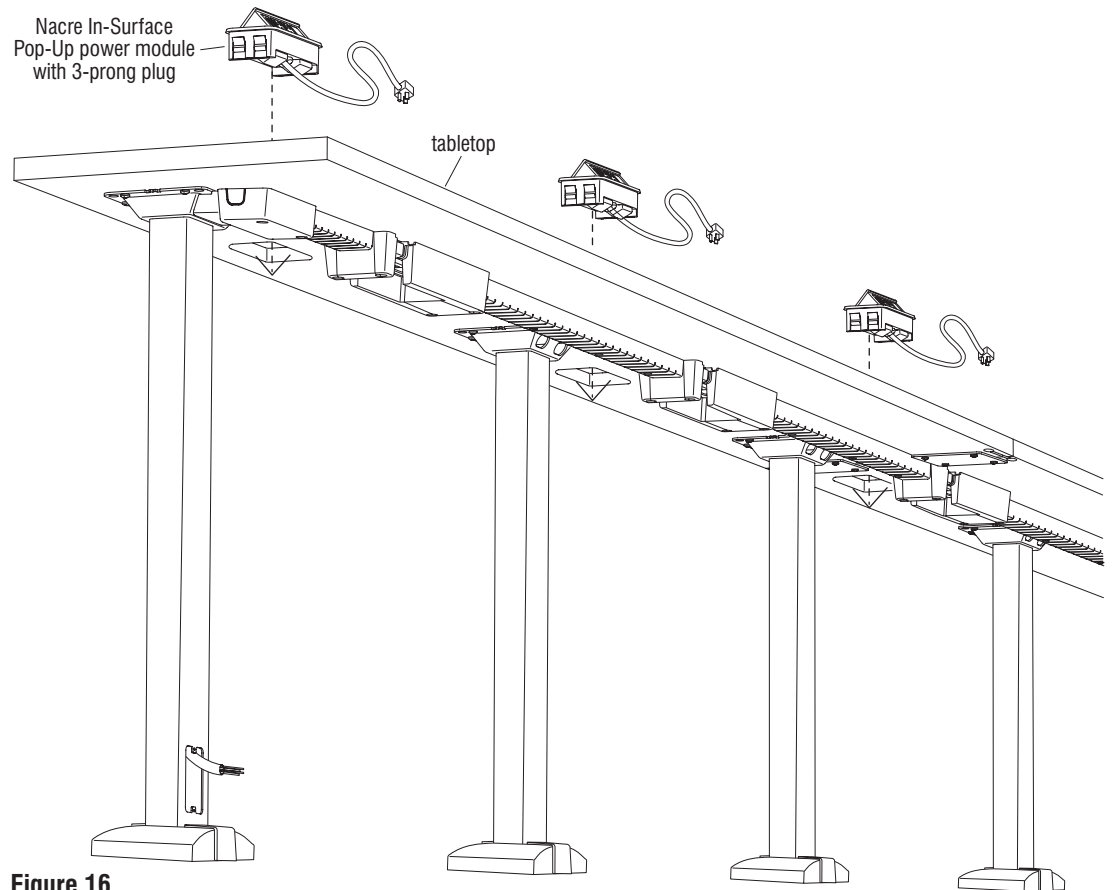


Figure 16



Detail J

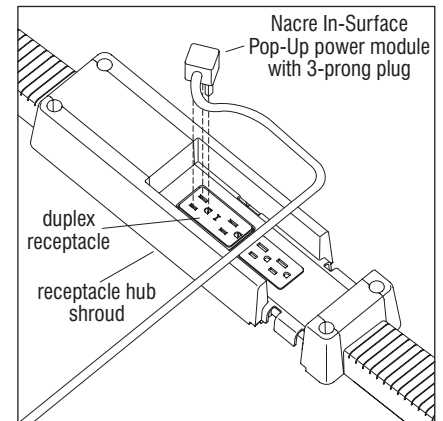

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

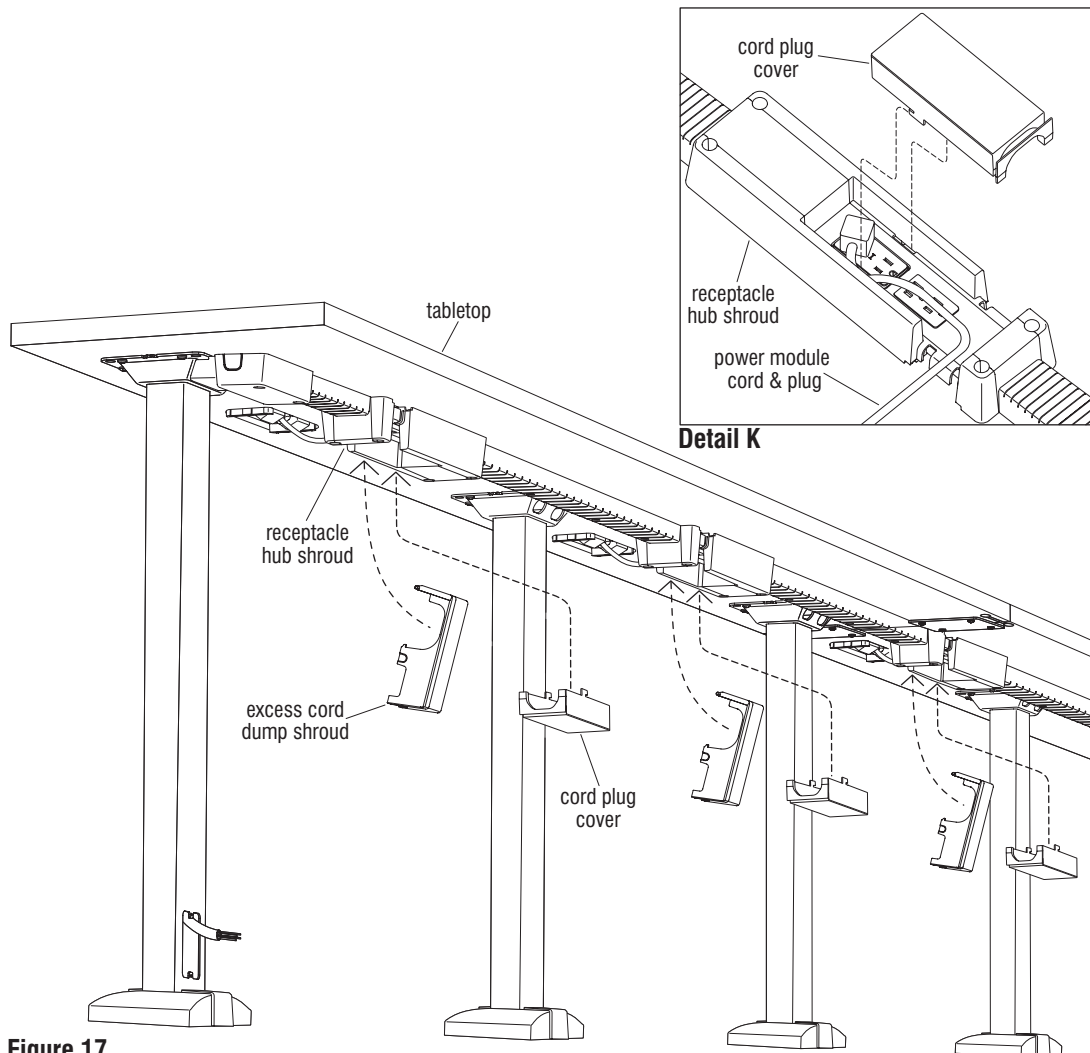



Figure 17

### Cord Plug Covers Installation


35. Once all power modules are plugged into the duplex receptacles in the installed receptacle hub shrouds, the cord plug cover can be installed to the hub shrouds. Position the cord plug cover as illustrated and insert the teeth of the cord cover into the slots of the receptacle hub shroud, then slide the cord cover towards the closest end of the hub shroud to lock in place (Figure 17 & Detail K).

**Note:** The power module type and exit location of the power cord from the receptacle hub shroud will determine which orientation the excess cord dump should be installed (Details L & M).

36. Next, prepare to install the excess cord dump shroud to the receptacle hub shroud by first determining which side the power module's cord exits the receptacle hub shroud (Details L & M). Orient the cord dump shroud correctly and slide the tabs at both sides of the shroud end into the key slots of the receptacle hub shroud as illustrated. Once slid in, the cord dump shroud is hinged in place. Gather excess cord into the dump cover, swing it up and snap it into place on the receptacle hub shroud (Figure 17, Details L & M).

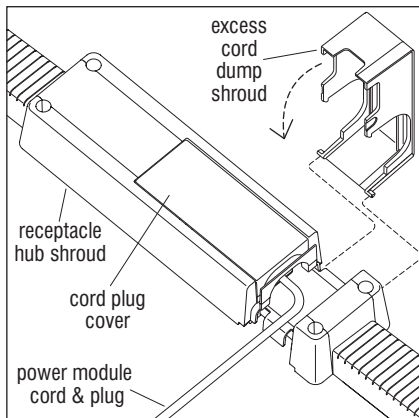

Detail L

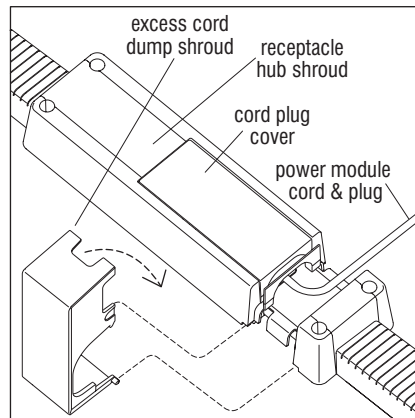

Detail M

## ■ Seminar™ Tables with 4-Wire Power System - Power Infeed Assembly Instructions




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

### Power Infeed Wiring

**Note:** All table connections (joint fasteners and splice plates) must be securely fastened before electrical components can be installed.

**Note:** The power infeeds may now be connected to the power source by a qualified electrician who must also check the electrical integrity of the finished system. Step 29 is intended as a guideline for this part of the installation.

37. Note the one open  $\frac{7}{8}$ " knockout on the face plate. Route the uncased 4-wire ends through the 90° metal connector, face plate knock-out hole, 90° pulling elbow and liquid-tight connector. Fasten components together. Cut uncased 4-wire and liquid-tight conduit to desired lengths. Feed uncased 4-wire through liquid-tight conduit and attach to 90° connector on the front of the face plate. Attach face plate to vertical leg member with screws provided. Attach uncased 4-wire to power source (Figure 18).

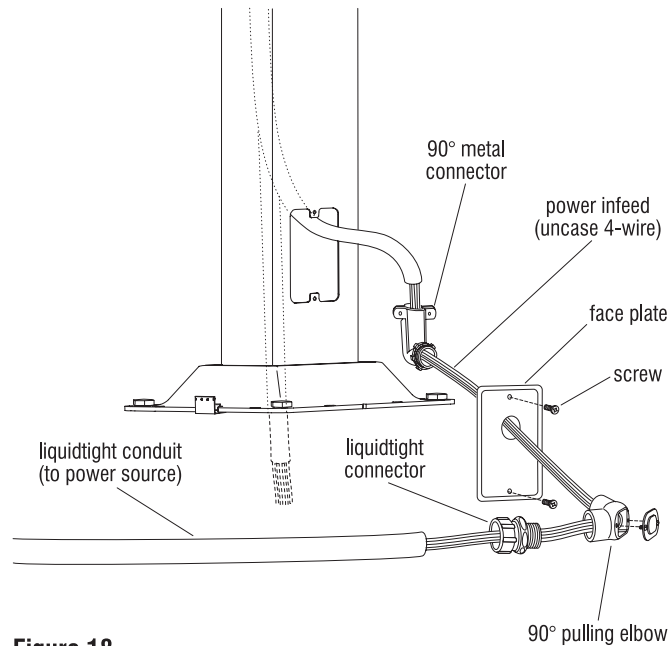

**Figure 18**



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

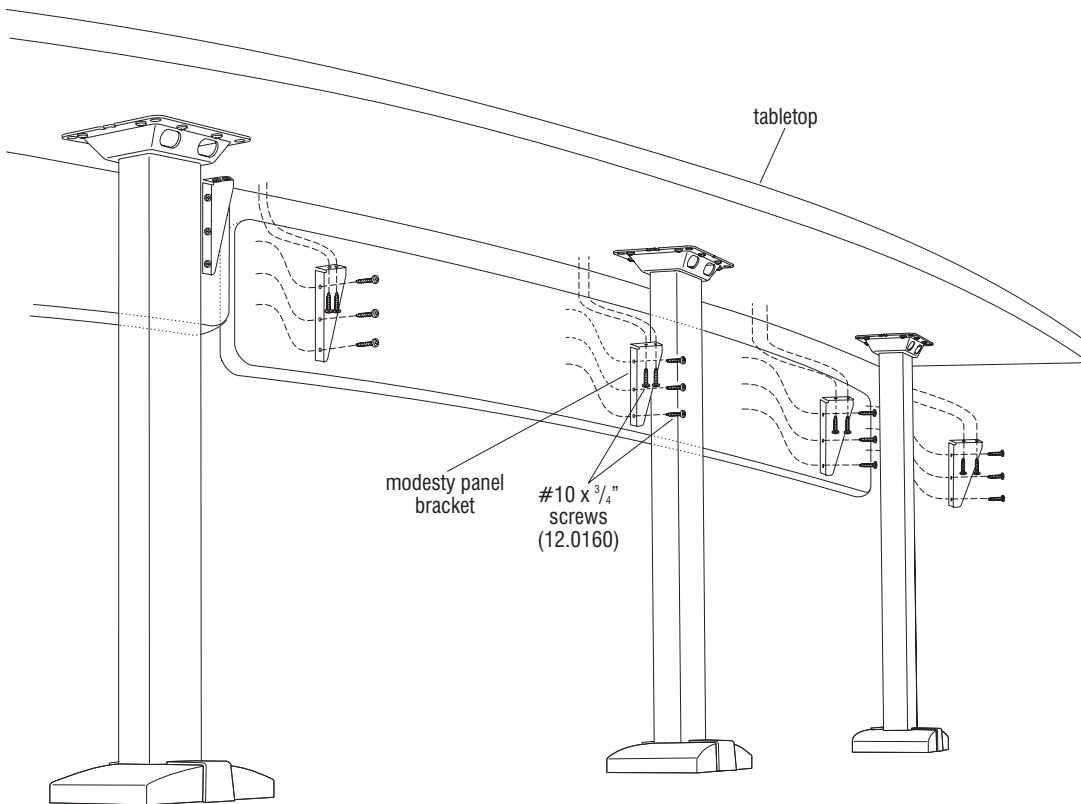


Figure 19

### Optional Laminate or Wood Modesty Panel

38. Per the space-planning layout and the identification numbers on the back sides of the modesty panels, lay the modesty panels out where they will be installed to the tabletops. Modesty panel lengths are undersized on each end, thereby creating a  $\frac{1}{2}$ " gap at the modesty panel joints, and a  $\frac{3}{4}$ " to  $2\frac{1}{2}$ " space at the end-of-run. Refer to the chart on the space-planning layout for the number of brackets required per modesty panel, and equally space the brackets along the panel. The two end brackets should be 2" from the edge of the panel. Begin assembly by installing the bracket to the tabletop first (Figure 19).

**Note:** Care must be taken when positioning the brackets to ensure they do not interfere with the tabletop mounting flanges. When the bracket is installed to the underside of the tabletop, the shorter flange of the bracket must be secured to the tabletop with two #10 x  $\frac{3}{4}$ " screws torqued to 50 in/lb. Mounting holes under tabletop must be pre-drilled with an  $\frac{1}{8}$ " drill bit to maximum depth of  $\frac{1}{2}$ ". Be sure that the longer edge (which will be secured to the modesty panel) is set back 1" from the front edge of the tabletop. After all brackets are secured to the tabletop, carefully lift the modesty panel into place and pre-drill holes in modesty panel with an  $\frac{1}{8}$ " drill bit to a maximum depth of  $\frac{1}{2}$ ". Secure each installed modesty panel bracket to the modesty panel with three #10 x  $\frac{3}{4}$ " screws torqued to 50 in/lb (Figure 19).

**Note:** To help support continuous wood and segmented wood panels during attachment, bar clamps may be used.

# Seminar™ Tables with 4-Wire Power System - Modesty Panels

## Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


39. For **Continuous Laminate or Wood Modesty Panels**, the following steps must be completed before mounting the panel to the table, described in step 38.

Modesty panels are to be joined together from behind with two KV joint fasteners per pair of modesty panels (Figure 20). First join both modesty panels together, aligning the hardwood spline (installed in one modesty panel at the factory). Check to make sure hardwood spline fits snug in both modesty panels. If it does not, lightly sand down the spline so it does fit. If this is not done, it may be difficult to get a tight fit on the modesty panel seam. The spline joint and modesty panels seam are to be glued using the adhesive supplied with the KV fasteners. Do not use a wood glue for seam gluing as the working time for that adhesive is too short. Then, thread each draw bolt a few turns into each tightening nut and press each pair up into a  $\frac{7}{8}$ " hole and slot. The flat end of each draw bolt will be visible in the  $\frac{7}{8}$ " holes of the modesty panel being joined. Insert locking sleeves into the  $\frac{7}{8}$ " holes so that the slotted sleeve engages the rounded collar on the bolt (Figure 20). Tighten the nut with a tightening tool or nail set. Check the front side of the joint for proper alignment. The joint should be smooth and level with no gaps. Adjust as necessary to achieve a "seamless" look. Once the seam is glued, use the C-clamps to clamp either end of the seam. Allow one hour for glue to set before attaching panels to top.


**Note:** Each pound of pressure on the tightening tool exerts 500 pounds of force on the joint. Overtightening the KV fasteners will cause the panels to delaminate.

40. For **Laminate or Wood Modesty Panels with End Panels**, the end panels are to be installed after modesty panels are in place. End panels use two modesty panel brackets and an L-bracket in the corner where the two panels meet (Detail N). Place the end panel into position, then using the L-bracket as a template, mark the six mounting hole locations, three to the modesty panel and three to the end panel. Carefully pre-drill mounting holes in each panel to a depth of  $\frac{1}{2}$ " with an  $\frac{1}{8}$ " drill bit, taking care to not pierce through the end panel or modesty panel. Use bar clamps to hold the end panel in position and install L-bracket with six  $\#10 \times \frac{3}{4}$ " screws torqued to 50 in/lb (Detail N). Adjust the clamped end panel for desired reveal at the end. Position the modesty panel brackets at their installation location and mark their mounting hole locations. Using a  $\frac{1}{8}$ " drill bit, pre-drill to a depth of  $\frac{1}{2}$ ", taking care to not pierce through the end panel. Mount two modesty panel brackets to the end panel and bottom of the tabletop using five  $\#10 \times \frac{3}{4}$ " screws torqued to 50 in/lb at each bracket (Detail N).

**Note:** For full-height end panels joining with full-height modesty panels, two L-brackets are required.

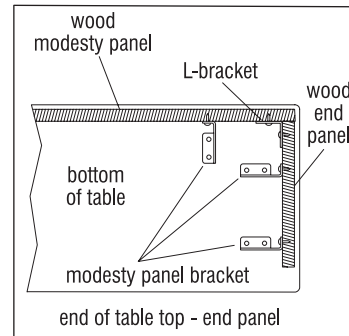


**Detail N**

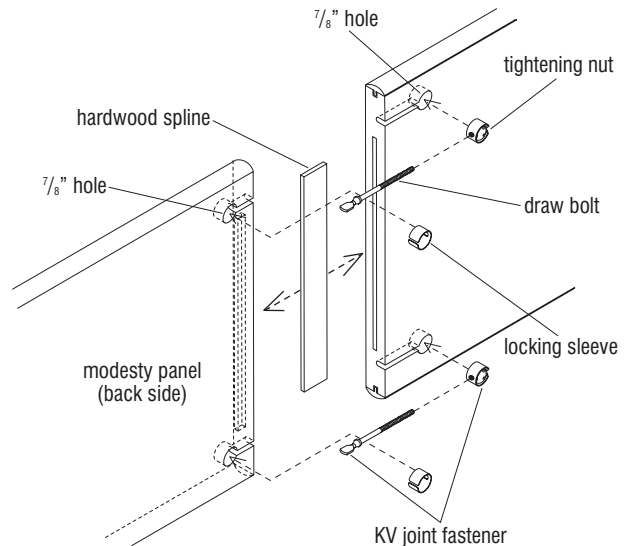


**Figure 20**




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

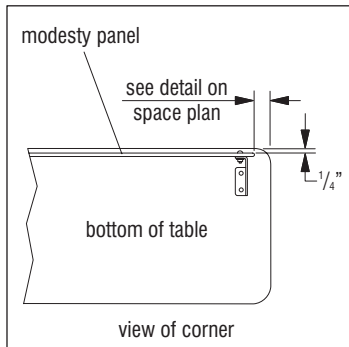


Detail O

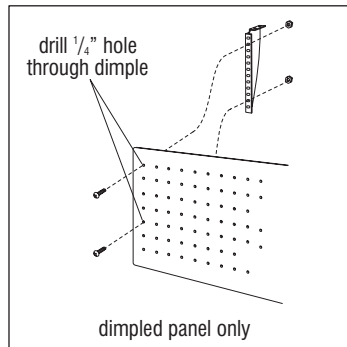

Detail P

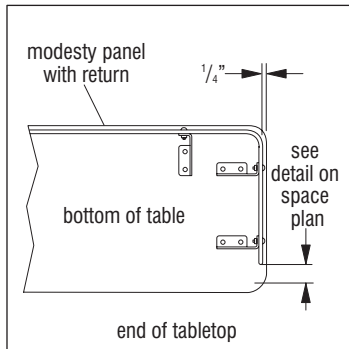

Detail Q

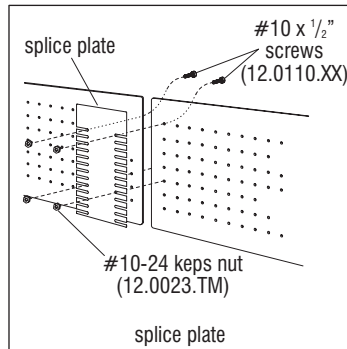

Detail R

### Steel Modesty Panel Installation

41. Per the space-planning layout and the identification numbers on the back side of each modesty panel, lay the steel modesty panels out where they will be installed to the tabletops. Modesty panel lengths are undersized on each end thereby creating a 1/2" gap at the modesty panel joints, and a 3/4" to 2 1/2" space at the end-of-run.

**Note:** Care must be taken when positioning the brackets to ensure they do not interfere with the tabletop support flange. On the modesty panel ends, use an appropriate left- or right-hand bracket so that the nuts are not visible.

42. Refer to the chart on the installation drawing for the number of modesty panel brackets required per modesty panel, and equally space the brackets along the panel. **A modesty panel bracket must be installed to the end set of holes on both sides of the modesty panel.** Begin assembly by installing the bracket to the modesty panel first. The longer flange of the bracket should be

secured to the modesty panel with two #10 x 1/2" screws and #10-24 keps nuts. Tighten nuts to 35 in/lb. Insert the screws through the top hole in the panel and into the 3rd hole from the top on the bracket. The lower screw should be routed through the modesty panel so that it secures to the aligned hole in the bracket. A modesty panel bracket must be installed to the end set of holes on both sides of modesty panel (Figure 21).

**Note:** For **dimpled panels**, drill 1/4" holes through the top and 5th dimples in panel at bracket locations using the dimple as a guide (Detail P).

43. After all brackets are secured, carefully lift the panel up and install the brackets to the underside of the tabletop using #14 x 1" screws torqued to 100 in/lb. Mounting holes must be pre-drilled with a 3/16" drill bit to a maximum depth of 3/4". The modesty panel must be mounted 1/4" from the front edge of the tabletop and in from the end of the tabletop per the space-planning layout (Detail O).
44. Panels with a return at the end will require two brackets mounted at the end of the panel as illustrated (Detail Q).
45. For continuous metal modesty panels only, attach the 16-gauge metal splice plate between the ends of the modesty panels to ensure proper alignment from panel to panel. Install in the same manner as brackets using #10 x 1/2" screws with #10-24 keps nuts (Detail R). Tighten nuts to 35 in/lb.

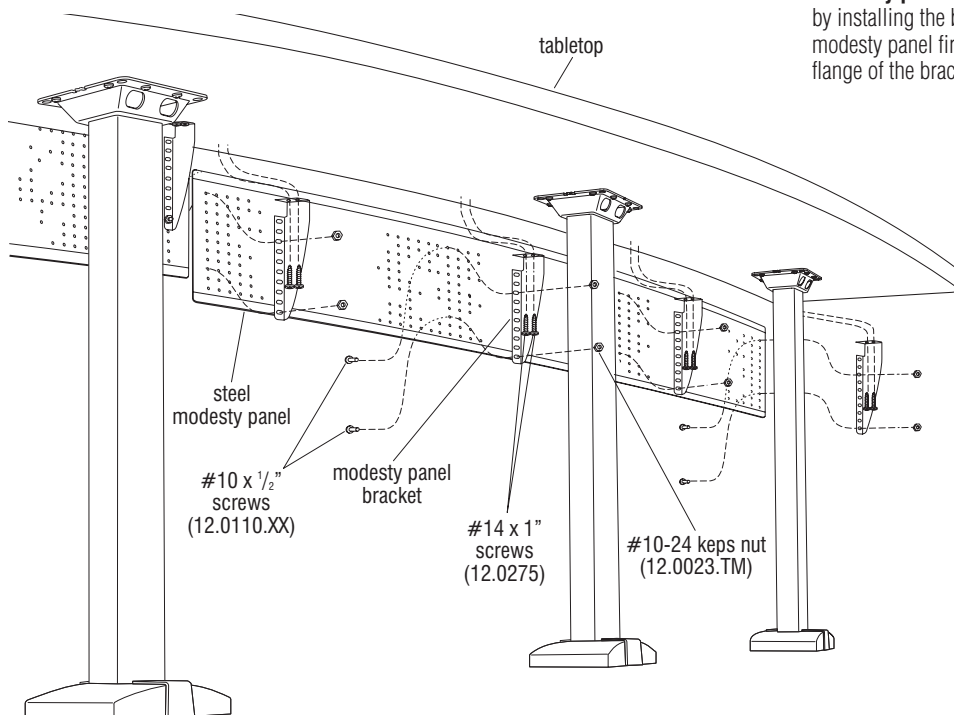


Figure 21

## ■ Seminar™ Tables with 4-Wire Power System - Modesty Panels

### Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

#### Acrylic Modesty Panel Installation

**Note:** Read all instructions below before proceeding.

46. Per the space-planning layout and the identification numbers on the back side of each modesty panel, carefully set the acrylic modesty panels out at the location they will install to the tabletops.

**Important:** Preliminary set-up is important, so “equal gap spacing” between modesty panels and appropriate end-of-run spacing is achieved. A nominal  $\frac{1}{2}$ ” gap is to be left between installed modesty panels, although that gap may vary. Care must be taken when locating the final installation position of acrylic modesty panels to underside of tabletops to achieve a clean, flush final look (Details S, T, U & V).

47. Begin assembly by installing the modesty panel brackets to the acrylic modesty panels first. Properly align the mounting holes of the bracket to the pre-drilled holes in the modesty panel.
- Note:** At ends-of-run, right- & left-hand modesty panel brackets will be specified for the appropriate side (Detail V). Place #12-24 x  $\frac{1}{2}$ ” (12.2712) Taptite screws through un-capped screw covers (47.0632.BL) as illustrated. Then route the screw threads through the face of the panel and into the holes in the bracket, torqued to 35 in/lb. Do not over-tighten. Snap screw cover caps closed at this time (Figure 22).

**Note:** Once panel brackets are attached to the acrylic modesty panels, it is recommended that end-of-run modesty panels be correctly positioned and installed first, such that **end straight modesty panels** have the  $\frac{1}{4}$ ” spacing back from the front as well as even spacing at each end (Detail S). Installation spacing is especially important for **end**

**modesty panels with return** which must be positioned and installed  $\frac{1}{4}$ ” back from the front and  $\frac{1}{4}$ ” in from the side at the end/return (Detail U). After end-of-run modesty panels are secured, installation of the center-most modesty panel is important, as it must be positioned/installed at the very center of the run of tabletops to further aid in achieving equal spacing. Lastly position and install panels between the center and the end acrylic modesty panels. **The noted process above makes it easier to achieve equal spacing of acrylic modesty panel gaps between all panels being installed.**


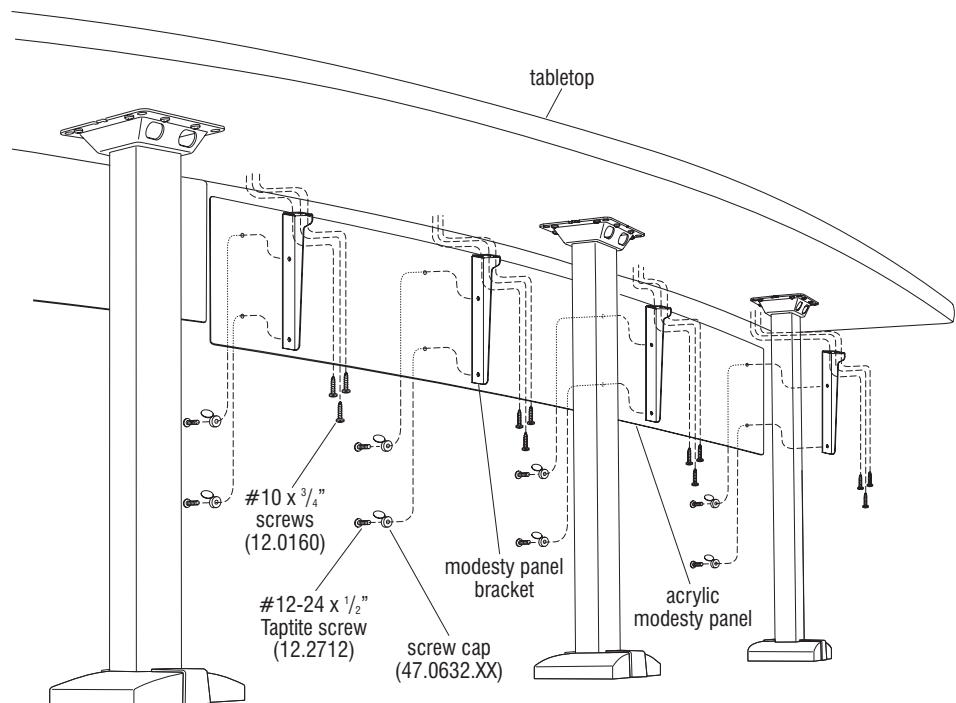


Figure 22







Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

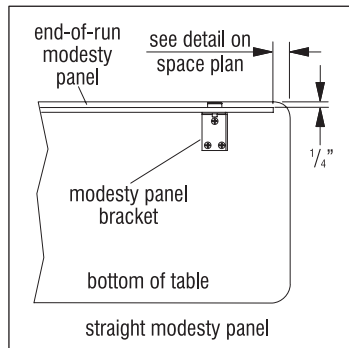


**Detail S**

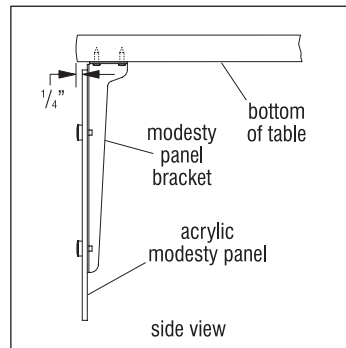

**Detail T**

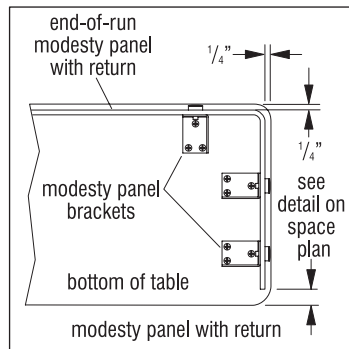

**Detail U**

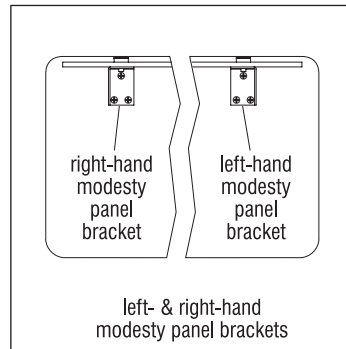

**Detail V**

48. After all brackets are secured to the acrylic modesty panels, carefully lift the panel up into position, and one bracket at a time, mark and pre-drill  $\frac{1}{8}$ " diameter mounting holes to  $\frac{3}{4}$ " depth maximum. Take care to not drill too deep and damage the tabletop. Install each bracket to the underside of the tabletop using three #10 x  $\frac{3}{4}$ " screws (12.0160) (end-of-run panels first, then center).
49. Panels with a return at the end will require two modesty panel brackets at the end of the acrylic modesty panel as illustrated (Detail U). The modesty panel face must be mounted back  $\frac{1}{4}$ " from the front edge of the tabletop, and as noted above,  $\frac{1}{2}$ " nominal, equal gap spacing must be maintained between installed panels.  
**Important:** Take care to keep the faces of installed acrylic panels "flush" to each other at the gaps when installing. If any installed shroud interferes with the mounting of brackets to the underside of the tabletop, trimming away of shroud material may be required. Some adjustments may be necessary (Figure 22, Details S, T, U & V).

## ■ Seminar™ Tables with 4-Wire Power System - 4-Wire Diagram

### Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

### Specifying Power on Seminar Tables

Specifics of the 4-wire system - 4-wire, 2 circuit system includes:

- (2) hot wires (circuits 1 & 2 share the ground and neutral wire)
- (1) ground wire
- (1) neutral wire


Each circuit is rated for 20 amps but NEC recommends utilizing only 80% or 16 amps per circuit

(16 amps x 2 circuits = 32 total amps).

### Power Infeeds

Determine quantity of power infeeds.

1. One infeed per row provides power for up to eight shared power modules with USB, or sixteen seats (16 seats x average of 2 amps per computer = 32 total amps).
2. If rows have more than sixteen seats, a second infeed will be required.
3. If the number of circuits per row is more than two, a second infeed will be required in that row.
  - a. Determine the total amperage per row (refer to back of the computer).
  - b. Determine the number of circuits required per row (total amperage per row divided by 8).
4. Determine location of power infeeds. Infeeds can come up any fixed table base.
5. Connection is typically made at a (user supplied) junction box outside the nearest leg. Power infeeds can come directly through bottom of base, but locations must be exact.

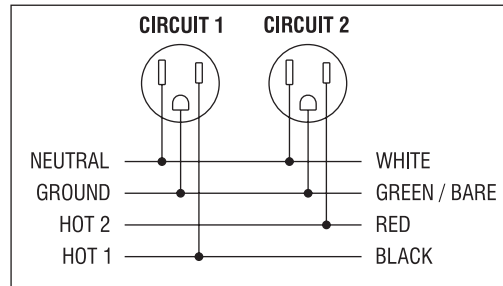

### WARNING:

Risk of fire or electrical shock. Do not electrically connect span connectors to more than one supply source. Always determine that the span connectors are electrically connected to one and only one source of supply.







KI  
1330 Bellevue Street  
P.O. Box 8100  
Green Bay, Wisconsin 54308-8100  
1-800-424-2432  
[www.ki.com](http://www.ki.com)

KI is a registered trademark  
of Krueger International, Inc.

© 2023 Krueger International, Inc.  
All Rights Reserved  
Code KI-AI-000073R2/KI/PDF/0123

