

Assembly Instructions ■

Polyester Felt Modesty Panel


Pillar®, Pirouette®, Toggle® & WorkUp® Tables

June 2023

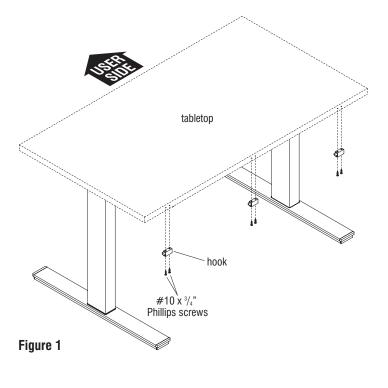


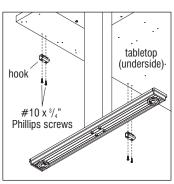


Detail A

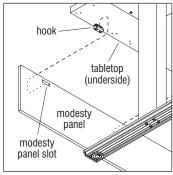

Detail B

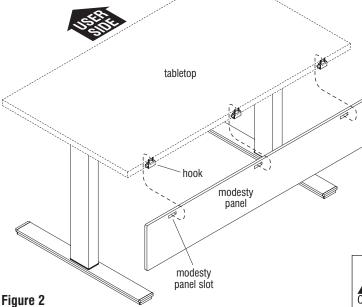

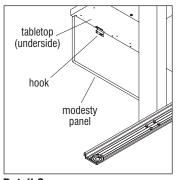

Detail C



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Tools Required

Phillips screw driver

Note: The following instruction is for installing the Polyester Felt Modesty Panel to 30-84" wide Pillar, Pirouette, Toggle and WorkUp tables. Tables 30-48" wide require two hooks, and tables 54-84" wide require three hooks. This instruction illustrates the modesty panel installation to 54-84" wide tables. Your configuration may vary.

Polyester Felt Modesty Panel Installation

- 1. Position one hook underneath the back, non-user side of the tabletop at the pre-drilled location as illustrated in Figure 1 & Detail A. Orient the hook to face the user side of the table. Align the mounting holes of the hook with the pre-drilled holes underneath the tabletop and secure using two #10 x ³/₄"Phillips screws. Repeat this process to secure the remaining hooks to the table (Figure 1 & Detail A).
- 2. Position the modesty panel underneath the back, non-user side of the tabletop, near the hooks. Using the slots on the panel, hang the panel onto each hook (Figure 2, Details B & C).

