

Tributaire Post-Leg Tables

Tributaire Post-Leg Tables Overview	3
Worksurface Stiffener Installation.....	3
Post Leg Assembly.....	3
Middle Post Leg Overview	4
Caster & Low Profile Glide Overview	5
Pattern Power Distribution Block Installation (only 84-96" wide tables)....	6

Power Modules

Power Module Overview	7
Dean In-Surface Power Module Installation	7
Dean Undersurface Power Module Installation.....	8
Double Ellora B Power Module Installation	9
Dubbel Undersurface Power Module Installation	10
Nacre In-Surface Power Module Installation	11
Node In-Surface Power Module Installation.....	12
Snap-In RPT Module Installation	13

Grommets

Grommet Overview.....	14
-----------------------	----

Wire Management

Wire Management Overview.....	15
Wire Trough Installation.....	15
Velcro Wire Manager Overview	16
Velcro Wire Manager to Post-Leg Plate Installation	16
Velcro Wire Manager to Tabletop Installation	16

Ganging

Ganging Tables Overview	17
Peg Installation	17
Hook Installation	17
Ganging Tables	18

Electrical

Electrical Overview.....	19
Pattern Electrical System Installation	19
Pattern Power Infeed Kit Assembly.....	19
Pattern Power Infeed Kit Placement.....	20
Pattern Power Distribution Block Placement	21
Pattern Power Jumper Assembly.....	22
Pattern Table-to-Table Power Jumper Kit Assembly	23
Pattern Electrical System Installation on 84-96" Wide Tables	24

Wire Management (cont.)

Wire Management Overview.....	25
Wire Management using Velcro Wire Managers	25
Vertical Wire Manager Installation.....	26
Strain Relief Clip Installation.....	27

Modesty Panel

Modesty Panel Overview.....	28
Polyester Felt Modesty Panel Installation.....	28
Laminate Modesty Panel Installation.....	29

Connections to Power Source

Connections to Power Source Overview.....	30
Connections to Power Source - Pattern Electrical System	30
Connections to Power Source - Power Modules with 3-Prong Plug.....	31

Pattern Quick-Release Tool

Pattern Quick-Release Tool	32
----------------------------------	----

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using (this furnishing).

DANGER: To reduce the risk of electric shock:

1. Always unplug this furnishing from the outlet before cleaning or servicing.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking parts off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Do not use outdoors.
5. **WARNING:** Risk of Electric Shock - Connect this furnishing to a properly grounded outlet only. See Grounding Instructions.
6. **WARNING:** Risk of Electric Shock, Fire, and Injury - Review instructions to confirm all critical components are installed and function safely.

Pattern Electrical System

Electrical Rating: 120V 15 A

WARNING: Risk of Injury - Maximum Load 4.7 lb per inch width.

Power Modules with 3-Prong Plug

Electrical Rating: 120V 15 A

WARNING: Risk of Injury - Maximum Load 4.7 lb per inch width.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

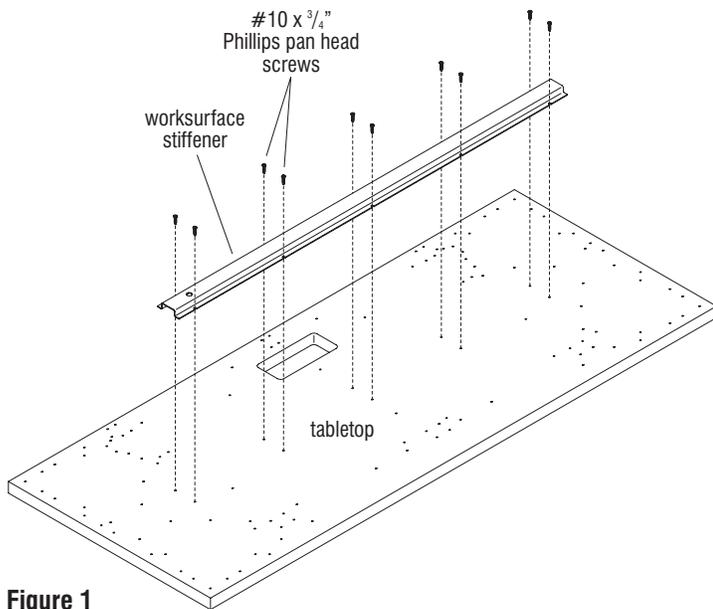


Figure 1

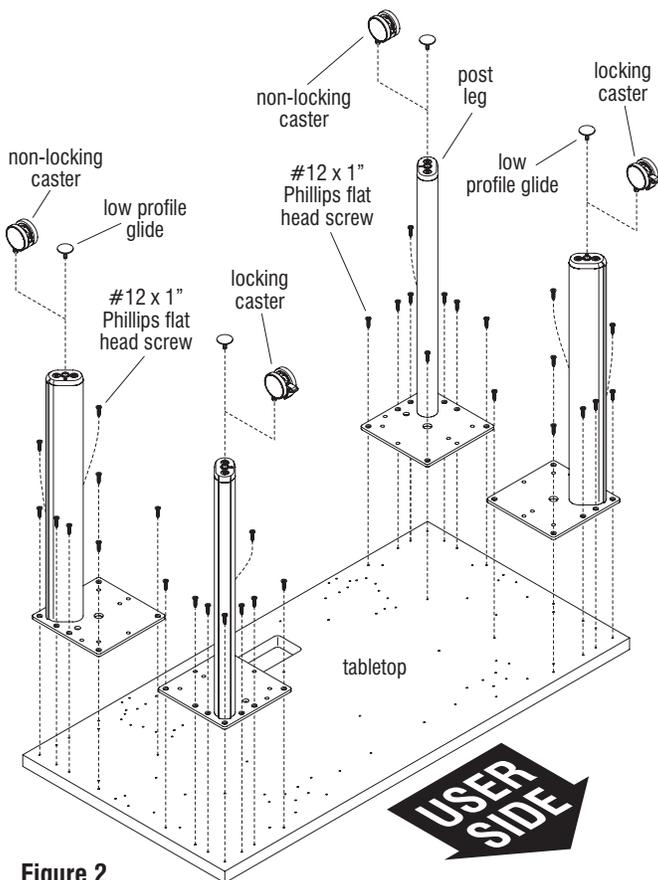


Figure 2

Tributaire Post-Leg Tables Overview

Note: Although the figures throughout the instructions illustrate a Tributaire rectangular post-leg table, the instructions apply to all Tributaire post-leg tables. Your configuration may vary.

1. Carefully remove contents from shipping cartons and identify parts and hardware supplied.
2. Tributaire post-leg tables 60", 66", and 72" wide require at least one worksurface stiffener. If the table being assembled requires a stiffener, proceed to "Worksurface Stiffener Installation" instructions below, otherwise proceed to "Post Leg Assembly" instructions on this page.

Worksurface Stiffener Installation

Note: Post leg tables 60", 66" and 72" wide require one worksurface stiffener if the table is 24" or 30" deep, and two stiffeners if the table is 36" deep.

3. Place tabletop upside down on a soft, protective surface. Position a worksurface stiffener onto the center of the tabletop underside, aligning the stiffener mounting holes with the pre-drilled holes in the table. Secure stiffener to top using #10 x 3/4" screws through all stiffener mounting holes provided. If a second stiffener is required, repeat this step (Figure 1).

Post Leg Installation

4. Position each post leg over pre-drilled mounting holes in the underside of the tabletop as illustrated. Secure the post legs to the top using eight #12 x 1" Phillips flat head screws through each post-leg mounting plate (Figure 2).
5. If the table being assembled is 84-96" wide and requires middle legs, proceed to "Middle Post-Leg Overview" instructions on the next page. If middle post-legs are not required for the table being assembled, proceed to "Caster & Low Profile Glide Overview" instructions on page 5.

Tributaire™ Collection - Post-Leg Tables

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Middle Post Leg Overview

Note: If the Tributaire post-leg table being assembled is 84 or 96" wide, and is 30, 36, or 42" deep, the table will require one double post-leg installed at the center of the table. If the table is 84 or 96" wide and is 48" deep, the table will require two post-legs installed at the center of the table. Proceed to "Double Post-Leg Installation" instructions or "Middle Post-Legs Installation" instructions below based on the table being assembled.

Double Post-Leg Installation

1. Position the double post leg over the center pre-drilled mounting holes in the underside of the tabletop as illustrated. Secure the double post leg to the top using eight #12 x 1" Phillips flat head screws through the post-leg mounting plate (Figure 3).
2. Proceed to "Caster & Low Profile Glide Overview" instructions on the next page.

Middle Post-Legs Installation

1. Position each post leg over the center pre-drilled mounting holes in the underside of the tabletop as illustrated. Secure each post leg to the top using eight #12 x 1" Phillips flat head screws through the post-leg mounting plate (Figure 4).
2. Proceed to "Caster & Low Profile Glide Overview" instructions on the next page.

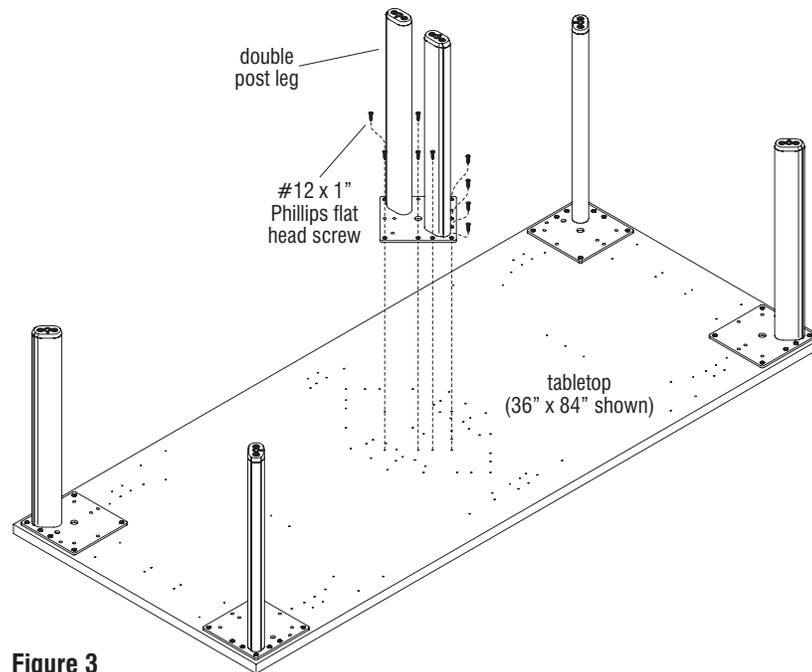


Figure 3

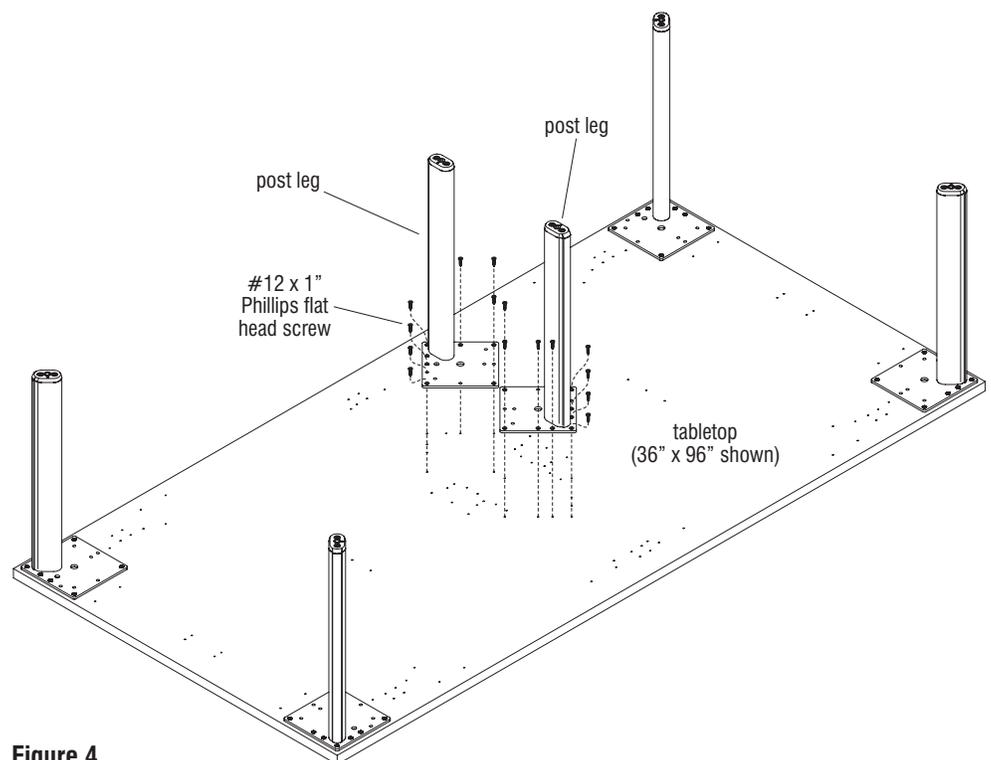


Figure 4



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Caster & Low Profile Glide Overview

Note: If the table being assembled is a caster leg unit, proceed to “Caster Installation” instructions on this page, otherwise proceed to “Low Profile Glide Installation” instructions on this page.

Caster Installation

1. Locate the locking and non-locking casters. Locking casters are to be installed to the legs at the front, user side of the table (opposite side as optional tabletop cutouts, and non-locking casters are to be installed to the rear legs and any middle legs of the table. Press in fully to install the stem of one locking and one non-locking caster into the caster mounting holes at the underside of each leg (Figure 5).
2. Proceed to the following sections below in order based on your tables requirements: Proceed to page 6 if the table being assembled is 84” or 96” wide and will have Pattern electrical, page 7 for power module installation, page 14 for grommet installation, page 17 for ganging tables, page 28 for modesty panel installation. If table does not require any of the above components, carefully flip the table to the upright position and move the table to the final location of use.

Low Profile Glide Installation

3. Thread the stem of each glide into the threads at the end of each leg (Figure 5).
4. Proceed to the following sections below in order based on your tables requirements: Proceed to page 6 if the table being assembled is 84” or 96” wide and will have Pattern electrical, page 7 for power module installation, page 14 for grommet installation, page 17 for ganging tables, page 28 for modesty panel installation. If table does not require any of the above components, carefully flip the table to the upright position and move the table to the final location of use.

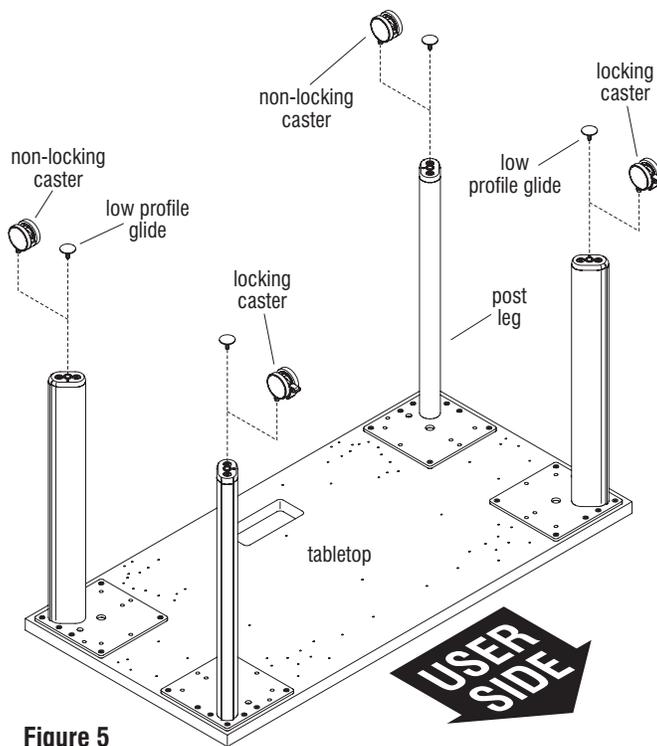


Figure 5

■ Tribulaire™ Collection - Post-Leg Tables

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

Pattern Power Distribution Block Installation (only 84-96" wide tables)

Note: For ease of installation, while the table is still upside down, the Pattern power distribution blocks will be installed to the underside of the table. All other Pattern electrical components will be installed in a later step.

1. Position the gray Pattern power distribution blocks over the mounting holes near the center of the table. Align the mounting holes of each block with the mounting holes on the underside of the tabletop and secure using two #6 x 1/2" Phillips pan head screw. Do not over-tighten (Figure 6).
2. Proceed to the following sections below in order based on your tables requirements: Proceed to page 7 for power module installation.


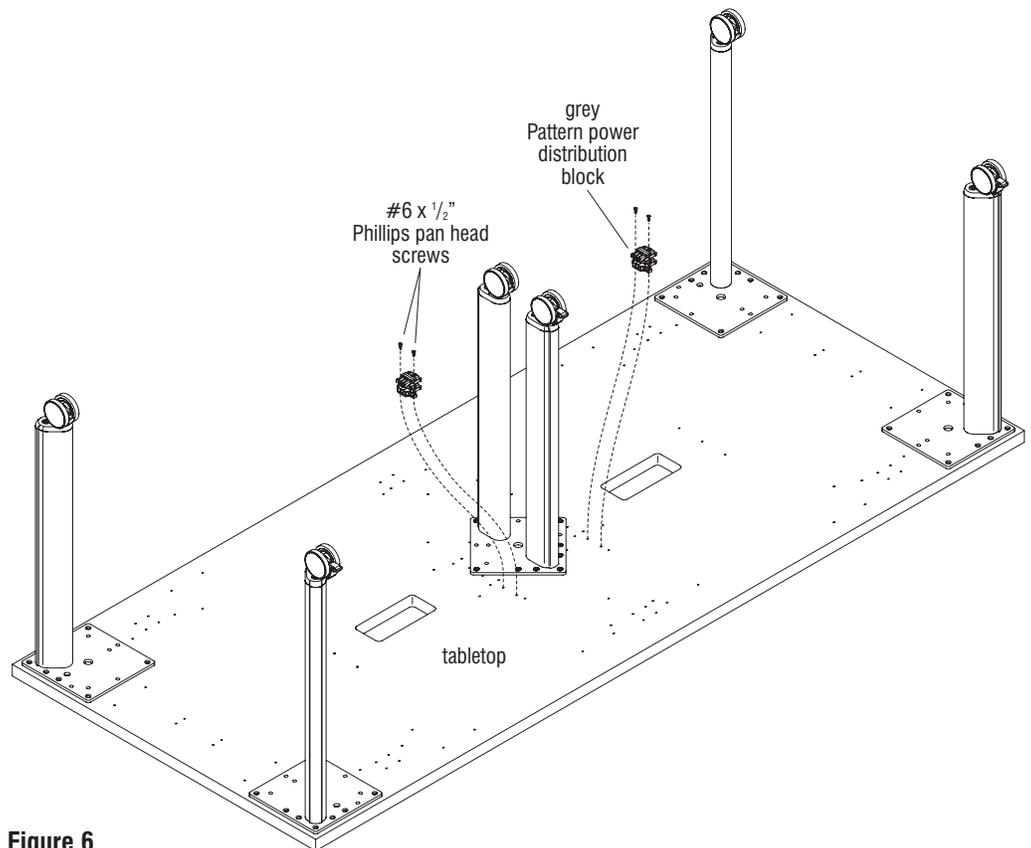


Figure 6

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

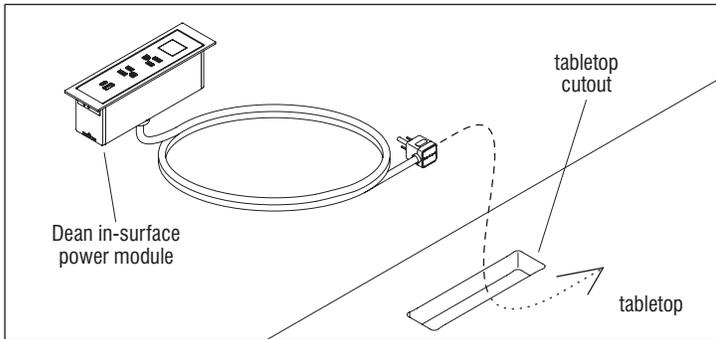

Detail A

Power Module Overview

Note: Although the figures throughout the “Power Module” instructions illustrate a Tributaire rectangular post-leg table, the instructions apply to all Tributaire post-leg tables. Your configuration may vary.

Note: If the Tributaire training table being assembled requires a power module, reference the following sections below based on the power module your table requires: Proceed to page 7 for Dean in-surface power modules, page 8 for Dean undersurface power modules, page 9 for Double Ellora B power modules, page 10 for Dubbel undersurface power modules, page 11 for Nacre in-surface pop-up power modules, page 12 for Node in-surface power modules or page 13 for Snap-In RPT modules.

Dean® In-Surface Power Module Installation


1. With the assembled table in the upright position, orient the Dean in-surface power module as shown and route the plug end down through the cutout in the tabletop. Press the module down firmly into the cutout (Figure 1 & Detail A).
2. At the underside of the Dean in-surface power module, at each end are two horizontal channels which the clamp bracket assemblies slide into. Position each clamp bracket so the screws are oriented away from the power module, as illustrated in Detail B. Insert a clamp bracket into the two channels on each end of the power module, sliding each in until the top bracket is completely engaged with the channel (Detail C).
3. Using the screws on the clamp bracket assembly, tighten the screws to the tabletop underside to secure the Dean in-surface power module in place to the tabletop (Detail C).
4. Select the appropriate data plate adapter for the phone/data jack to be used and carefully remove from injection molded tree (Detail D).

Note: Jacks are sold by separate companies and are not supplied with the module.


5. Wire the jack appropriately to the data plate and snap the data plate assembly into the module grommet opening as shown (Detail E).

Note: Depending on style of data jack used, it may be necessary to route the phone/data cord through the module grommet opening and data plate to install. Each installation may vary.

6. Proceed to “Wire Management Overview” instructions on page 15.

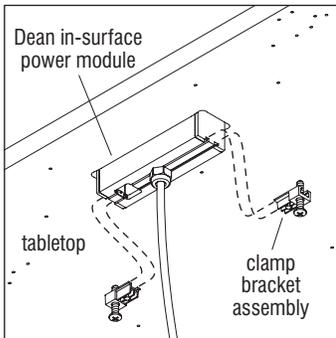


Detail B - (underside view)

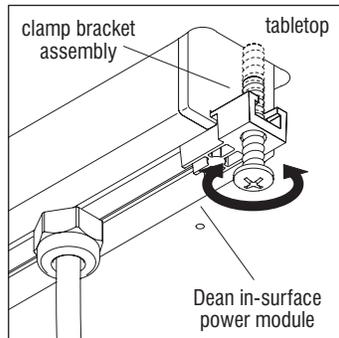

Detail C - (underside view)

	Data Adapter Plates
BBB	L-Com Keystone Modular, NETCONNECT and 110 Connect Series Modular Jack, Siemon ZMAX Style, Allen Tel Versa Tap Series, Leviton Quick Port Series, Belden REVConnect, HDMI Adapter Cable.
CCC	Hubbell Nextspeed Keystone Series, ADC Truenet Series
DDD	Blank (no coupler/jack)
EEE	Ortronics Tracjack Series
FFF	Panduit Mini-Com Series
HHH	Video Monitor Jack/DB-15

Detail D

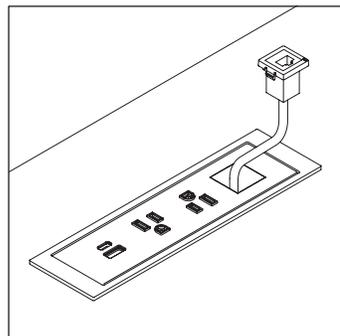

Detail E

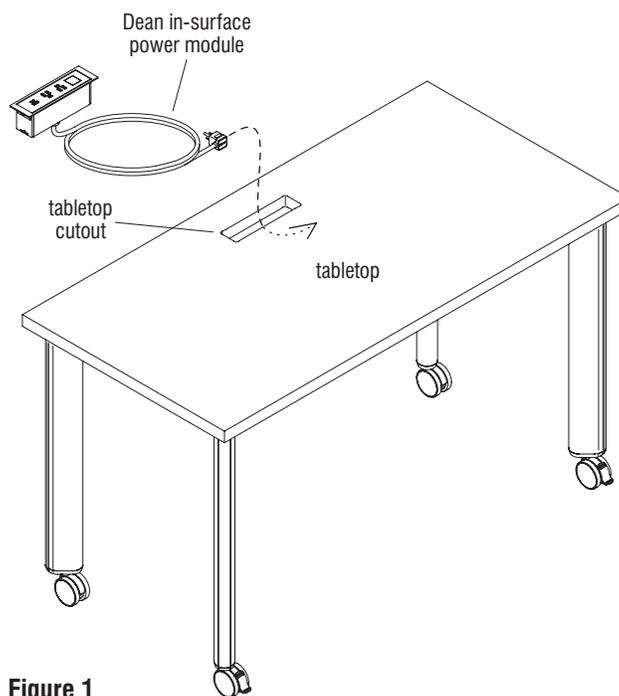


Figure 1

Tributaire™ Collection - Post-Leg Tables - Power Modules

Assembly Instructions




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

Dean® Undersurface Power Module Installation

1. Align the mounting holes of the Dean undersurface power module with one of the three sets of Dean pre-drilled mounting hole locations underneath the front, user side of the tabletop (Figure 2 and Details F & G). Secure the Dean power module to the tabletop using four #10-12 x 3/4" Phillips pan head screws (Figure 2 & Details F & G).
2. If the table being assembled requires any grommets, "Proceed to "Grommet Overview" instructions on page 14, otherwise proceed to "Wire Management Overview" instructions on page 15.

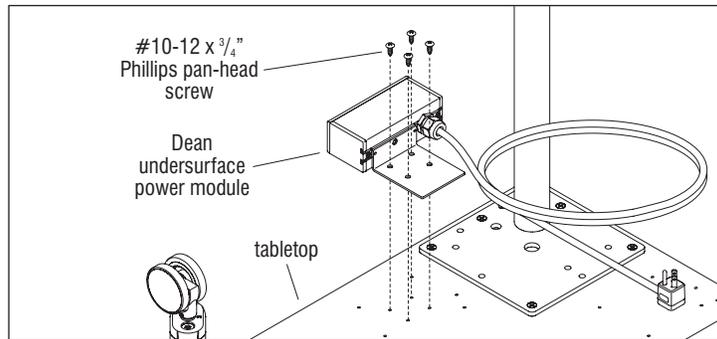

Detail F - Left or Right Aligned Dean Mounting Holes

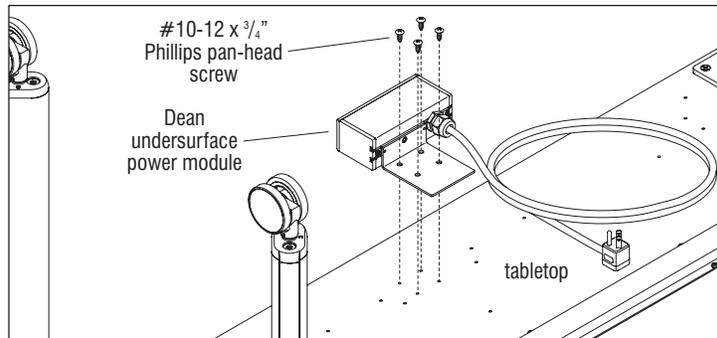

Detail G - Center Aligned Dean Mounting Holes


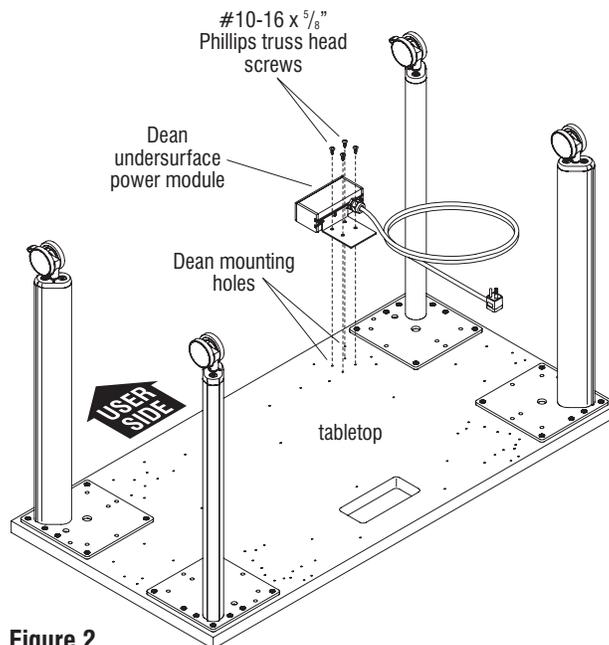


Figure 2

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

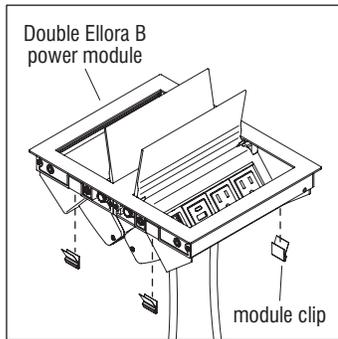

Detail H

Data Adapter Plates	
BBB	L-Com Keystone Modular, NETCONNECT and 110 Connect Series Modular Jack, Siemon ZMAX Style, Allen Tel Versa Tap Series, Leviton Quick Port Series, Belden REVConnect, HDMI Adapter Cable.
CCC	Hubbell Nextspeed Keystone Series, ADC Truenet Series
DDD	Blank (no coupler/jack)
EEE	Ortronics Tracjack Series
FFF	Panduit Mini-Com Series
HHH	Video Monitor Jack/DB-15

Detail I

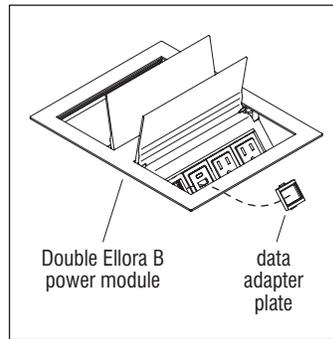

Detail J

Double Ellora® B In-Surface Power Module Installation

1. Attach four module clips, two at each end, onto the sides of the Double Ellora B in-surface power module as illustrated (Detail H).
2. With the assembled table in the upright position, orient the Double Ellora B in-surface power module as shown and route the plug ends down through the tabletop cutout. Press the module down firmly into the cutout to secure in place, making sure the two clips on each side of the module catch under the cutout bottom edge of the tabletop (Figure 3).
3. Select the appropriate data adapter plate for the phone/data jack to be used and carefully remove from injection molded tree (Detail I).

Note: Jacks are sold by separate companies and are not supplied with the module.

4. Wire the jack appropriately to the data plate and snap the data plate assembly into the module grommet opening as shown (Detail J).
5. Proceed to "Wire Management Overview" instructions on page 15.

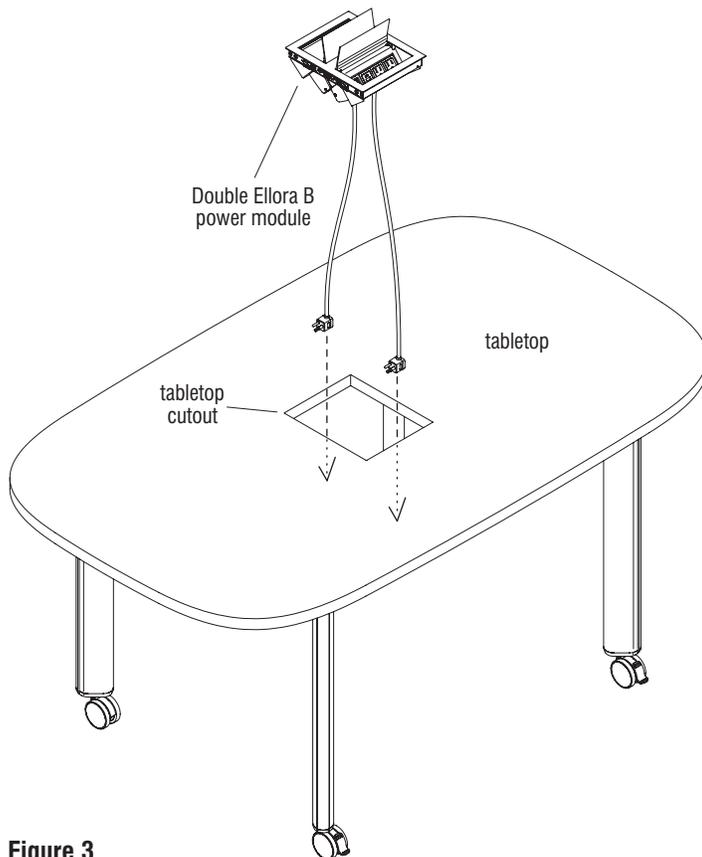


Figure 3




Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

Dubbel Undersurface Power Module Installation

1. Align the mounting holes of the Dubbel undersurface power module with one of the two sets of Dubbel pre-drilled mounting hole locations underneath the front, user side of the tabletop, three sets of hole locations if the table is 60" or wider (Figure 4 and Details K & L). Secure the Dubbel power module to the tabletop using two #10-12 x 3/4" Phillips pan head screws (Figure 4 & Details K & L).
2. If the table being assembled requires any grommets, "Proceed to "Grommet Overview" instructions on page 14, otherwise proceed to "Wire Management Overview" instructions on page 15.

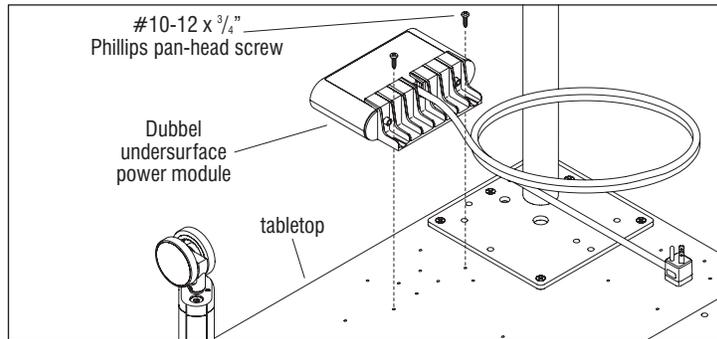

Detail K - Left or Right Aligned Dean Mounting Holes

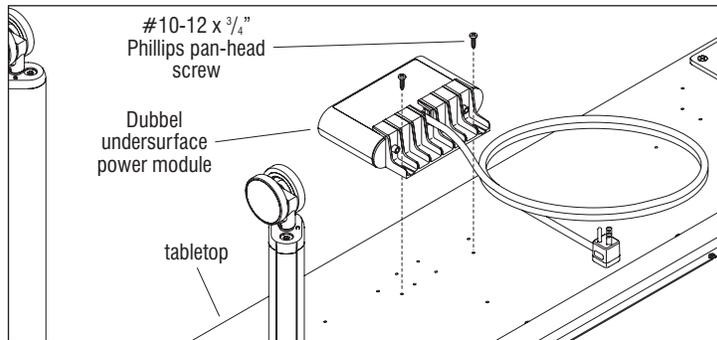

Detail L - Center Aligned Dean Mounting Holes


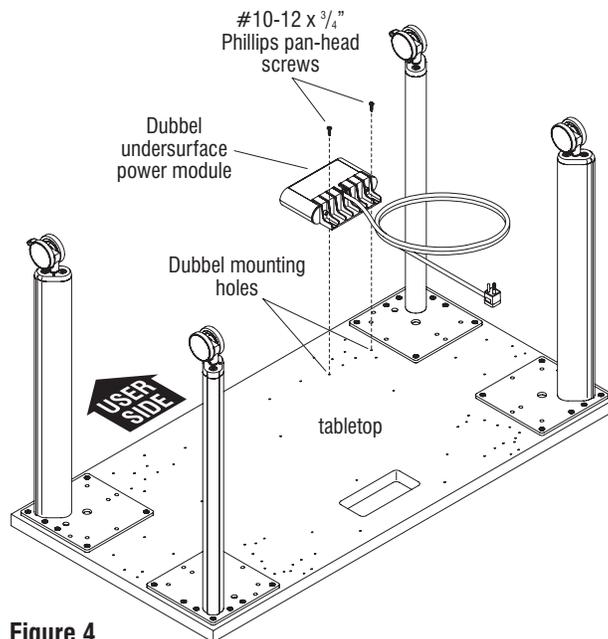


Figure 4


WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

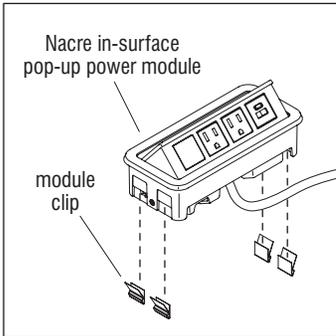


Detail M

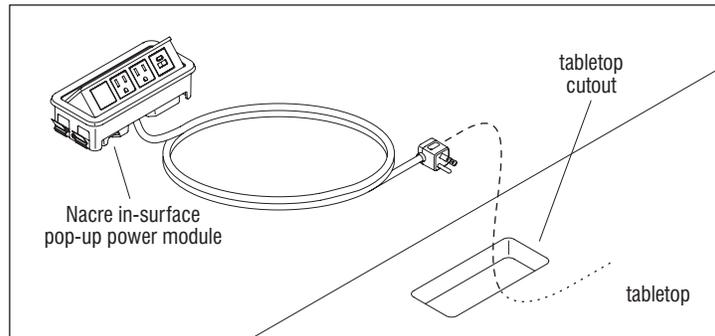

Detail N

Data Adapter Plates	
BBB	L-Com Keystone Modular, NETCONNECT and 110 Connect Series Modular Jack, Siemon ZMAX Style, Allen Tel Versa Tap Series, Leviton Quick Port Series, Belden REVConnect, HDMI Adapter Cable.
CCC	Hubbell Nextspeed Keystone Series, ADC Truenet Series
DDD	Blank (no coupler/jack)
EEE	Ortronics Tracjack Series
FFF	Panduit Mini-Corn Series
HHH	Video Monitor Jack/DB-15

Detail O

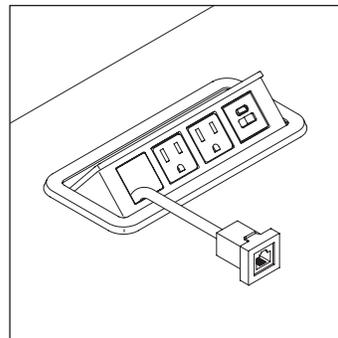

Detail P

Nacre® In-Surface Pop-Up Power Module Installation

1. Attach four module clips, two at each end, onto the sides of the Nacre in-surface pop-up power module as illustrated (Detail M).
2. With the assembled table in the upright position, orient the Nacre in-surface pop-up power module as shown and route the plug end down through the tabletop cutout. Press the module down firmly into the cutout to secure in place, making sure the two clips on each side of the module catch under the cutout bottom edge of the tabletop (Figure 5 & Detail N).
3. Select the appropriate data adapter plate for the phone/data jack to be used and carefully remove from injection molded tree (Detail O).

Note: Jacks are sold by separate companies and are not supplied with the module.
4. Wire the jack appropriately to the data plate and snap the data plate assembly into the module grommet opening as shown (Detail P).
5. Proceed to "Wire Management Overview" instructions on page 15.

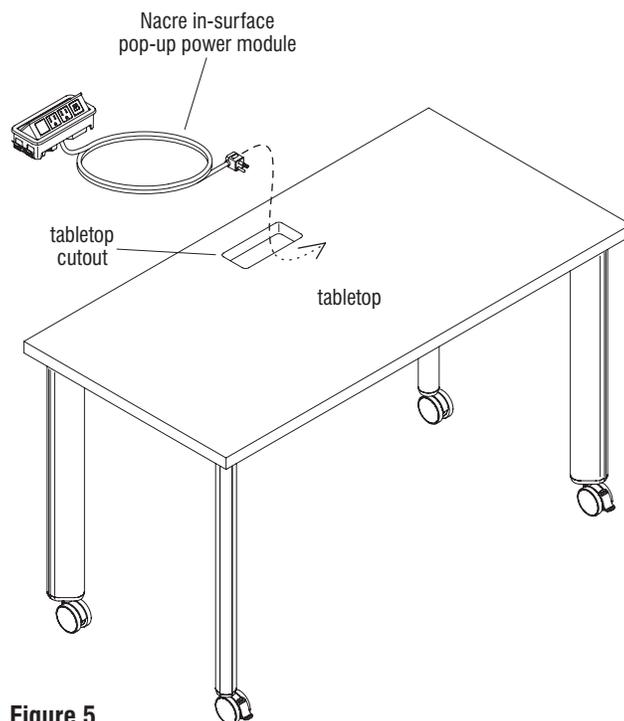


Figure 5

Tributaire™ Collection - Post-Leg Tables - Power Modules

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

Node In-Surface Power Module Installation

1. Orient the Node in-surface power module consistently straight, as shown and route the plug end down through the tabletop cutout. Press the module down completely into the cutout assuring it is straight, and consistent with other tables if being assembled (Figure 6 & Detail Q).
2. Route the Node in-surface power module plug end through the locking ring opening as illustrated (Detail R).
3. Guide the locking ring up the power cord to the Node in-surface power module, then thread the locking ring up the power module, tight to the underside of the tabletop (Detail S).
4. Assure that the power module is straight as desired on the tabletop. Hold the power module by hand from underneath, then more completely tighten the locking ring by using a large locking pliers, or a hammer and flat blade screwdriver to tap on a ridge of the ring to rotate and tighten as illustrated (Detail S).
5. Proceed to "Wire Management Overview" instructions on page 15.



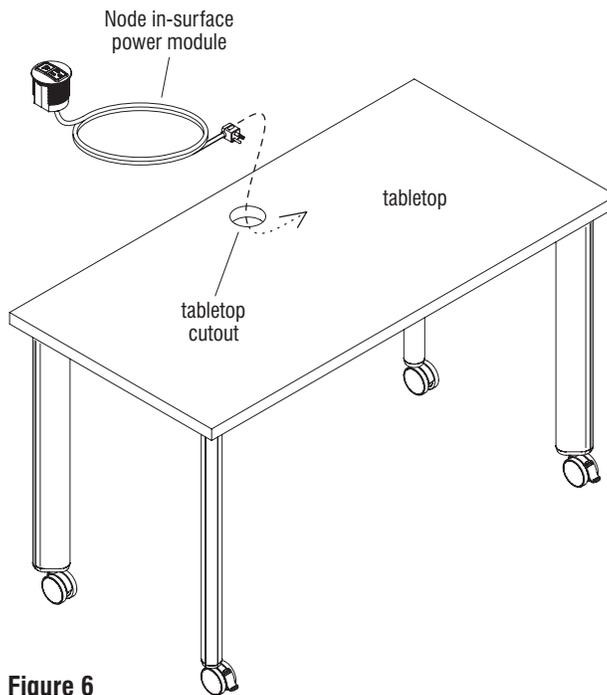



Figure 6

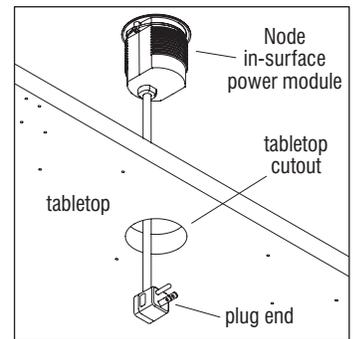

Detail Q - (underside view)

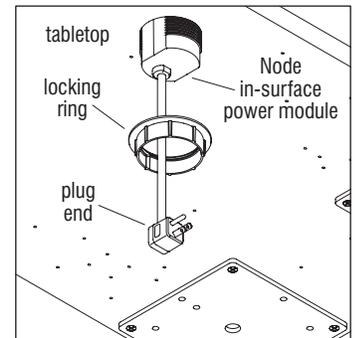

Detail R - (underside view)

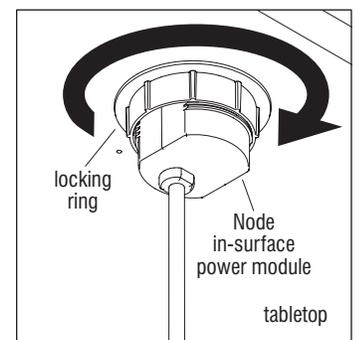


Detail S - (underside view)


WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

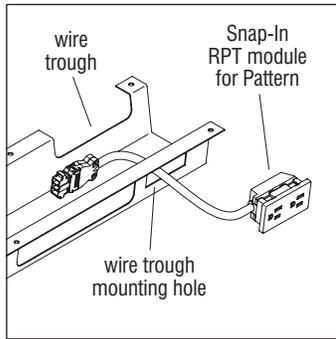

Detail T

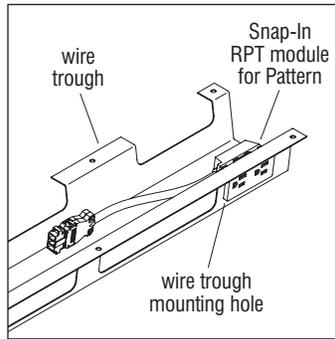

Detail U

Snap-In RPT Module Installation

Note: Snap-In RPT modules install to the wire trough and the trough will be installed to the tabletop at a later step.

1. Route the connector end of each Snap-In module in through the rectangular-shaped module mounting holes on the wire trough as illustrated, routing the connector ends toward the middle of the trough, then snap the module receptacles into position (Figure 7 & Details T & U).
2. If the table being assembled requires any grommets, "Proceed to "Grommet Overview" instructions on page 14, otherwise proceed to "Wire Management Overview" instructions on page 15.

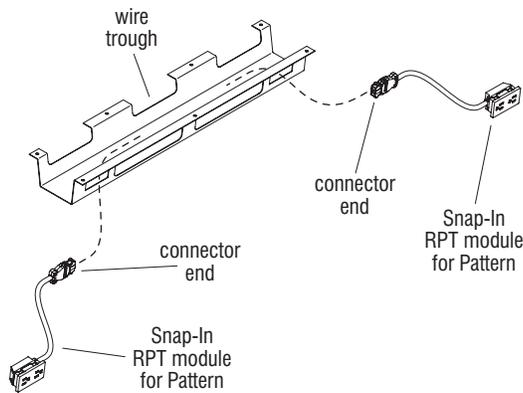


Figure 7



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

Grommet Overview

Note: Although the figures throughout this “Grommet” instructions illustrate a Tributaire rectangular post-leg table, the instructions apply to all Tributaire post-leg tables. Your configuration may vary.

Note: If the tables being assembled require a Dean or Nacre grommet installed into any tabletop cutouts, proceed to “Dean & Nacre Grommet Installation” instructions below. If a Node grommet is required, proceed to “Node Grommet Installation” instructions on this page.

Dean & Nacre Grommet Installation

1. Position the Dean or Nacre grommet above the tabletop cutout with the lid opening towards the user (Figure 1 & Detail A or B).
2. Push the grommets into each cutout, tapping lightly with a rubber mallet if required. Use caution to avoid scratching the grommet (Figure 1 & Detail A or B).
3. Secure the grommet to the tabletop by inserting two #6 x 1/2” screws through the holes on the inside of the module into the cut edge of the top (Detail A or B).
4. Proceed to “Wire Management Overview” instructions on page 15.

Node Grommet Installation

1. Position the Node grommet above the tabletop cutout as illustrated (Figure 1 & Detail C).
2. Push the grommet into the cutout, tapping lightly with a rubber mallet if required. Use caution to avoid scratching the grommet (Figure 1 & Detail C).
3. Secure the grommet to the tabletop by inserting one #6 x 1/2” screw through the hole on the inside of the module into the cut edge of the top (Detail C).

4. Proceed to “Wire Management Overview” instructions on page 15.



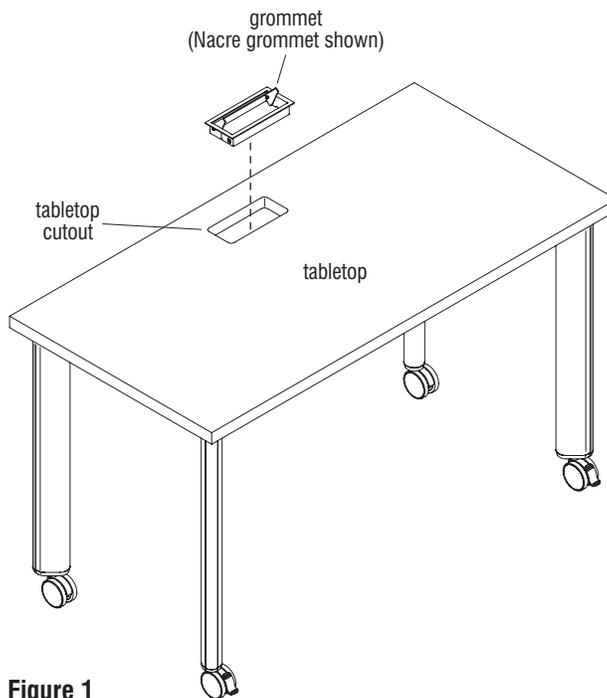



Figure 1

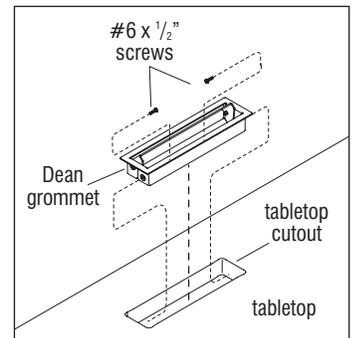

Detail A - Dean Grommet

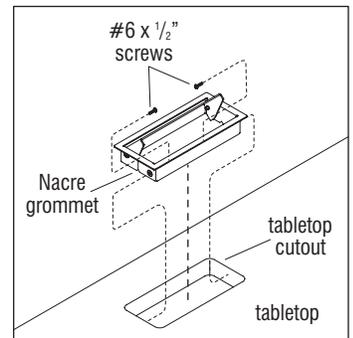

Detail B - Nacre Grommet

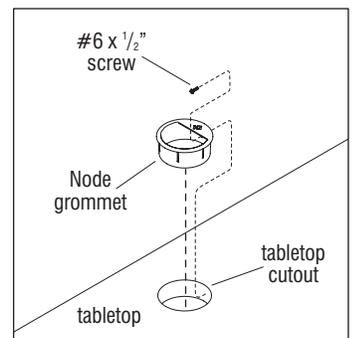

Detail C - Node Grommet

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

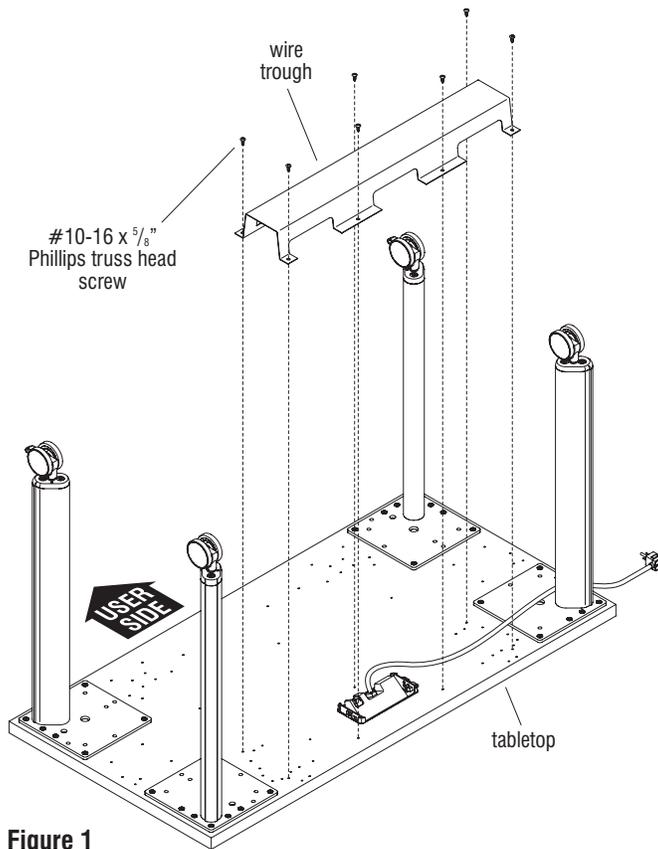


Figure 1

Wire Management Overview

Important: When turning a tabletop upside down onto a soft protective surface to install components, always take care to place a cloth or padding under any installed power module or grommet for added protection. Although the Tributaire table figures on this page is shown upside down, the wire trough and Velcro wire managers can be installed while the table is in the upright position.

Note: If the Tributaire training table being assembled requires a wire trough, go to “Wire Trough Installation” instructions below. If the table requires Velcro managers, go to “Velcro Wire Management Installation” instructions on the next page.

Wire Trough Installation

1. If a power module with a pop-up feature was installed (Double Ellora® B or Nacre®), make sure the cover is closed, then carefully rotate the table to be upside down on a soft, protective surface with padding under power module.
2. Position the wire trough over the wire trough mounting holes on the underside of the tabletop as illustrated, with the two smaller rectangular Snap-In RPT mounting holes (or Snap-In RPT modules) facing the front, user side of the table. Align the wire trough mounting holes with the pre-drilled holes in the underside of the tabletop, and secure wire troughs to tabletop using seven #10-16 x 5/8” Phillips truss head screws (Figure 1).
3. Proceed to the following sections below in order based on your tables requirements: Proceed to page 16 for Velcro manager installation, page 17 for ganging tables, page 19 for Pattern electrical system, page 25 for additional wire management, or page 28 for modesty panel installation. If table does not require any of the above components, proceed to “Connections to Power Source” instructions on page 30.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Velcro® Wire Manager Overview

Note: If the Tributaire post-leg table being assembled requires Velcro wire managers, one wire manager must be secured to the post leg plate that the power infeed or power module cord will route down into the vertical wire manager, and one wire manager must install on the middle post leg plate, if present. If tables are to be ganged together, at least two wire managers must be secured to the post leg plates closest to the tabletop edge using the adhesive backing. All remaining wire managers can be secured to the tabletop or leg plates in the desired locations to prevent cords from hanging down. Reference the following sections on this page based on the tables being assembled.

Velcro Wire Manager to Post-Leg Plate Installation

1. Position a Velcro wire manager over the post-leg plate that requires a wire manager as illustrated (Figure 2 & Figure 3).
2. Remove the tape backing on the Velcro wire manager to expose the adhesive surface. Position each wire manager as illustrated over the post-leg plate. Apply firm pressure to the Velcro wire manager to set the adhesive in place (Figure 2 & 3).
3. Strap in the desired cords, if present, using the installed Velcro wire manager (Figure 2 & 3 & Detail A).
4. Proceed to the following sections below in order based on your tables requirements: Proceed to instructions below if the table requires Velcro wire managers to be installed to the tabletop, page 17 for ganging tables, page 19 for Pattern electrical system, page 25 for additional wire management, or page 28 for modesty panel installation. If table does not require any of the above components, proceed to "Connections to Power Source" instructions on page 30.

Velcro Wire Manager to Tabletop Installation

1. Position a Velcro® wire manager over the pre-drilled wire manager holes in the underside of the tabletop. Locate and place two steel position tabs, one at each end over the mounting holes in the wire manager, then secure using four #10 x 5/8" screws, through the two position tabs, wire manager mounting holes and into the tabletop. Do not over-tighten (Figure 3).
2. Strap in the desired cords if present, using the installed Velcro wire manager (Figure 3 & Detail A).
3. Proceed to the following sections below in order based on your tables requirements: Proceed to page 17 for ganging tables, page 19 for Pattern electrical system, page 25 for

additional wire management, or page 28 for modesty panel installation. If table does not require any of the above components, proceed to "Connections to Power Source" instructions on page 30.


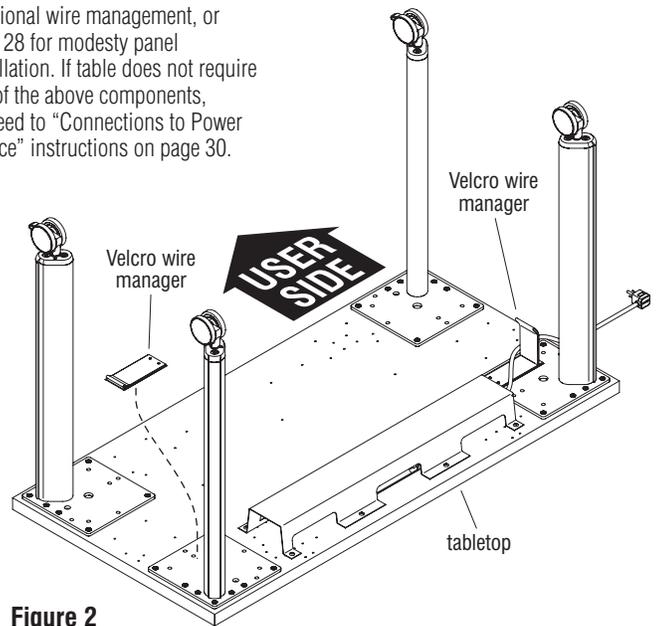


Figure 2

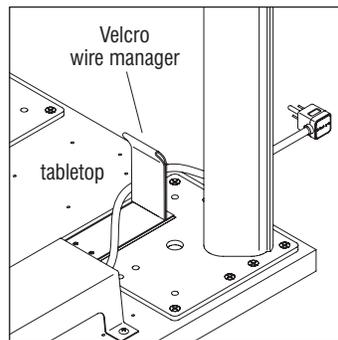

Detail A


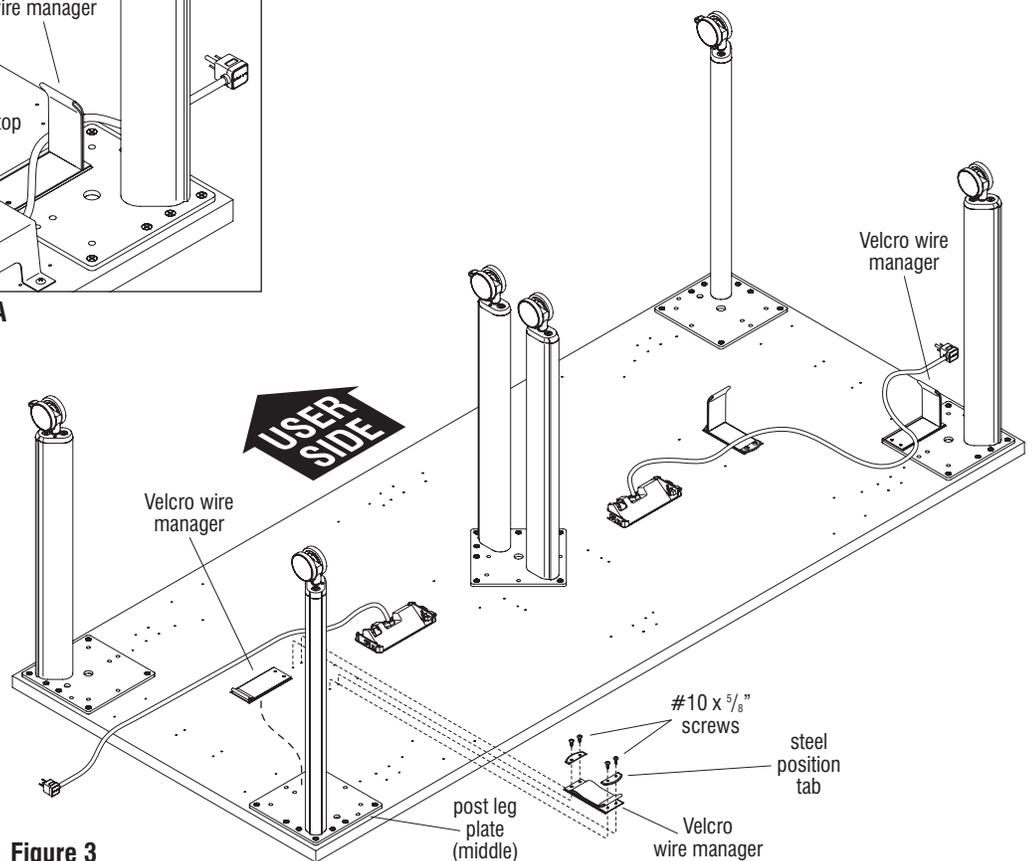



Figure 3



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

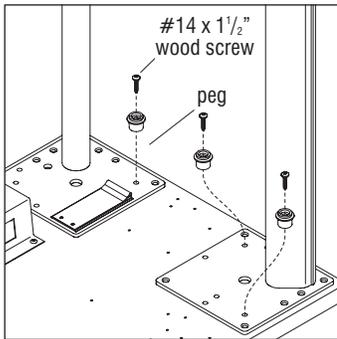

Detail A - (side-to-side ganging)

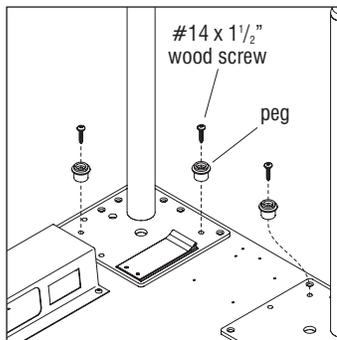

Detail B - (back-to-back ganging)

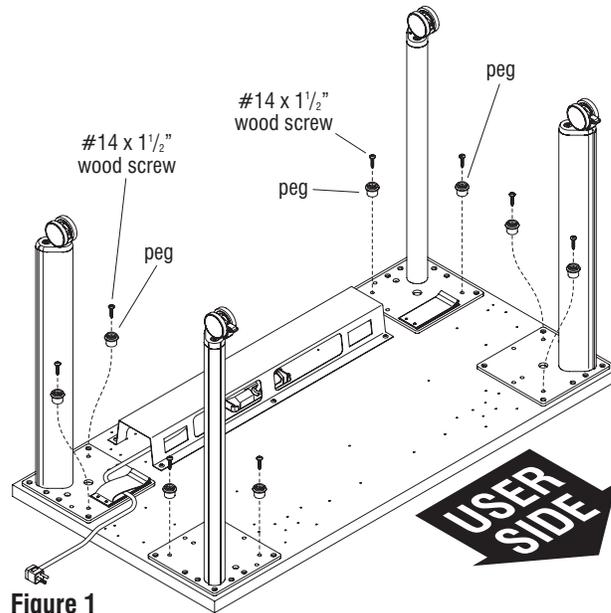


Figure 1

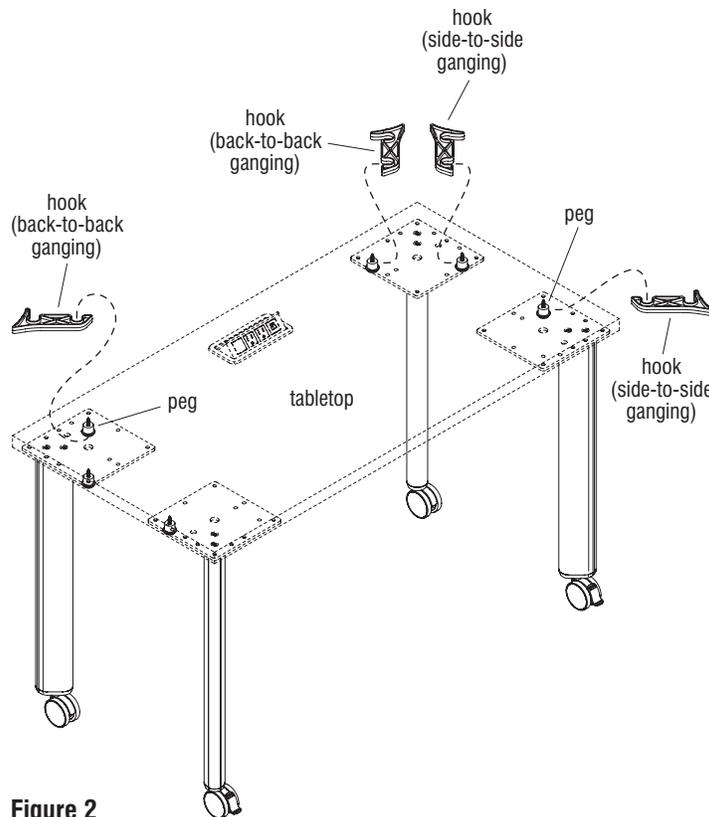


Figure 2

Ganging Tables Overview

Important: When turning a tabletop upside down onto a soft protective surface to install components, always take care to place a cloth or padding under any installed power module or grommet for added protection. Although the Tributaire table figures on this page is shown upside down, the ganging pegs can be installed while the table is in the upright position.

Peg Installation

Note: Take note of correct peg mounting locations to assure proper latching for ganging. If the tables are to be ganged in a side-to-side configuration, use the hole pattern shown in Detail A. If tables are to be ganged back-to-back, use the hole pattern shown in Detail B.

1. Locate the four pre-drilled peg mounting locations on each leg mounting plate, at each corner of each tabletop. Install a peg to each location using a #14 x 1 1/2" wood screw at each peg mounting location (Figure 1 & Details A & B).

2. Carefully turn the table to the upright position (Figure 2).

Hook Installation

3. Position and snap the two ganging hooks onto their respective ganging pegs (Figure 2).

■ Tribulaire™ Collection - Post-Leg Tables - Ganging

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Ganging Tables

4. Move the two tables together side-to-side or back-to-back based on the desired configuration, such that the two pair of ganging pegs face each other. Swing the hooks to the opposite peg to securely gang tables together (Figures 3 & 4 & Detail C).
5. Position and snap any extra pegs onto any extra pegs underneath the tabletops. For hook storage, when tables are not paired, disconnect the table edge ganging hooks and swing them underneath the tabletop or move them to an empty peg mounted at each corner of the table (Figure 3 & Figure 4).
6. Proceed to the following sections below in order based on your tables requirements: Proceed to page 19 for Pattern electrical system, page 25 for additional wire management, page 28 for modesty panel, or page 30 for connections to power source. If the table does not require any of the above components, move the table to the final location of use.

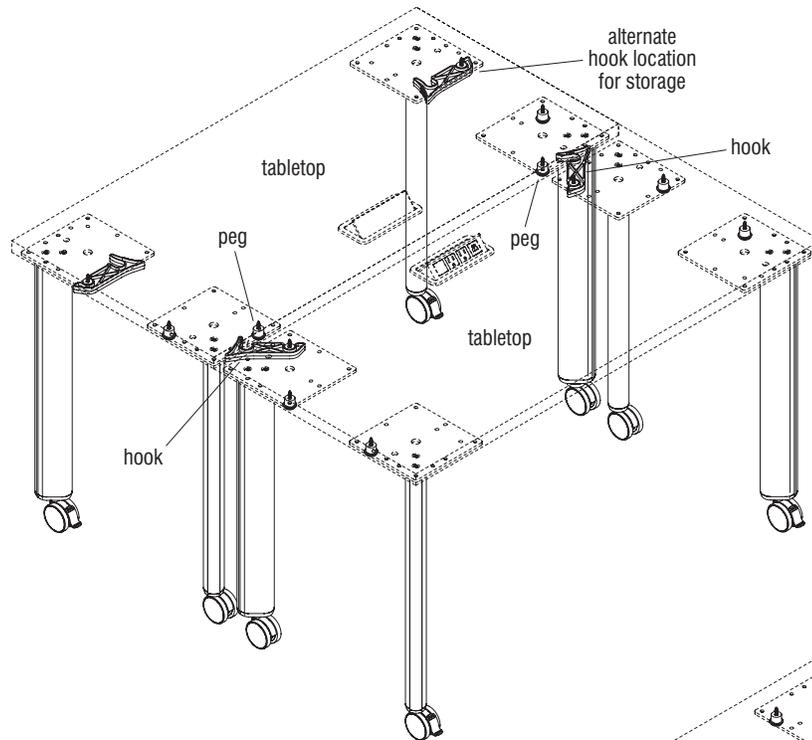


Figure 3 - (back-to-back ganging)

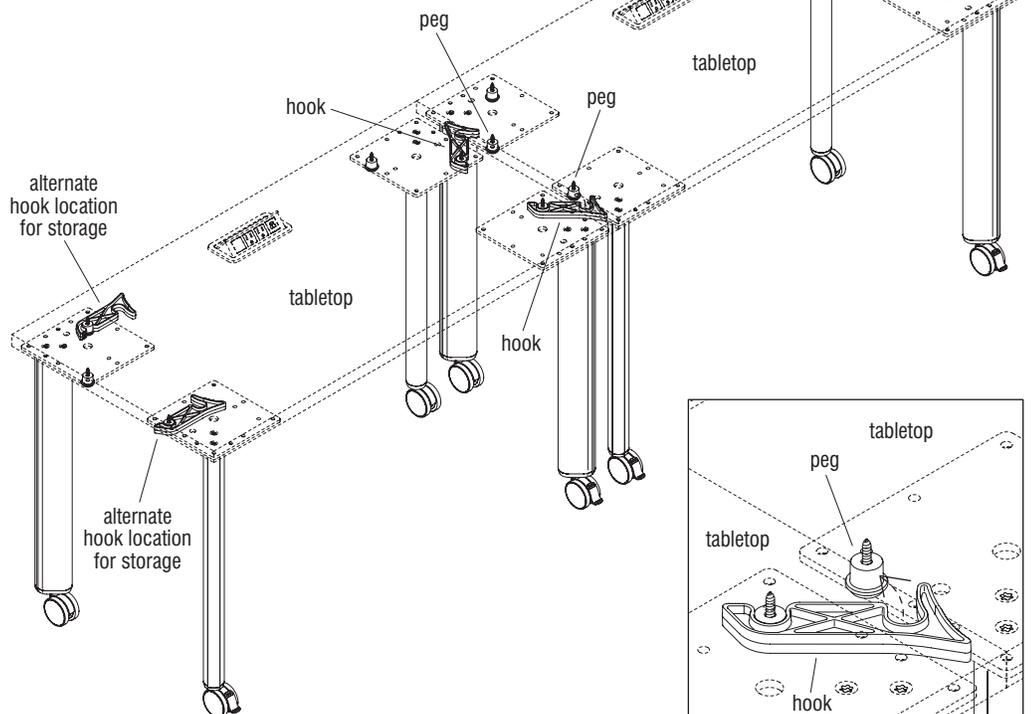


Figure 4 - (side-to-side ganging)


Detail C

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.


CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

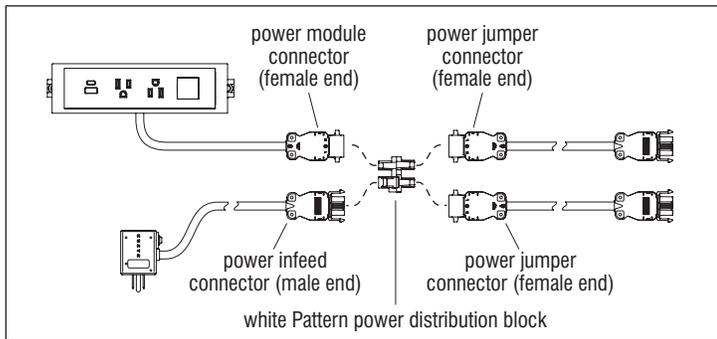

Detail A - Connection Locations with White Power Distribution Block

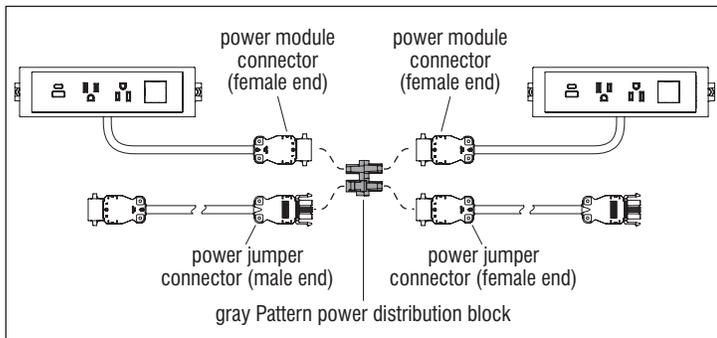

Detail B - Connection Locations with Grey Power Distribution Block

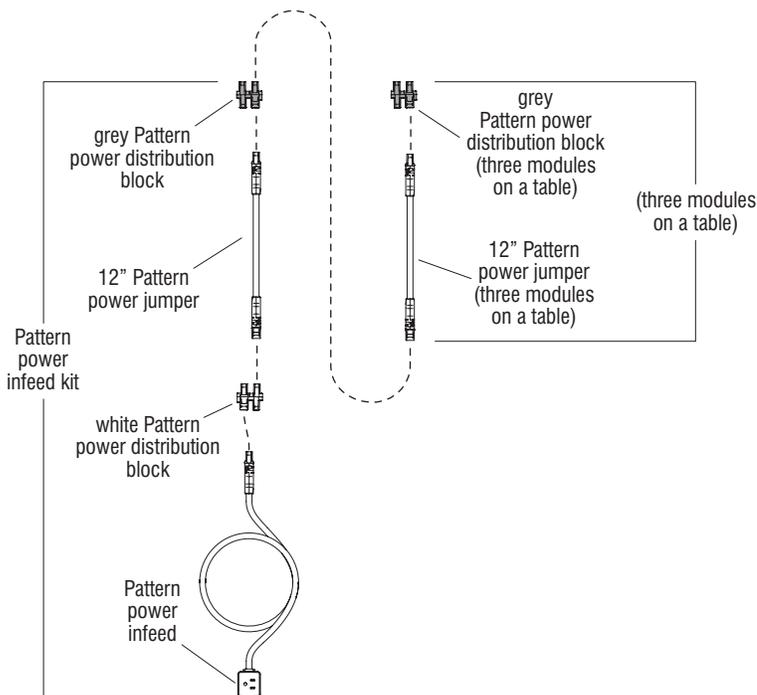


Figure 1 - (top view)

Electrical Overview

Note: If the tables being assembled contain a Pattern electrical system and the table is 84 or 96" wide, proceed to the instructions on page 24. If the table is not 84 or 96" wide and will have a Pattern electrical system, proceed to the instructions below. If the tables contain power modules with 3-prong plug, proceed to "Wire Management Overview" instructions on page 25.

jumpers (in either direction of the power infeed), whichever comes first, can allow up to eighteen power modules depending on table width, and connects to one 15-amp power supply cord (power infeed). The power supply cord does not count toward the maximum 50' of power jumpers.

Note: The Pattern quick-release tool is a simple tool designed to help remove the power connector ends from the Pattern power distribution blocks. If reconfiguration of the Pattern electrical system is required, reference "Pattern Quick-Release Tool" instructions on page 32.

Pattern Electrical System Installation

Note: The Pattern electrical system is ETL Listed, evaluated to safety standard UL 962A (USA) and CAN/ CSA-C22.2 No. 308 (Canada). It allows up to ten power distribution blocks and up to 50' of power

Pattern Power Infeed Kit Assembly

Important: Details A & B are provided as a visual guide to illustrate the different white and grey power distribution blocks, and which male/female connector ends plug into each port.

1. For a run of tables, start Pattern electrical system assembly with the table that will contain the Pattern power infeed. Locate one Pattern power infeed, one white power distribution block, one grey power distribution block and one 12" Pattern power jumper. Plug the power infeed into the white power distribution block first, as illustrated (Figure 1 & Detail A).
2. Plug the female end of the 12" power jumper into either male port opposite to the power infeed connection on the white distribution block (Figure 1 & Detail A).
3. Plug the previously installed (step 2) 12" Pattern power jumper end into a grey power distribution block as illustrated (Figure 1 & Detail B).
4. If the designated power infeed table contains three power modules, an additional 12" Pattern power jumper and grey Pattern power distribution block on the end will be required after the first grey distribution block (Figure 1).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.

Pattern Power Infeed Kit Placement

Note: Detail C illustrates a configuration with one power module. Detail D illustrates a configuration with three power modules. Your power module type and configuration may vary.

5. Route the Pattern power infeed kit into the end of the wire trough of the designated power infeed table (Figure 2).
6. To aid in making connections, temporarily pull from the wire trough's rear access holes, the previously installed power module connector ends, and the power distribution blocks connected in line to the power infeed kit. Plug each of the installed power module's connector ends into the open ports on the nearest white or grey power distribution blocks, then place all cords and power distribution blocks back into the wire trough after connections are made (Details C & D).



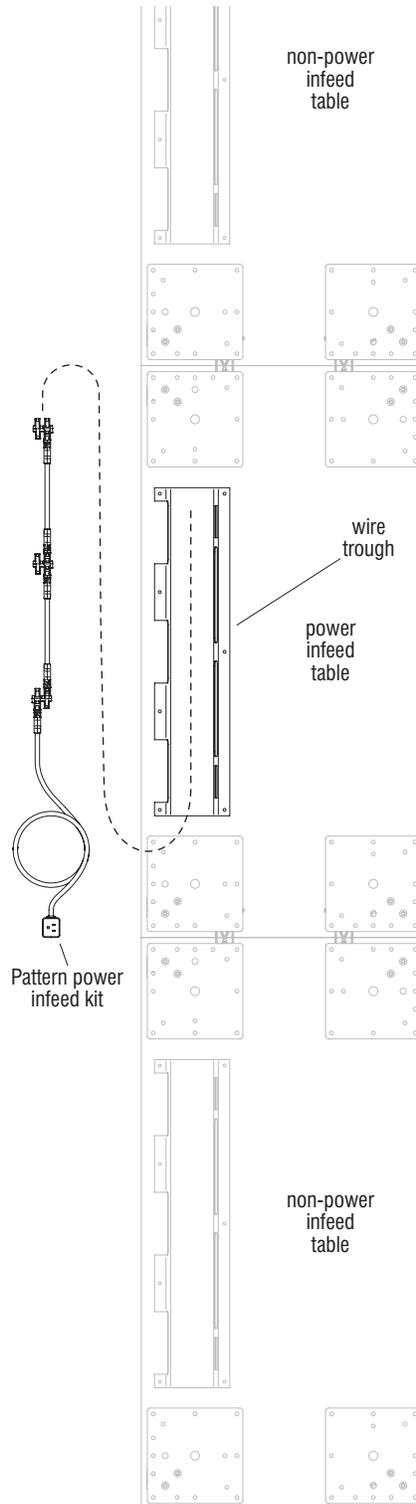


Figure 2 - (top view)

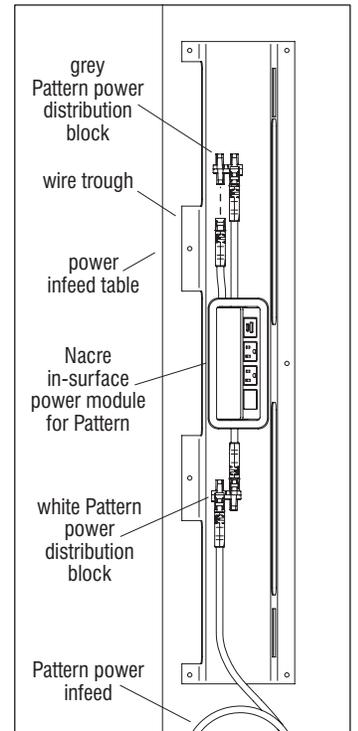

Detail C - (top view)

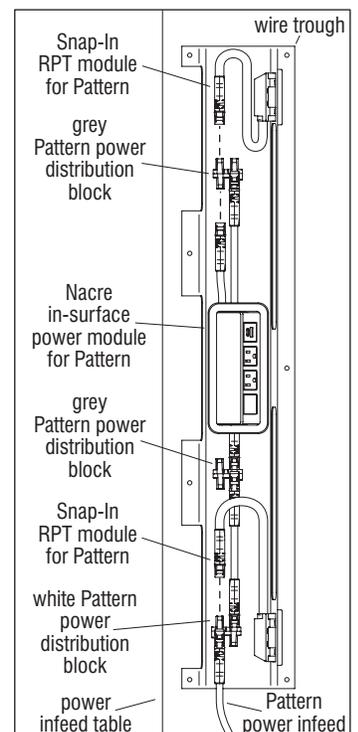


Detail D - (top view)

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.


CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

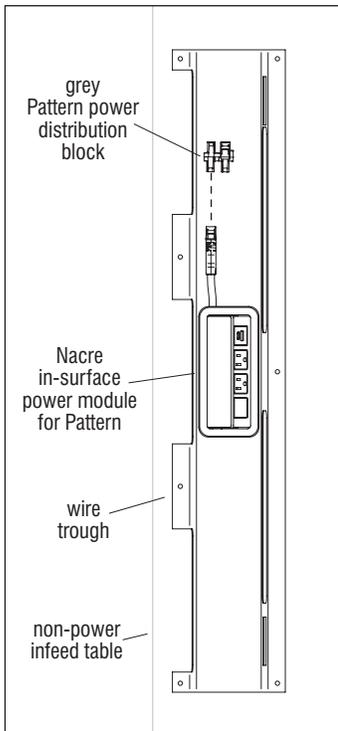

Detail E - (top view)

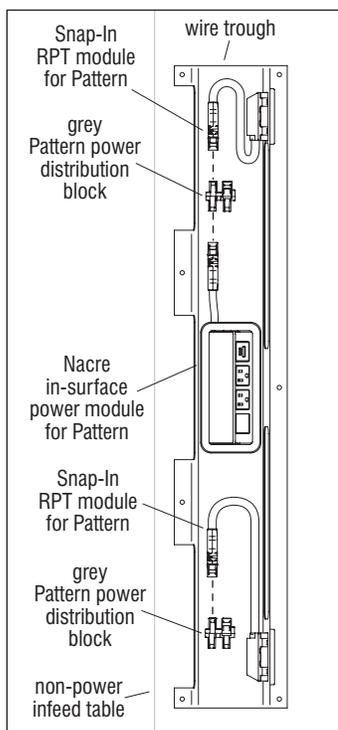

Detail F - (top view)

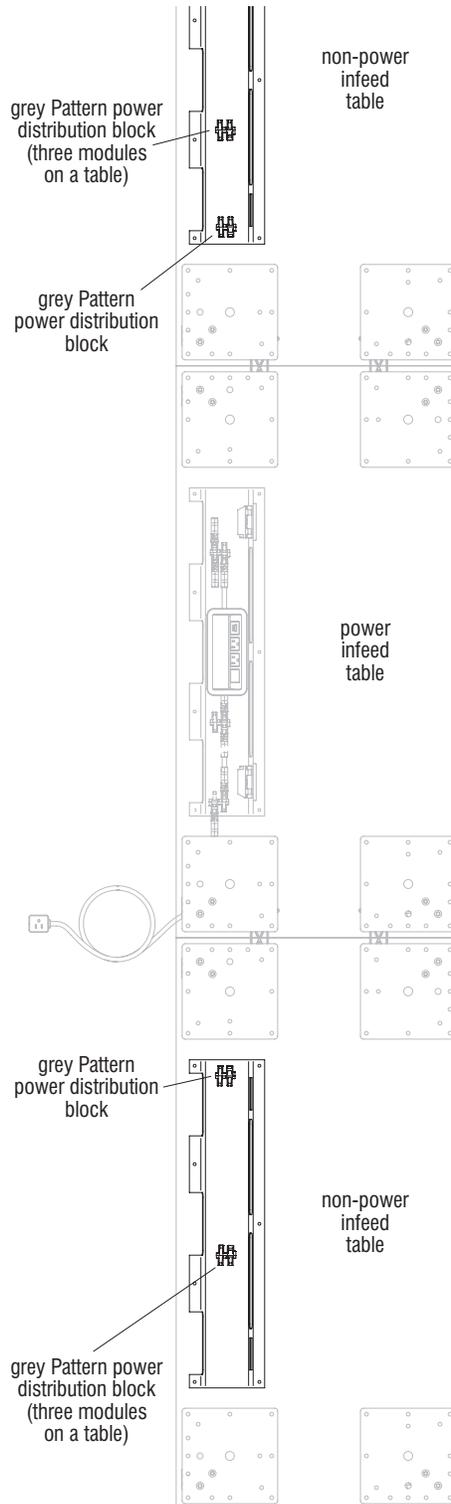


Figure 3 - (top view)

Pattern Power Distribution Block Placement

Note: Detail E illustrates a configuration with one power module. Detail F illustrates a configuration with three power modules. Your power module type and configuration may vary.

7. Locate and distribute the required number of loose grey power distribution blocks along the run of non-power infeed tables which are to receive Pattern electrical. One grey distribution block is required for every two power modules on a table. No more than two grey distribution blocks will be used per non-power infeed table (Figure 3).
8. To aid in making connections, temporarily pull from the wire trough's rear access holes, the power module connector ends. Plug each power module connector end into a port on a grey power distribution block from the previous step. No more than two power modules may be connected to any one grey power distribution block. Place all cords with grey power distribution blocks back into the wire trough after connections are made (Details E & F).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.

Pattern Power Jumper Assembly

Note: Detail G illustrates a configuration with one power module. Detail H illustrates a configuration with three power modules. Your power module type and configuration may vary.

9. Locate and distribute the required number of 12" power jumpers along the run of non-power infeed tables which include installed power modules (Figure 4).
10. To aid in making connections, temporarily pull from the wire trough's rear access holes, the power distribution blocks connected to the power module connector ends. Plug the female connector end of each 12" power jumper into the grey power distribution block that is closest to the power infeed table, then route the open power jumper end in through the wire trough access hole and plug the opposite end of the power jumper into the table's other grey power distribution block. Place all cords with grey power distribution blocks back into the wire trough after connections are made (Details G & H).



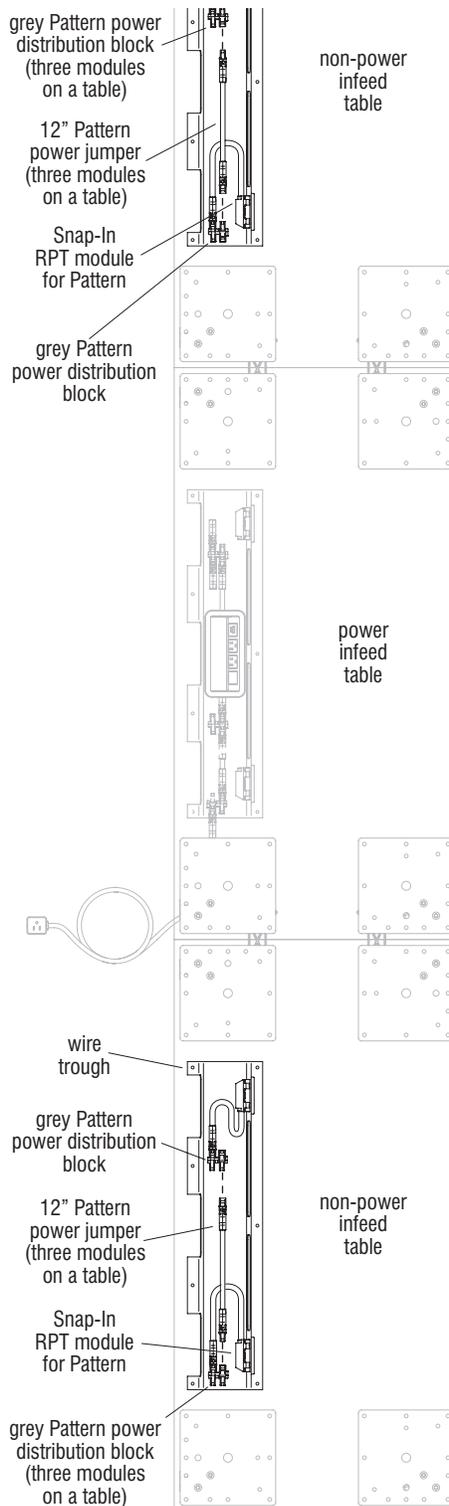


Figure 4 - (top view)

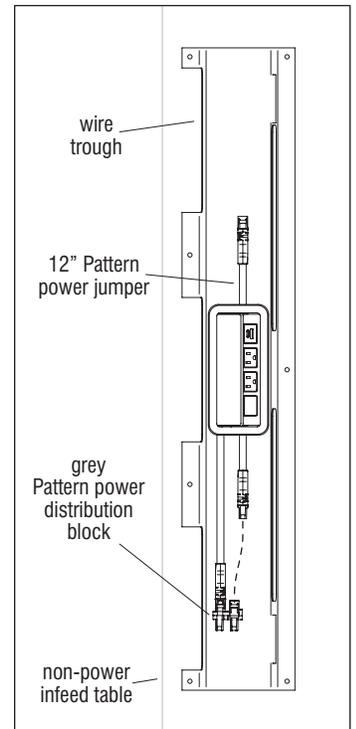

Detail G - (top view)

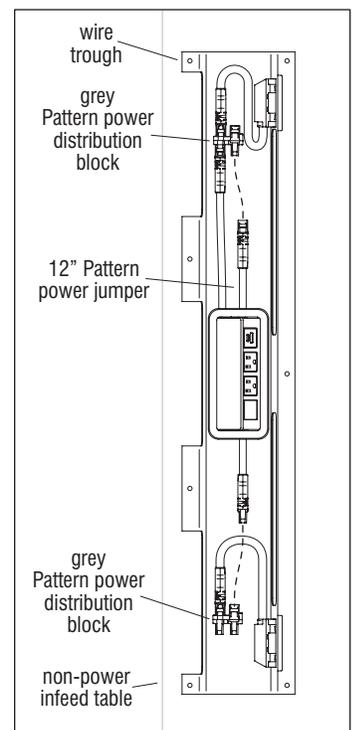


Detail H - (top view)

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.


CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

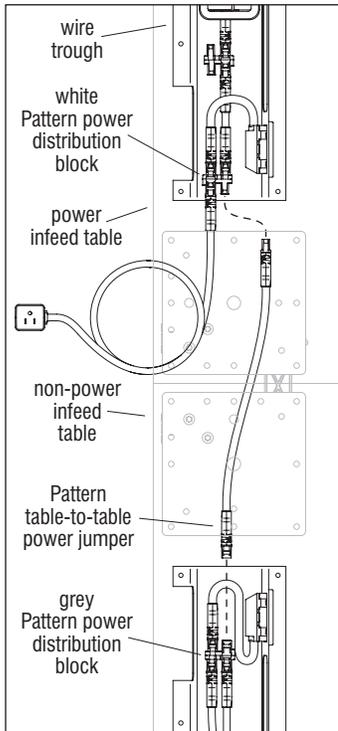

Detail I - (top view)

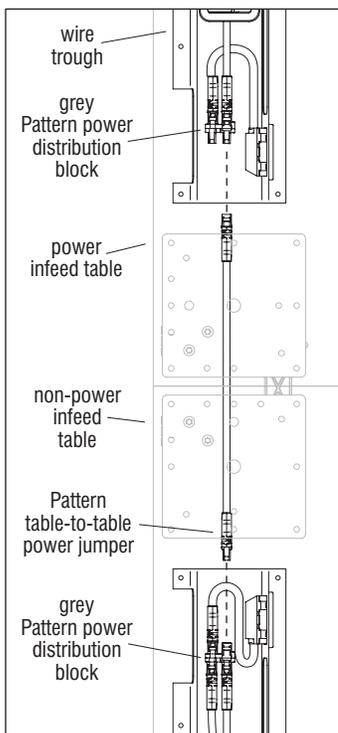

Detail J - (top view)

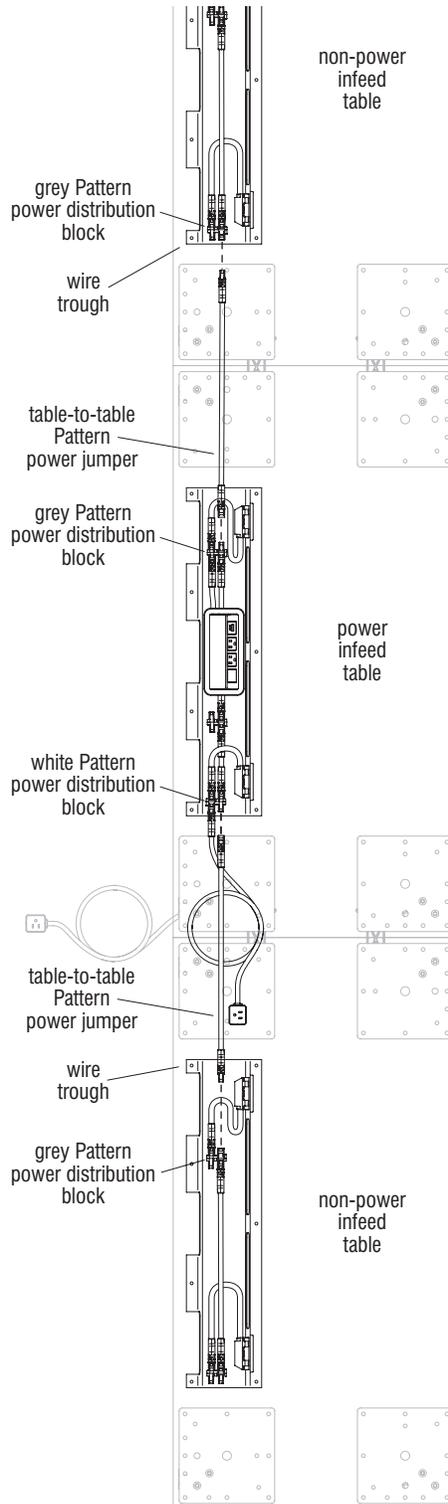


Figure 5 - (top view)

Pattern Table-to-Table Power Jumper Kit Assembly

11. Locate and distribute the required number of table-to-table power jumpers along the run of non-power infeed tables which must have power connected between tables. To aid in making connection, temporarily pull from the wire trough's rear access holes, the power distribution blocks with power module connector ends and 12" power jumpers on them (Figure 5).
12. Starting the assembly process at the Pattern power infeed table and working outward, take a Pattern table-to-table power jumper and plug the female connector end into a power distribution block in the open end of the wire trough. Next, plug the table-to-table power jumper's male connector end into a grey power distribution block in the adjacent non-power infeed table's wire trough. If the power infeed table is in the middle of a run of tables, repeat the process above for the table in the other direction (Figure 5 & Detail I).
13. Continuing with table-to-table power jumper assembly on the remaining tables, plug a power jumper's female connector end into the grey power distribution block at the end of the trough, and plug the opposite end's male connector into the grey power distribution block in the end of the trough of the adjacent table. Repeat this step until all tables within the run are connected with Pattern table-to-table power jumpers (Figure 5 & Detail J).
14. Proceed to "Wire Management Overview" instructions on page 25.

Note: Be sure that all cords and power distribution blocks that were removed to make connections are back inside the wire troughs. The only components that should remain outside of a wire trough are the table-to-table power connectors that run between tables.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

WARNING: Assembly of all table components must be completed before making any electrical connections. All electrically connected furnishings must also be mechanically connected.

CAUTION: If Wire Troughs are used, they are not to be used for routing extension cords. Power supply cords are not to be routed across or through more than one complete unit/tabletop.


**Pattern Electrical System
 Installation on 84-96" Wide
 Tables**

Note: The Pattern electrical system is ETL Listed, evaluated to safety standard UL 962A (USA) and CAN/ CSA-C22.2 No. 308 (Canada). It allows up to ten power distribution blocks and up to 50' of power jumpers (in either direction of the power infeed), whichever comes first, can allow up to eighteen power modules depending on table width, and connects to one 15-amp power supply cord (power infeed). The power supply cord does not count toward the maximum 50' of power jumpers.

Note: The Pattern quick-release tool is a simple tool designed to help remove the power connector ends from the Pattern power distribution blocks. If reconfiguration of the Pattern electrical system is required, reference "Pattern Quick-Release Tool" instructions on page 32.

Important: Detail K is provided as a visual guide to illustrate grey power distribution blocks, and which male/female connector ends plug into each port correctly. If connector ends are switched around and plugged into a block's ports incorrectly, disassembly and reassembly will be required.

3. Plug each power module's female connector end into a Pattern power distribution block (Figure 6).
4. Proceed to "Wire Management Overview" instructions on the next page.

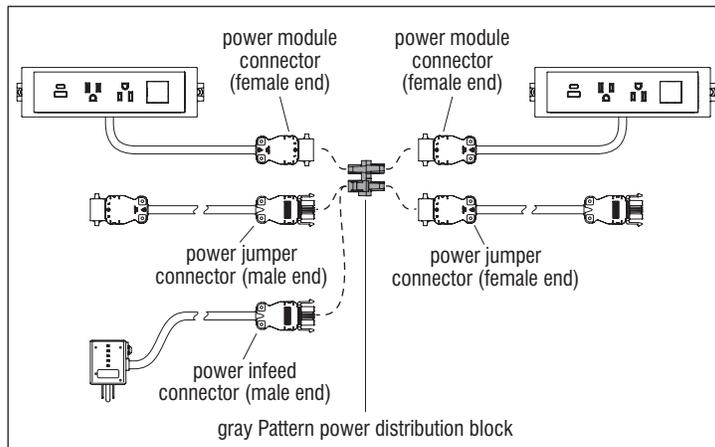

Detail K - Connection Locations with Grey Power Distribution Block

1. Start Pattern electrical system assembly with the Pattern power infeed. Plug the power infeed's male connector end into the gray power distribution block closest to the post leg that the power infeed cord will be routed down into the vertical wire manager (Figure 1 & Detail K).
2. Position the 12" Pattern power jumper in between the two grey distribution blocks. Plug the jumper's female connector end into one of the Pattern power distribution blocks and the power jumper's male connector end into the opposite distribution block (Figure 6).

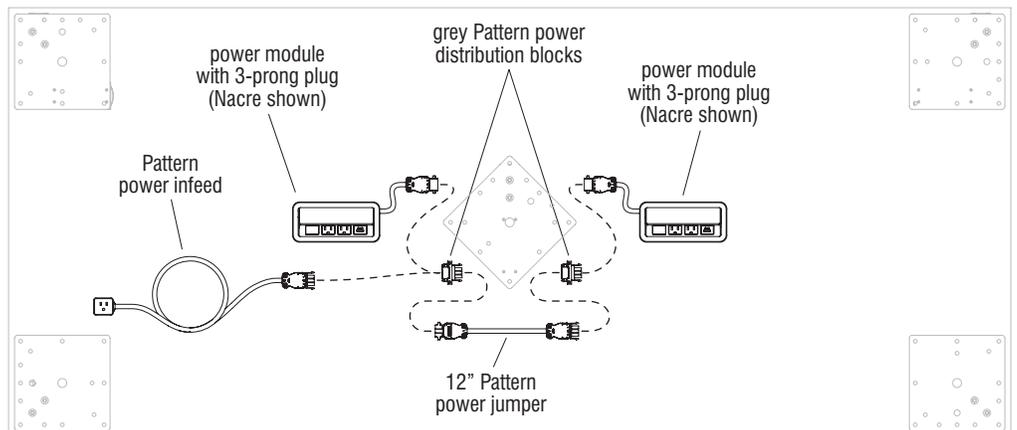


Figure 6 - (top view)



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

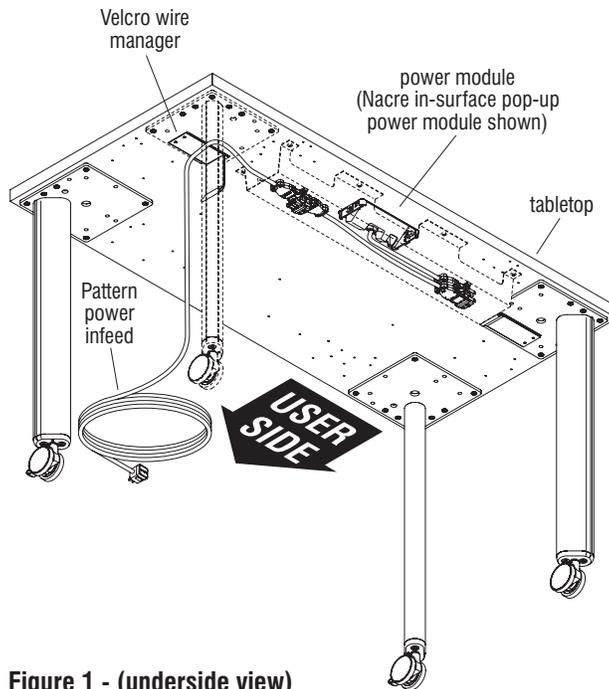


Figure 1 - (underside view)

Wire Management Overview

Note: Although the figures throughout the "Wire Management" instructions illustrate a Tributaire rectangular post-leg table, the instructions apply to all Tributaire post-leg tables. Your configuration may vary.

Note: If the Tributaire post-leg table being assembled requires wire management, reference the following sections below based on the wire manager your table requires: See steps below on this page to strap power module cords into previously installed Velcro wire managers, page 26 for vertical wire manager, or page 27 for strain relief clips.

Wire Management using Velcro® Wire Managers

1. Route the desired Pattern power infeed or power module cord to the desired Velcro manager and strap the cord in (Figure 1).
2. Proceed to "Vertical Wire Manager Installation" instructions on the next page.

■ Tributaire™ Collection - Post-Leg Tables - Wire Management

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Vertical Wire Manager Installation

1. Position the vertical wire manager in the desired location against the leg which is closest to a power source. Align the vertical wire manager centered, straight along the leg, and flush with the bottom of the leg. Then mark the location of the wire manager and move the unit away (Figure 2).
2. Remove the adhesive backing from the vertical wire manager to expose the adhesive surface. Position the wire manager back to the marked location, centered on the leg, and press firmly along the adhesive area (Figure 2).
3. Insert the power module cord into the wire manager (Figure 3).
4. Proceed to the following sections below in order based on your tables requirements: Proceed to page 27 for strain relief clip installation, page 28 for modesty panel installation, or page 30 for connections to power source.

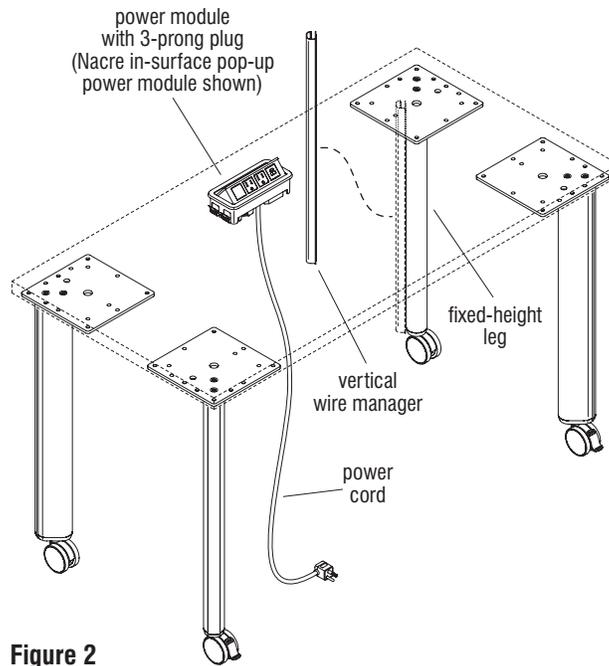


Figure 2


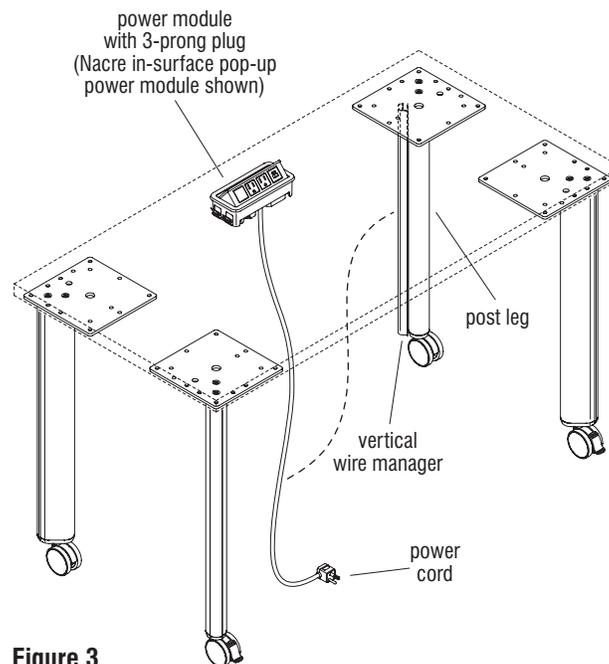


Figure 3



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

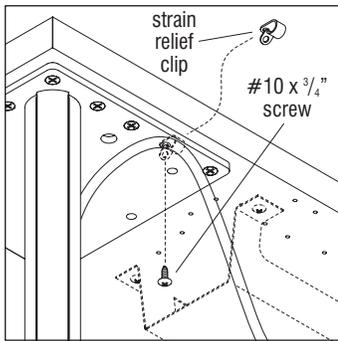

Detail A - (underside view)

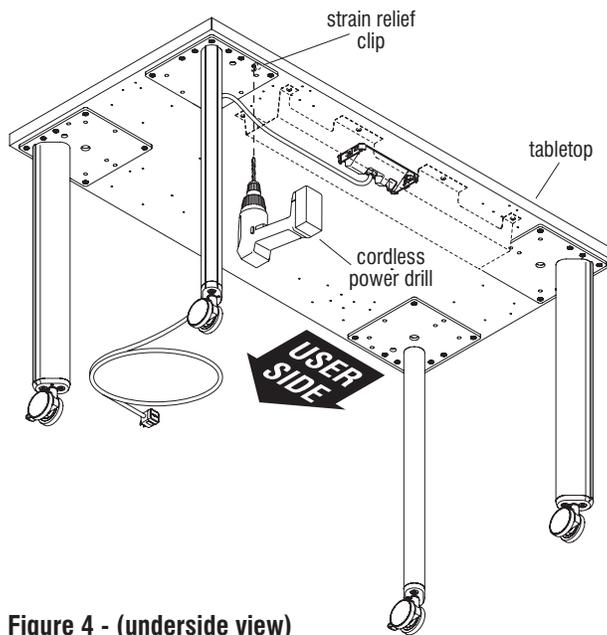


Figure 4 - (underside view)

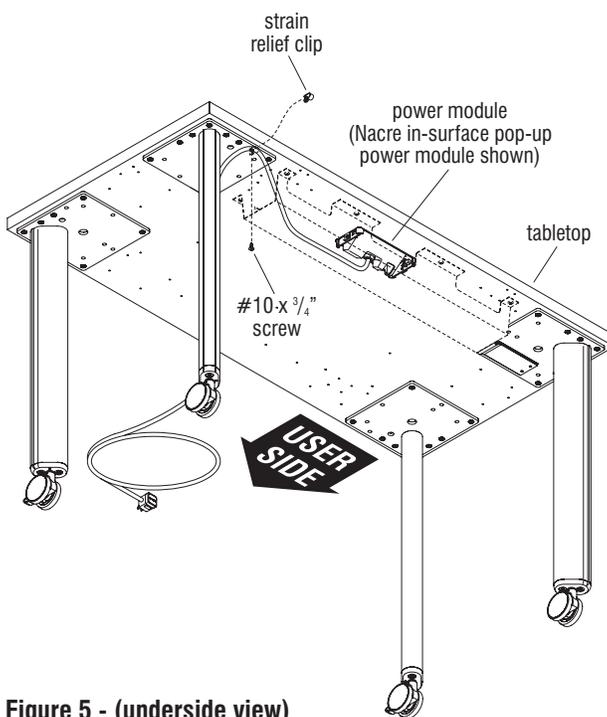


Figure 5 - (underside view)

Strain Relief Clip Installation

Important: Power cords and cables not routed within an enclosed wire trough may not hang down more than 6" from the underside of the tabletop. Strain relief clips must be installed as needed.

Note: The instructions below illustrate pre-drilling of mounting hole locations on post leg mounting plates for strain relief clip installation. Alternately, any un-used mounting holes at the underside of the tabletop may be used, if desired. Install strain relief clips anywhere a cord may hang down outside of a wire trough, to hold power module cables tight to the underside of the tabletop. Your configuration may vary.

1. Locate strain relief clip and position it at the desired locations. Using the clip as a template, mark the desired mounting hole locations, then move the clips away (Figure 4).
2. Carefully bore a $\frac{1}{8}$ " diameter pilot hole at the center of the marked hole, underneath the tabletop using a cordless power drill. Take care to not drill too deep, piercing the tabletop (Figure 4).
3. Insert the cable into the openings of the clips. Secure the clips to the tabletop using one $\#10 \times \frac{3}{4}$ " screw per clip (Figure 5 & Detail A).
4. Proceed to the following sections below in order based on your tables requirements: Proceed to page 28 for modesty panel installation, or page 30 for connections to power source.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Modesty Panels Overview

Note: Although the figures throughout the “Modesty Panel” instructions illustrate a Tributaire rectangular post-leg table, the instructions apply to all Tributaire rectangular post-leg tables. Your configuration may vary.

Polyester Felt Modesty Panel Installation

Note: The following instruction is for installing the polyester felt modesty panel to 30-72” wide Tributaire tables. Tables 30” to 48” wide require two hooks, and tables 54” or wider require three hooks. This instruction illustrates the modesty panel installation to 48” wide tables. Your configuration may vary.

1. Position one hook underneath the back, non-user side of the tabletop at the pre-drilled location as illustrated in Figure 1 & Detail A. Orient the hook to face the user side of the table. Align the mounting holes of the hook with the pre-drilled holes underneath the tabletop and secure using two #10 x 3/4” Phillips screws. Repeat this process to secure the remaining hooks to the table (Figure 1 & Detail A).
2. With the hooks secured to the underside of the tabletop, bend the hooks by hand to allow enough clearance for the modesty panel to fit between the back of the post legs and front of hooks (Details B & C).
3. Position the modesty panel underneath the back, non-user side of the tabletop, near the hooks. Using the slots on the panel, hang the panel onto each hook (Figure 2, Details B & C).
4. If the table being assembled contains a power module, proceed to “Connections to Power Source Overview” instructions on page 30, otherwise move the table to the final location of use.

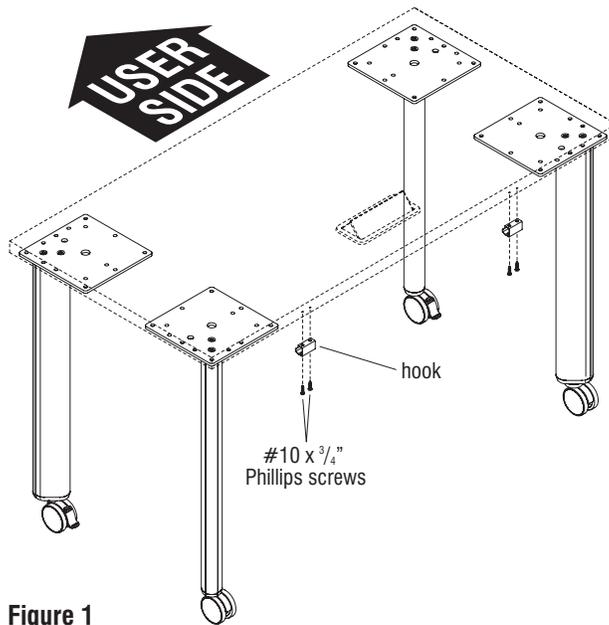


Figure 1



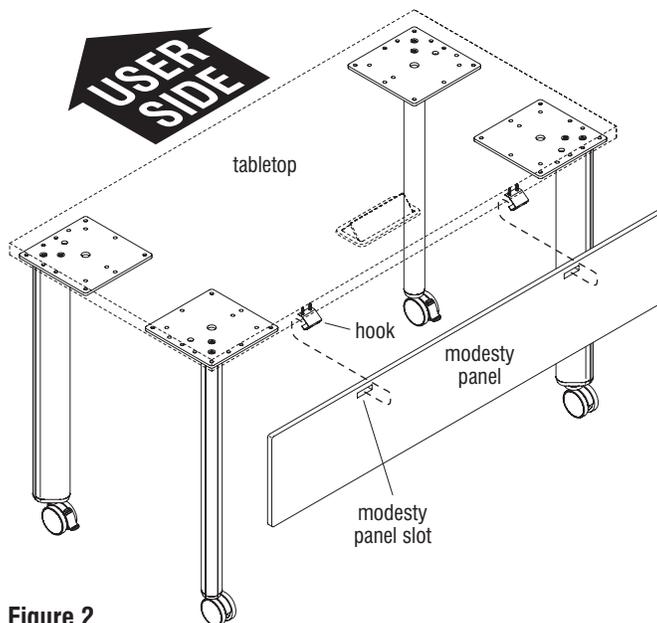



Figure 2

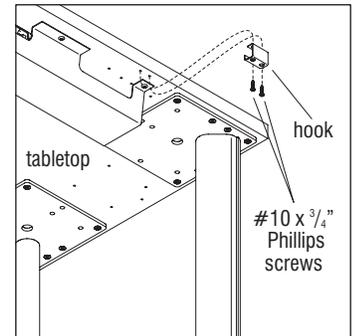


Detail A - (underside view)

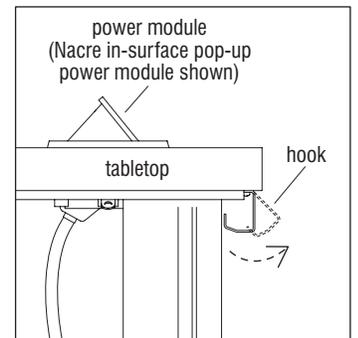

Detail B - (side view)

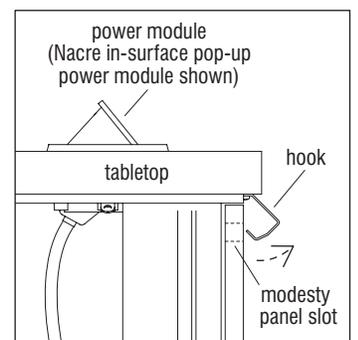


Detail C - (side view)

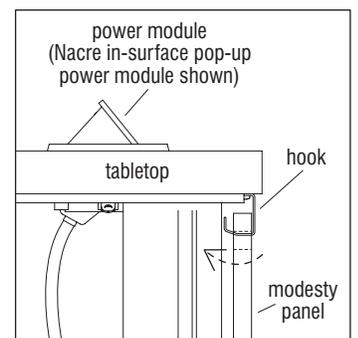

Detail D - (side view)



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

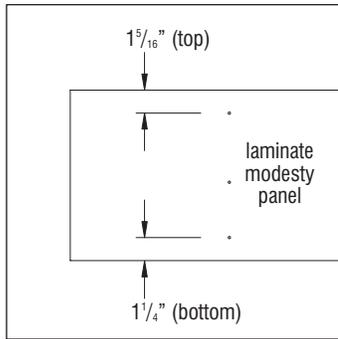

Detail E - (back view)

Laminate Modesty Panel Installation

Important: Tributaire post-leg tables 48" wide or less include one left- & right-hand modesty

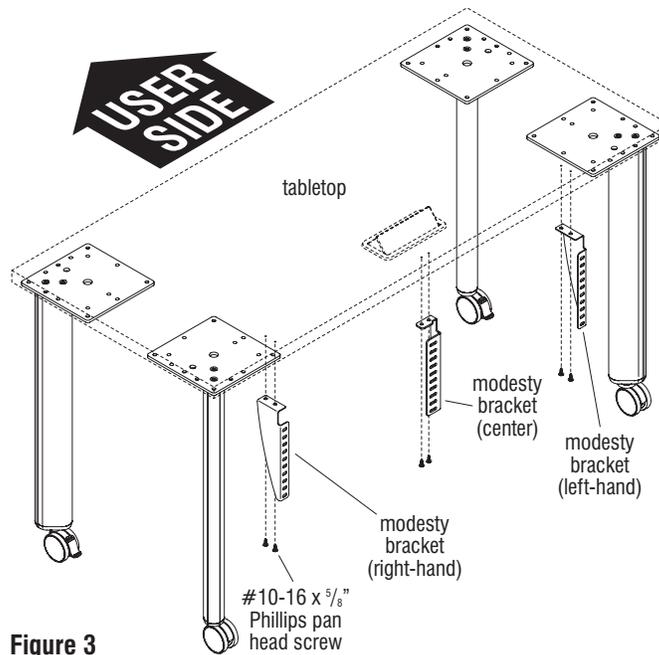


Figure 3

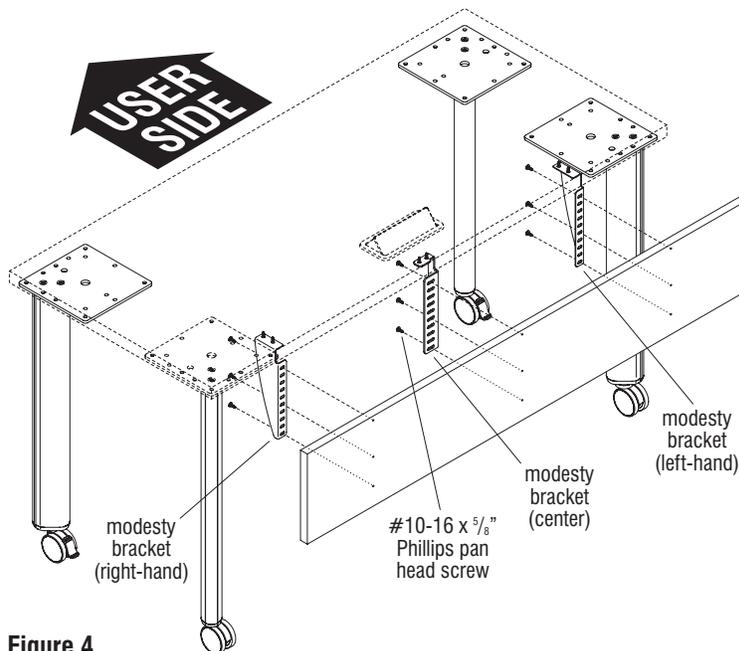


Figure 4

panel bracket. Tables 54" wide or more include one center, left- & right-hand modesty panel bracket. If brackets are not installed in the correct locations, the modesty panel mounting holes may not align to the brackets properly and disassembly and reassembly will be required.

1. One at a time, position one of the handed modesty panel brackets over the appropriate pre-drilled holes at the underside of the tabletop (Figure 3). Align the mounting on top of the bracket with the mounting holes on the underside of the tabletop and secure using two #10-16 x 5/8" Phillips pan head screws (Figure 3).

Caution: The assistance of a second person is required to install the laminate modesty panel to the modesty panel brackets.

Note: When positioning the laminate modesty panel up against the modesty panel brackets, the panel must be oriented correctly. The mounting hole closest to the tabletop should be 1 5/16" to the edge, not 1 1/4" to the edge of the modesty panel. If modesty panels are not installed in the correct orientation, an incorrect gap will be between the modesty panel and top and disassembly and reassembly will be required (Detail E).

2. With the assistance of a second person, carefully position the laminate modesty panel up to the modesty panel brackets in the correct orientation (Figure 4).
3. Secure the modesty panel to the modesty panel brackets using three #10 x 5/8" screws per bracket on the user side of the table (Figure 4).
4. If the table being assembled contains a power module, proceed to "Connections to Power Source Overview" instructions on page 30, otherwise move the table to the final location of use.

■ Tribulaire™ Collection - Post-Leg Tables - Connections to Power Source

Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

GROUNDING INSTRUCTIONS

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in Detail A. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.


Connections to Power Source Overview

Note: If the tables being assembled contain power modules with 3-prong plugs, proceed to page 31. If the tables being assembled use a Pattern electrical system, proceed to the instructions below.

Connections to Power Source - Pattern Electrical System

Warning: Never attach more than one power infeed to a chain of devices. Always check to be certain that the system is not already powered from another source before attaching an infeed.

1. Place tables at their final location and lock the two front, user side casters in place on each table (Figure 1).
2. Plug Pattern power infeed into a source power outlet. Plug an electrical device into a power module on the Pattern electrical system to verify power. If there is no power, verify that there are no more than ten power distribution blocks used on the system, and that the total length of the system and all interconnecting cables (exclusive of the power infeed unit) does not exceed 50 feet, or 600 inches.
3. Once the connection with source power has been identified and corrected, press the reset button on the 3-prong plug end of the Pattern power infeed.

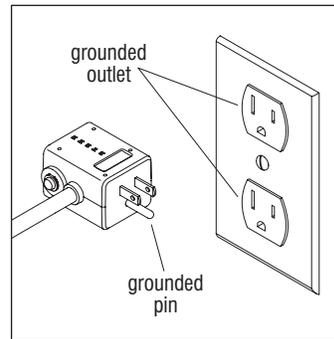

Detail A

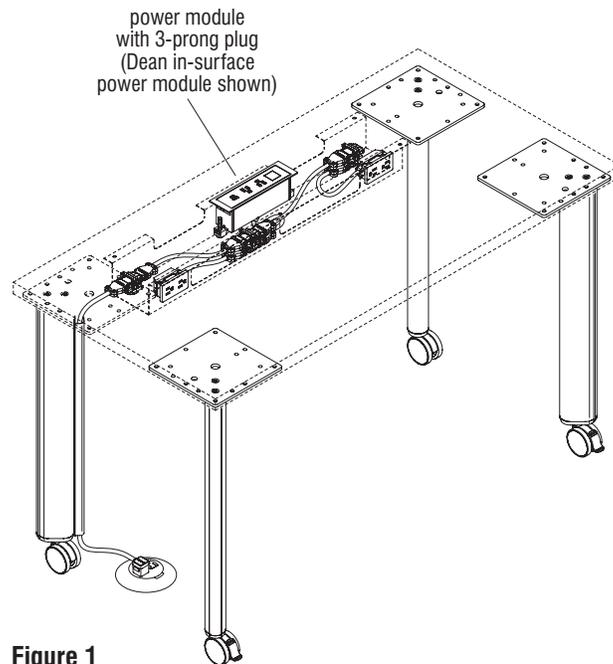



Figure 1

GROUNDING INSTRUCTIONS

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in Detail B. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

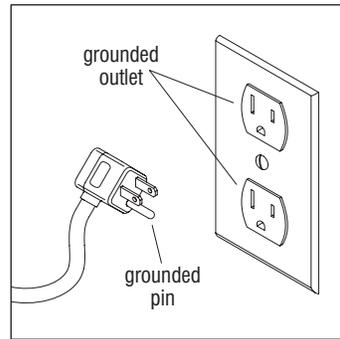

Detail B

Connections to Power Source - Power Modules with 3-Prong Plug

1. Place tables at their final location and lock the two front, user side casters in place on each table (Figure 2).
2. Plug the power module into an outlet only after all other components have been installed.

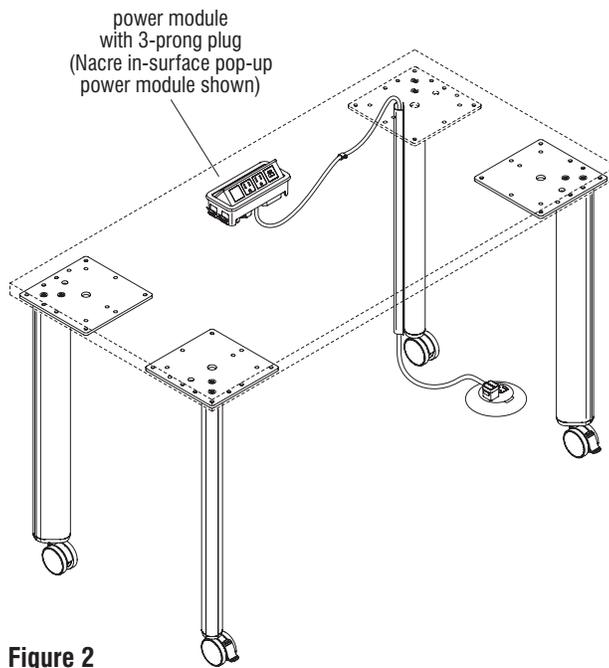


Figure 2



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Pattern Quick-Release Tool

Note: The Pattern quick-release tool is a simple tool, designed to help remove the power infeed, power jumper & power module connector ends from the Pattern power distribution blocks. If on initial installation, or if the Pattern electrical system needs to be reconfigured due to table rearrangements, reference the following sections below based on the connectors that need to be removed.

Female Connector End

1. Snap the Pattern quick-release tool over the female end of the power module or power jumper connector end attached to the Pattern power distribution block (Figure 1).
2. The two Pattern quick-release tool tabs will align with the tabs of the Pattern power distribution block prongs. Squeeze the two Pattern quick release tool tabs together to push the two Pattern power distribution block tabs together, then pull the connector end out of the distribution block. Remove the quick-release tool from the connector end (Figure 2 & Details A & B).

Male Connector End

1. Snap the Pattern quick-release tool over the male end of the power infeed or power jumper connector end attached to the Pattern power distribution block (Figure 3).
2. The two Pattern quick-release tool tabs will align at the bottom of the connector end prongs. Squeeze the two Pattern quick release tool tabs together to push the two Pattern power distribution block prongs together, then pull the connector end out of the distribution block. Remove the quick-release tool from the connector end (Figure 4 & Details C & D).

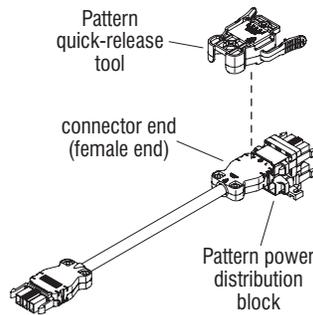


Figure 1

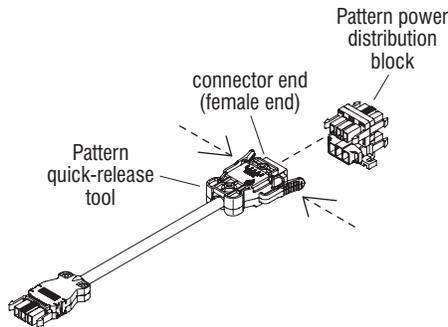


Figure 2

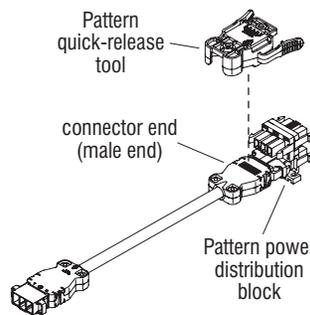


Figure 3



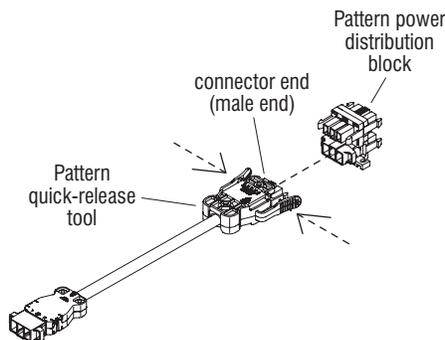



Figure 4

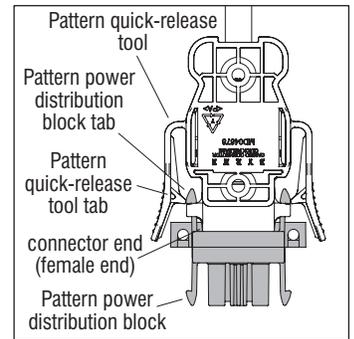


Detail A

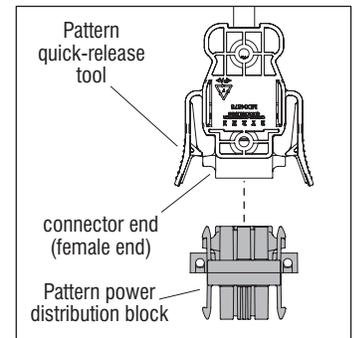

Detail B

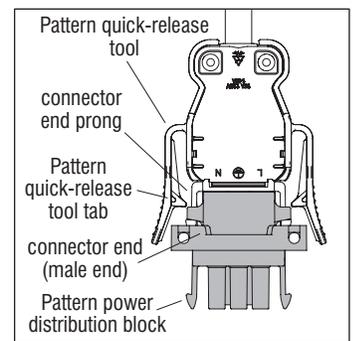

Detail C

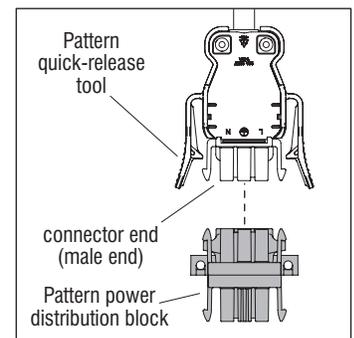

Detail D

■ **Tributaire™ Collection - Post-Leg Tables**
Assembly Instructions

KI
1330 Bellevue Street
Green Bay, Wisconsin 54302
1-800-424-2432
www.ki.com

KI is a registered trademark
of Krueger International, Inc.

© 2024 Krueger International, Inc.
All Rights Reserved
Code KI-AI-000131R1/KI/PDF/1024

